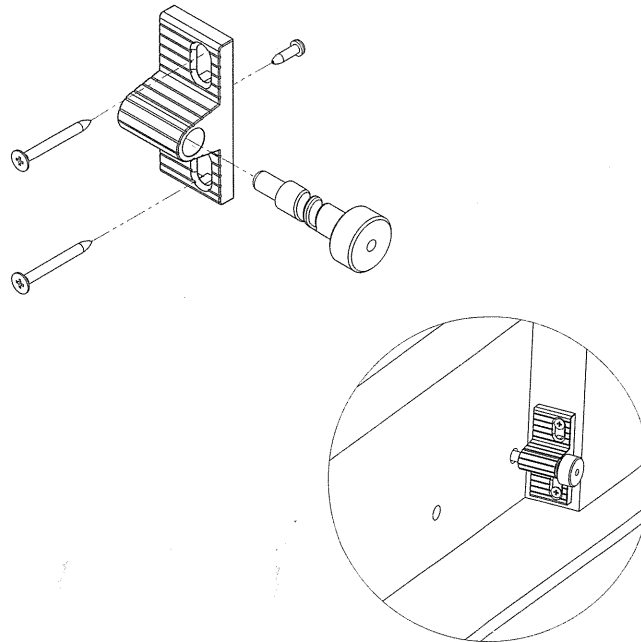


**INSTRUCTIONS**

1. Close sliding door.
2. Place lock with bolt in unlocked position at desired location at top or bottom of leading edge of sliding door, leaving a 1/16" clearance between bolt tip and frame.
3. Tap back of lock with hammer to mark bolt hole position.
4. Remove lock, drill 5/16" diameter hole for locking bolt. Be sure to clear the glass! For ventilation open door 4" and mark for 2nd bolt hole.
5. Replace lock. Using the base of the lock as a template, mark positions for screws.
6. Drill 1/8" diameter holes for screws.
7. Install screws and tighten.

**IMPORTANT:** Before installation, check with patio door manufacturer for door specifications. Failure to do so may result in glass breakage!

**1974****SATISFACTION GUARANTEED**

(See website for details <http://www.hickoryhardware.com/warranty>)

©Belwith Products  
3100 Broadway, SW • Grandville, MI 49418

Made to Belwith Products' specifications in China