

50 FT

LANDSCAPE EDGING

HEAVY-DUTY




INSTALLATION INSTRUCTIONS

Always use proper safety precautions when cutting and spiking edging. Protective eyewear and gloves are recommended during installation.



- 1** Dig a 4-inch trench along the edge of the installation area. Prior to unwinding, remove packaging and allow the coil to relax in the sun for better flexibility.

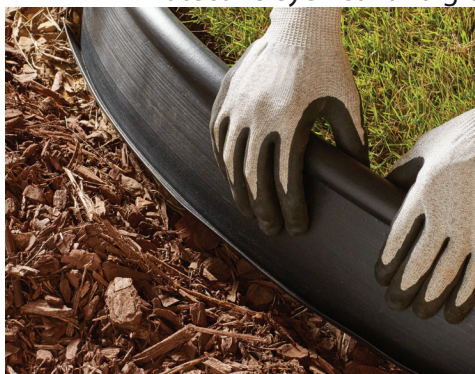

- 2** Place the edging into the trench, so that the bead on top sits at ground level. The lip can face either direction. Assure the straight side of the wall sits firmly against the dirt.



- 3** Hammer steel anchoring stakes at a 45° angle through the edging wall no more than 5 feet apart. Pack dirt into the lip and firmly against the edging wall. Backfill with desired ground cover.

USING THE CONNECTORS




CUT EDGING

Using a hacksaw or heavy shears, cut 3-inches of the top bead from one of the edging pieces, leaving a section of the edging (without the bead) extended beyond the beaded top.



INSERT CONNECTOR

Insert half of the knurled connector into the bead of each piece, joining both edging pieces by overlapping the wall sections. The cut ends of the edging pieces should fit snugly against each other.

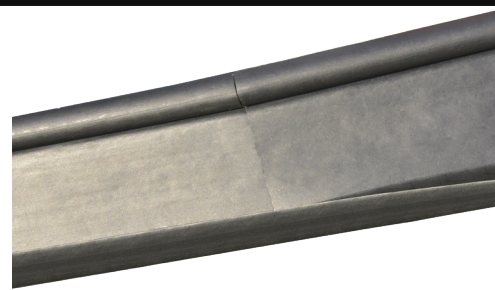

JOIN PIECES

Insert the connected edging into the ground. Drive an anchoring stake at a 45° angle through the overlapped sections into the ground. Continue to install edging according to directions above.