



		ALUMINUM CROSSOVERS									
	PRO	Ltd Edition Single	Low-Profile Single		000012110	Sino	le Lid				
	TFMO	Super Deep Fullsize	Fullsize	Fullsize	Deep Fullsize	73" Long	Super Deep Fullsize				
Aluminum Bright Finish Model # Aluminum Black Finish Model #	Steel White Finish Model # Steel Black Finish Model #	1701000	PAC1357000 PAC1357002	PAC1580000 PAC1580002	PAC1582000 PAC1582002	PAC1584000 PAC1584002	PAC1585000 PAC1585002				
Chevrolet & GMC Trucks											
1978-2011 Silverado/Sierra 1500	Regular Cab with Standad/Long Bed	•	•	•	•		•				
	Extended Cab with Short Bed	•	•	•	•		•				
2011 Silverado/Sierra 1500	Crew Cab with Short Bed	•	•	•	•		•				
2011 Silverado/Sierra 2500/3500		•	•	•	•		•				
2002-2011 Colorado/Canyon	Regular Cab with Regular/Extended Cab Bed										
2004 2011 Calarada/Canyon	Extended Cab with Regular/Extended Cab Bed Crew Cab with Crew Cab Bed										
2004-2011 Colorado/Canyon 2012-2013 Silverado/Sierra 1500	Regular Cab with Standard/Long Bed		•	•	•	•	•				
2012-2013 Silveraud/Sierra 1300	Extended Cab with Short Bed	•	•	•	•	•	•				
	Crew Cab with Short Bed	•	•	•	•	•	•				
2012-2013 Silverado/Sierra	Extended Cab with All Lengths Bed	•	•	•	•	•	•				
2500/3500	Regular/Crew Cab with All Lengths Bed	•	•	•	•	•	•				
Dodge Trucks	Degular Cab with Ctandard II and Dad										
2011 Ram 1500	Regular Cab with Standard/Long Bed Quad Cab with Standard Bed			•		•					
2011 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed		•	•	•	•	•				
2011 Dakota	Club Cab with Standard Bed										
	Quad Cab with Standard Bed										
2012-2013 Ram 1500	Regular Cab with Long Bed	•	•	•	•	•	•				
	Regular Cab with Standard Bed										
	Express Quad Cab with Standard/Long Bed										
2012-2013 Ram 2500/3500	Longhorn Crew Cab with Standard Bed Regular/Mega/Crew Cab with Standard Bed										
Ford Trucks	negular/wega/crew cab with Standard Bed										
2007-2011 Explorer	Sport-Trac Cab with Standard Bed										
2011 F-150	Styleside Cab with Short 5.5' Bed	•	•	•	•						
20111 100	Styleside Cab with Standard 6.75' / Long 8' Bed	•	•	•	•		•				
	Flareside Cab with Standard 6.5' Bed	•									
2011 F-250, F-350	Styleside Cab with Standard 6.75' / Long 8' Bed	•	•	•	•		•				
1987-2011 Ranger	Regular Cab with Standard/Long Bed										
2001-2011 Ranger	Super Cab with Standard/Long Bed		•								
2012-2013 F-150	Regular Cab with Short 5.5' Bed	•	•	•	•						
	Super Cab with Standard 6.5' Bed Super Crew Cab with Standard 6.5' Bed	•	•	•	•						
2012-2013 F-250, F-350	Regular/Crew Cab with Standard 6.75' / Long 8' Bed	•	•	•	•	•	•				
Isuzu Trucks											
2005-2009 i-370	Standard Bed										
1997-2009 i-290	Standard Bed										
Mazda Trucks					<i>'</i>	·					
1997-2009 B2300	Standard Cab with Standard Bed										
1997-2009 B4000	Cab Plus 4 with Standard Bed										
Mitsubishi Trucks											
2006-2009 Raider	Extended Cab with Standard Bed										
	Double Cab with Standard Bed										
Nissan Trucks											
2011 Titan	Crew Cab with Standard/Long Bed	•	•	•	•	•	•				
2005_2011 Frontier	King Cab with Standard/Long Bed Crew/King Cab with Standard/Long Bed	•	•	•	•	•					
2005-2011 Frontier 2012-2013 Titan	KC 4X2 Cab with Standard/Long Bed	•	•	•	•		•				
LOIL LOID HUM	Crew/King Cab with Standard/Long Bed										
2012-2013 Frontier	Crew/King Cab with Standard/Long Bed										
Toyota Trucks											
2007-2011 Tundra	Regular/Double Cab with Standard/Long Bed	•	•	•	•						
	CrewMax Cab with Standard Bed	•	•	•	•						
2012-2013 Tundra	Regular/CrewMax Cab with Standard Bed										
1000 2004 7	Double Cab with Standard Bed	•	•	•	•		•				
1989-2004 Tacoma	Regular Cab with Standard Bed Regular Cab with Standard Bed										
2005-2011 Tacoma	Access Cab with Standard Bed										
	Double Cab with Standard/Long Bed										
2012-2013 Tacoma	Regular Cab with Standard Bed										
	Access Cab with Standard Bed										
	Double Cab with Standard/Long Bed										



		ALU	IMINUM CRO	SSOVERS		STEEL CROSSOVERS							
	Single Lid Mid-Lid Dual Lid			Rear-Hinged Dual Lid		Single Lid Gull W							
	Compact Mid-Size		Fullsize	Compact	Fullsize	Fullsize	Deep Fullsize	Deep & Wide Fullsize	Compact	Fullsize	Deep Fullsize		
	PAC1587000 PAC1587002	PAC1589000 PAC1589002	PAC1596000 PAC1596002	PAC1597000 PAC1597002	PAC1598000	PSC1455000 PSC1455002	PSC1456000 PSC1456002	PSC1457000 PSC1457002	PSC1458000 PSC1458002	PSC1460000 PSC1460002	PSC1461000 PSC1461002		
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
	•	•	•	•	•	•	•	•	•	•	•		
	•	•		•					•				
	•			•					•				
			•		•	•	•			•	•		
			•		•	•	•			•	•		
			•		•	•	•			•	•		
			•		•	•	•	•		•	•		
			•		•	•				•			
			•		•	•		_		•			
	•	•	•	•	•	•	•	•	•	•	•		
	•	•		•					•				
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
	•		-	•	-	•			•				
	•			•				•					
			•		•	•	•			•	•		
			•		•	•	•			•	•		
			•		•	•	•			•	•		
	•	•		•					•				
	•	•		•					•				
	•			•					•				
	•	•		•					•				
	•	•		•					•				
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
	•	•			•				•	_			
			•		•	•	•			•	•		
			•		•	•	•	•		•	•		
			•		•	•	•	•		•	•		
			•		•	•	•			•	•		
	•	•		•					•				
	•	•		•					•				
	•	•		•					•				
	•	•		•					•				
	•	•		•					•				
-	•	•		•					•				



Del Ti		ALUMINUM CROSSOVERS							
CHAMPION		E II.	Single Lid	E He're Lee Breffle	Mid-Lid				
Aluminum Bright Finish Model #	Steel White Finish Model #	Fullsize 1-232000	Compact 1-235000	Fullsize Low Profile 1-351000	Fullsize 1-238000				
	Steel Black Finish Model #	1-232002	1 200000	1-351002	1-238002				
Chevrolet & GMC Trucks									
1978-2011 Silverado/Sierra 1500	Regular Cab with Standad/Long Bed Extended Cab with Short Bed	•		•	•				
2011 Silverado/Sierra 1500	Crew Cab with Short Bed	•		•	•				
2011 Silverado/Sierra 2500/3500	All Cabs with All Lengths Beds	•		•	•				
2002-2011 Colorado/Canyon	Regular Cab with Regular/Extended Cab Bed		•						
2004-2011 Colorado/Canyon	Extended Cab with Regular/Extended Cab Bed Crew Cab with Crew Cab Bed		•						
2012-2013 Silverado/Sierra 1500	Regular Cab with Standard/Long Bed	•		•	•				
	Extended Cab with Short Bed	•		•	•				
2012-2013 Silverado/Sierra	Crew Cab with Short Bed Extended Cab with All Lengths Bed	•		•	•				
2500/3500	Regular/Crew Cab with All Lengths Bed	•		•	•				
Dodge Trucks									
2011 Ram 1500	Regular Cab with Standard/Long Bed	•			•				
2011 Ram 2500/3500	Quad Cab with Standard Bed Regular/Mega/Crew Cab with Standard Bed	•			•				
2011 Dakota	Club Cab with Standard Bed		•						
	Quad Cab with Standard Bed		•						
2012-2013 Ram 1500	Regular Cab with Long Bed Regular Cab with Standard Bed	•		•	•				
	Express Quad Cab with Standard/Long Bed								
	Longhorn Crew Cab with Standard Bed								
2012-2013 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed								
Ford Trucks	Coast Tree Cab with Standard Dad								
2007-2011 Explorer 2011 F-150	Sport-Trac Cab with Standard Bed Styleside Cab with Short 5.5' Bed	•		•	•				
20111 100	Styleside Cab with Standard 6.75' / Long 8' Bed	•		•	•				
	Flareside Cab with Standard 6.5' Bed	•		•					
2011 F-250, F-350 1987-2011 Ranger	Styleside Cab with Standard 6.75' / Long 8' Bed Regular Cab with Standard/Long Bed	•	•	•	•				
2001-2011 Ranger	Super Cab with Standard/Long Bed		•						
2012-2013 F-150	Regular Cab with Short 5.5' Bed	•		•	•				
	Super Cab with Standard 6.5' Bed Super Crew Cab with Standard 6.5' Bed	•		•	•				
2012-2013 F-250, F-350	Regular/Crew Cab with Standard 6.75' / Long 8' Bed	•		•	•				
Isuzu Trucks									
2005-2009 i-370	Standard Bed		•						
1997-2009 i-290	Standard Bed		•						
Mazda Trucks 1997-2009 B2300	Standard Cab with Standard Bed		•						
1997-2009 B4000	Cab Plus 4 with Standard Bed								
Mitsubishi Trucks									
2006-2009 Raider	Extended Cab with Standard Bed		•						
Nissan Trucks	Double Cab with Standard Bed		•						
2011 Titan	Crew Cab with Standard/Long Bed	•		•	•				
	King Cab with Standard/Long Bed	•		•	•				
2005-2011 Frontier	Crew/King Cab with Standard/Long Bed	_	•	_					
2012-2013 Titan	KC 4X2 Cab with Standard/Long Bed Crew/King Cab with Standard/Long Bed	•		•	•				
2012-2013 Frontier	Crew/King Cab with Standard/Long Bed								
Toyota Trucks									
2007-2011 Tundra	Regular/Double Cab with Standard/Long Bed	•		•	•				
2012-2013 Tundra	CrewMax Cab with Standard Bed Regular/CrewMax Cab with Standard Bed	,		•	•				
	Double Cab with Standard Bed	•		•	•				
1989-2004 Tacoma	Regular Cab with Standard Bed		•						
2005-2011 Tacoma	Regular Cab with Standard Bed Access Cab with Standard Bed		•						
	Double Cab with Standard/Long Bed		•						
2012-2013 Tacoma	Regular Cab with Standard Bed		•						
	Access Cab with Standard Bed		•						
	Double Cab with Standard/Long Bed		•						



				ALUMINU	STRUCTURAL FOAM CROSSOVERS				
	\(\)	Fullsize	le Lid Compact	Slimline Fullsize	Single Lid Compact	Fullsize	d-Lid Compact	Fullsize	Compact
Aluminum Bright Finish Model #	Structural Foam Model #	942000	943000	296000	297000	940000	941000	203000D	204000D
Chevrolet & GMC Trucks									
1978-2011 Silverado/Sierra 1500	Regular Cab with Standad/Long Bed	•		•		•		•	
	Extended Cab with Short Bed	•		•		•		•	
2011 Silverado/Sierra 1500	Crew Cab with Short Bed	•		•		•		•	
2011 Silverado/Sierra 2500/3500	All Cabs with All Lengths Beds	•		•		•		•	
2002-2011 Colorado/Canyon	Regular Cab with Regular/Extended Cab Bed		•		•		•		•
2004 2014 2 1 1 /2	Extended Cab with Regular/Extended Cab Bed		•		•		•		•
2004-2011 Colorado/Canyon	Crew Cab with Crew Cab Bed		•	•	•		•		
2012-2013 Silverado/Sierra 1500	Regular Cab with Standard/Long Bed Extended Cab with Short Bed	•		•		•		•	
	Crew Cab with Short Bed	•		•		•		•	
2012-2013 Silverado/Sierra	Extended Cab with All Lengths Bed	•		•		•			
2500/3500	Regular/Crew Cab with All Lengths Bed	•		•		•		•	
Dodge Trucks	· ·								
2011 Ram 1500	Regular Cab with Standard/Long Bed	•		•		•		•	
	Quad Cab with Standard Bed	•		•		•		•	
2011 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed	•		•		•			
2011 Dakota	Club Cab with Standard Bed		•		•		•		
	Quad Cab with Standard Bed		•		•		•		
2012-2013 Ram 1500	Regular Cab with Long Bed	•		•		•			
	Regular Cab with Standard Bed								
	Express Quad Cab with Standard/Long Bed								
0040 0040 B 0500/2500	Longhorn Crew Cab with Standard Bed								
2012-2013 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed								
Ford Trucks	Sport-Trac Cab with Standard Bed								
2007-2011 Explorer 2011 F-150	Styleside Cab with Short 5.5' Bed			•		•			
2011 1-130	Styleside Cab with Standard 6.75' / Long 8' Bed	•		•		•		•	
	Flareside Cab with Standard 6.5' Bed							•	
2011 F-250, F-350	Styleside Cab with Standard 6.75' / Long 8' Bed	•		•		•		•	
1987-2011 Ranger	Regular Cab with Standard/Long Bed		•		•		•		•
2001-2011 Ranger	Super Cab with Standard/Long Bed		•		•		•		•
2012-2013 F-150	Regular Cab with Short 5.5' Bed	•		•		•		•	
	Super Cab with Standard 6.5' Bed	•		•		•		•	
	Super Crew Cab with Standard 6.5' Bed								
2012-2013 F-250, F-350	Regular/Crew Cab with Standard 6.75' / Long 8' Bed	•		•		•		•	
Isuzu Trucks	Chandand Dad								
2005-2009 i-370 1997-2009 i-290	Standard Bed Standard Bed		•		•		•		
Mazda Trucks	Standard Ded		·		·				
1997-2009 B2300	Standard Cab with Standard Bed				•				
1997-2009 B4000	Cab Plus 4 with Standard Bed				•	-	-		
Mitsubishi Trucks									
2006-2009 Raider	Extended Cab with Standard Bed		•		•		•		
	Double Cab with Standard Bed		•		•		•		
Nissan Trucks									
2011 Titan	Crew Cab with Standard/Long Bed	•		•		•		•	
	King Cab with Standard/Long Bed	•		•		•		•	
2005-2011 Frontier	Crew/King Cab with Standard/Long Bed		•		•				•
2012-2013 Titan	KC 4X2 Cab with Standard/Long Bed							•	
0040 0040 5	Crew/King Cab with Standard/Long Bed					-			
2012-2013 Frontier	Crew/King Cab with Standard/Long Bed								
Toyota Trucks	Popular/Daubla Cab with Charlet day 11 and Dad								
2007-2011 Tundra	Regular/Double Cab with Standard/Long Bed CrewMax Cab with Standard Bed	•		•		•		•	
2012-2013 Tundra	Regular/CrewMax Cab with Standard Bed	<u> </u>		•		-		-	
2012-2013 Tullula	Double Cab with Standard Bed	•		•		•		•	
1989-2004 Tacoma	Regular Cab with Standard Bed		•		•		•		
2005-2011 Tacoma	Regular Cab with Standard Bed		•		•	1	•		
	Access Cab with Standard Bed		•		•		•		
	Double Cab with Standard/Long Bed		•		•		•		
2012-2013 Tacoma	Regular Cab with Standard Bed		•		•		•		
	Access Cab with Standard Bed		•		•		•		
	Double Cab with Standard/Long Bed		•		•		•		



	ALUMINUM CROSSOVERS									
		Low-Profile Single Single Lid			Slimline Single Lid Single Lid					
	•	Fullsize	Fullsize	Mid-Size	Fullsize	Fullsize	Deep Fullsize			
Aluminum Bright Finish Model # Aluminum Black Finish Model #		1-302000 1-302002	1-309000 1-309002	1-310000 1-310002	1-311000 1-311002	1-300000 1-300002	1-301000 1-301002			
Chevrolet & GMC Trucks	Steel Diack i illisii Muudi #	1-302002	1-303002	1-310002	1-311002	1-300002	1-301002			
1978-2011 Silverado/Sierra 1500	Regular Cab with Standad/Long Bed	•	•		•	•	•			
	Extended Cab with Short Bed	•	•		•	•	•			
2011 Silverado/Sierra 1500	Crew Cab with Short Bed	•	•		•	•	•			
2011 Silverado/Sierra 2500/3500	All Cabs with All Lengths Beds	•	•		•	•	•			
2002-2011 Colorado/Canyon	Regular Cab with Regular/Extended Cab Bed			•						
2004-2011 Colorado/Canyon	Extended Cab with Regular/Extended Cab Bed Crew Cab with Crew Cab Bed			•	•		1			
2012-2013 Silverado/Sierra 1500	Regular Cab with Standard/Long Bed	•	•		•	•	•			
	Extended Cab with Short Bed	•	•		•	•	•			
	Crew Cab with Short Bed	•	•		•	•	•			
2012-2013 Silverado/Sierra 2500/3500	Extended Cab with All Lengths Bed	•	•			•	•			
	Regular/Crew Cab with All Lengths Bed	•	•			•	•			
Dodge Trucks 2011 Ram 1500	Regular Cab with Standard/Long Bed	•			•	•	•			
2011 Naiii 1300	Quad Cab with Standard Bed	•			•	•	•			
2011 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed		•		•					
2011 Dakota	Club Cab with Standard Bed			•						
	Quad Cab with Standard Bed			•						
2012-2013 Ram 1500	Regular Cab with Long Bed	•	•		•	•	•			
	Regular Cab with Standard Bed Express Quad Cab with Standard/Long Bed									
	Longhorn Crew Cab with Standard Bed									
2012-2013 Ram 2500/3500	Regular/Mega/Crew Cab with Standard Bed									
Ford Trucks							`			
2007-2011 Explorer	Sport-Trac Cab with Standard Bed									
2011 F-150	Styleside Cab with Short 5.5' Bed	•	•		•	•	•			
	Styleside Cab with Standard 6.75' / Long 8' Bed	•	•		•	•	•			
2011 F 250 F 250	Flareside Cab with Standard 6.5' Bed Styleside Cab with Standard 6.75' / Long 8' Bed	•	•		•	•	•			
2011 F-250, F-350 1987-2011 Ranger	Regular Cab with Standard 6.75 / Long 8 Bed	•	•		•	•	•			
2001-2011 Ranger	Super Cab with Standard/Long Bed									
2012-2013 F-150	Regular Cab with Short 5.5' Bed	•	•		•	•	•			
	Super Cab with Standard 6.5' Bed	•	•		•	•	•			
	Super Crew Cab with Standard 6.5' Bed									
2012-2013 F-250, F-350	Regular/Crew Cab with Standard 6.75' / Long 8' Bed	•	•		•	•	•			
Isuzu Trucks 2005-2009 i-370	Standard Bed									
2005-2009 i-370 1997-2009 i-290	Standard Bed Standard Bed			•						
Mazda Trucks										
1997-2009 B2300	Standard Cab with Standard Bed									
1997-2009 B4000	Cab Plus 4 with Standard Bed									
Mitsubishi Trucks										
2006-2009 Raider	Extended Cab with Standard Bed									
	Double Cab with Standard Bed									
Nissan Trucks										
2011 Titan	Crew Cab with Standard/Long Bed	•	•		•	•	•			
2005-2011 Frontier	King Cab with Standard/Long Bed Crew/King Cab with Standard/Long Bed	•	•	•	•	•	•			
2012-2013 Titan	KC 4X2 Cab with Standard/Long Bed	•		-	•	•	•			
	Crew/King Cab with Standard/Long Bed									
2012-2013 Frontier	Crew/King Cab with Standard/Long Bed									
Toyota Trucks										
2007-2011 Tundra	Regular/Double Cab with Standard/Long Bed	•	•		•	•	•			
2012 2012 Tundre	CrewMax Cab with Standard Bed Regular/CrewMax Cab with Standard Bed	•	•		•	•	•			
2012-2013 Tundra	Double Cab with Standard Bed	•	•		•	•	•			
1989-2004 Tacoma	Regular Cab with Standard Bed	-	-	•	-	-	-			
2005-2011 Tacoma	Regular Cab with Standard Bed			•						
	Access Cab with Standard Bed			•						
	Double Cab with Standard/Long Bed			•						
2012-2013 Tacoma	Regular Cab with Standard Bed			•						
	Access Cab with Standard Bed Double Cab with Standard/Long Bed			•						
	I DOUDIE CAD WITH STATIONAL VECTOR DEC						1			



ALUMINUM CROSSOVERS					STEEL CROSSOVERS							
	Single Lid			Single			Mid-Lid	Dual Lid				
Fullsize	Mid-Size	Fullsize	Fullsize	Mid-Size	Fullsize	Deep Fullsize	Compact	Mid-Size	Fullsize	Compact		
1-303000 1-303002	1-304000 1-304002	1-308000 1-308002	1-306000 1-306002	1-307000 1-307002	904000	922000	905000	906000	901000	902000		
·												
•		•	•		•	•			•			
•		•	•		•	•			•			
		•	•		•	•			•			
•	•	•	•	•	-	•	•	•	<u> </u>	•		
	•			•			•	•		•		
	•						•	-		•		
•		•	•		•	•			•	_		
•		•	•		•	•	<u> </u>		•			
•		•	•		•	•			•			
•		•	•		•	•			•			
•		•	•		•	•			•			
•			•		•				•			
•			•		•				•			
•		•			•	•		<u> </u>	•			
	•			•			•	•	-			
	•			•			•	•	_			
•		•	•		•	•			•			
•		•	•		•	•			•			
•		•	•		•	•			•			
			•									
•		•	•		•	•			•			
							•			•		
							•			•		
•		•	•		•	•			•			
•		•	•		•	•			•			
•		•	•		•	•			•			
	•			•			•	•				
	•			•			•	•				
							•			•		
							•	•				
							•	•				
•		•	•		•	•			•			
•		•	•		•	•			•			
	•			•			•			•		
			•		•	•			•			
•		•	•		•	•			•			
•		•	•		•	•			•			
•		•	•		•	•			•			
	•			•			•	•		•		
	•			•			•	•		•		
	•			•			•	•		•		
	•			•			•	•		•		
	•			•			•	•		•		
				•	1		•	•				
	•			•		-	•	•		•		



How-To Measure Your Truck

The following instructions generally work well when measuring a full-size truck. Mid-size and Compact trucks have a variety of truck bed configurations which increase the difficulty in measuring the truck and comparing it to the dimensions of a specific truck box. In nearly all instances, the Fitment Guide (pages 54 through 59) will provide accurate information unless the truck is a new model introduced after August, 2013.

THE TRUCK BED NEEDS TO BE MEASURED FOR TWO REASONS:

A. To Determine that the Truck Box will be long enough to be properly mounted on the truck bed rails.

B. To Determine whether or not the truck wheel wells will interfere and prevent proper mounting of the truck box.

A: DETERMINING THAT THE TRUCK BOX IS LONG ENOUGH TO BE PROPERLY MOUNTED:

MEASUREMENT 1: Width between the top of the bed sidewalls....Dimension "A" of the crossover Truckbox needs to be at least 3" greater.

B. DETERMINING WHETHER OR NOT THE TRUCK BOX WILL CLEAR THE WHEEL WELLS IN THE TRUCK....NEED TO FIND POINT "X" IN THE TRUCK BED:

Preparing to take Measurements 2 & 3 to find a point "X" in the truck bed to ensure that the truck box will fit your truck:

- The depth of the truck box may restrict its fit in the truck because the wheel well might be in the way.
- Except for "Extra-Wide" truck boxes, most truck boxes will require 20 V4" of horizontal space from the cab bed rail to the point where the Truck Box might hit the wheel well or the truck bed liner.


MEASUREMENT 2: A "Standard" Truck box will usually have a 9" V ertical depth below the top of the truck bed rail. A "Deep" model will usually be 12" below the top of the bed rail.

Determine how deep a truck box you need and measure down from the top of the rail and create an imaginary,
 HORIZONTAL line at the depth of the truck box you need...usually 9" or 12" below the top of the truck bed rail. This is called Dimension "C" on the truck box.

MEASUREMENT 3: Find Point "X" which is on the horizontal "Imaginary Line" below the truck rail (from "2" above). On the horizontal "Imaginary Line"....Measure to find a point 20 V4" away from the front truck bed rail (This measurement is from the Cab Truck Bed Rail Towards the Tailgate). The 20 V4" is roughly Dimension "E" on the truck box and represents how much space the truck box will take in the bed behind the truck cab. After finding Point "X" in your Truck Bed....will the truck box fit?: Again, Point "X" is 20 V4" away from the front truck cab rail on the Imaginary Horizontal Line (from measurement 2) If point "X" does not hit the wheel well, the truck box will fit. If point "X" hits the Wheel Well, you must make another measurement:

- Mark Point "X" on both wheel wells or the wheel well bed liner
- Measure the distance between the two point "X"s on the truck bed. This dimension must be greater than Dimension "B" on the Truckbox
- If Dimension "B" on the truck box is GREATER than the distance between both point "X"s, the truck box will hit the wheel well or bed liner and you will usually need to select another truck box or mount the truck box with a spacer above the bed rail.



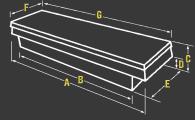



www.deltastorage.com

Apex Tool Group, LLC 14600 York Road, Suite A Sparks, MD 21152 www.apextoolgroup.com

Customer Service: Phone: 800.643.0084 Fax: 877.356.4081 Printed in U.S.A. #T550881 8/1/2013 Distributed by: