



Tension Rod Installation Instructions-A

Helpful Hints—Spring Mount (Rods 24"-42" and 42"-72")
Read carefully before starting





Installation for 24"-42"

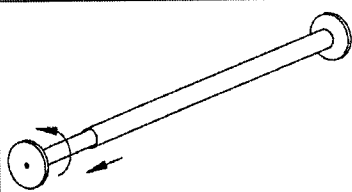

1. Rotate rod counter clockwise, so its length is a 1/2" to 1" longer than the opening.

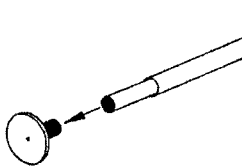


2. Unscrew and caps, slide curtain or ring onto rod.

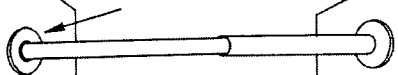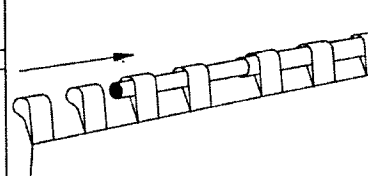
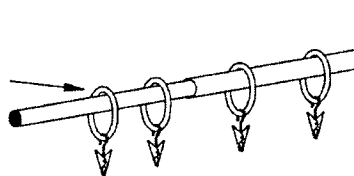


3. Position one end of the rod on the mounting surface and compress the other end to put it in position.


Installation for 42"-72"

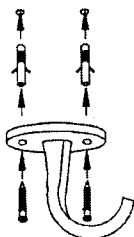

1. Install support hook in center of window..

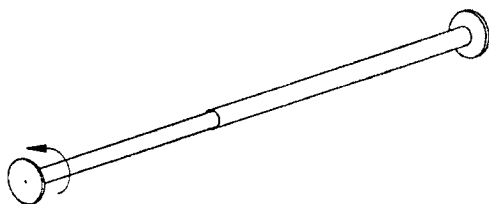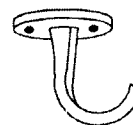

2. Rotate rod clockwise so that it is 1 inch shorter than opening.

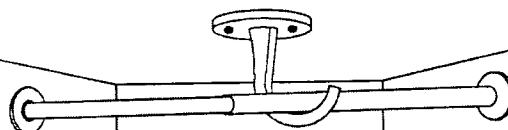

3. Follow instructions step 2 for 24"-42" rods. Slide rod into support hook and extend rod until the fit is secure.