



# TIMBERCHIC

WALLS WITH ATTITUDE.

## Included in box:

- 40 Pre-cut 12" Planks
- Triangle
- Knot hole stickers
- Extra 3M strip of tape

## What you will need:

- Level
- Tape measure
- Utility knife
- Pencil
- Chop saw, miter box or skill saw.

When installing Timberchic make sure your wall is a dry, clean, dust free painted surface.


Have any questions?

Email us:

[sales@timberchic.com](mailto:sales@timberchic.com)

## Let's get started!

- 1) Draw two level lines in the center of your wall; one horizontal and one vertical using your level.
- 2) Hold the longest triangle edge on the horizontal line with the top point centered on the vertical line.
- 3) Align your first plank with left side of triangle making sure the top is even with right side of triangle. (ex. A)
- 4) Align second plank on right side of triangle. (ex. B)
- 5) Follow the pattern alternating right to left. (ex. C & D)
- 6) When making your end cuts, the pieces may be small requiring you to use 3M tape provided to secure if needed.
- 7) Don't forget to hide the open knots with the stickers provided. Place the sticker on the surface behind the open knot.

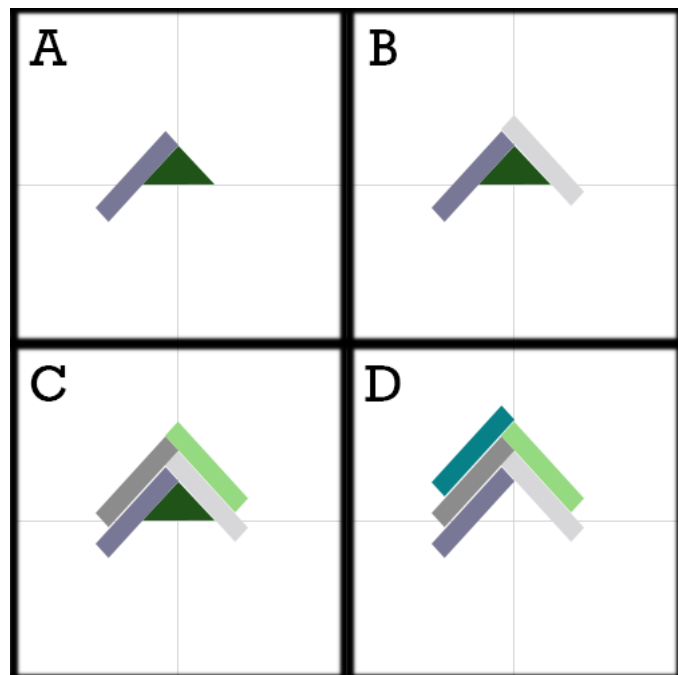

**Remember have fun!**

