



## POLYURETHANE CORBELS INSTALLATION

---

### TOOLS:

- Pencil
- Safety goggles
- Hammer or finishing nailer
- Caulking gun
- Paint brush
- Putty knife

### MATERIALS:

- 6d or 8d finishing nails (bright finish or lector-galvanized)
- Polyurethane Corbels
- Premium Polyurethane construction adhesive
- Painters Caulk
- Clean cloth or sponge
- High quality Acrylic latex or Oil based paint
- 220 grit sandpaper

### SAFETY

Wear safety goggles when installing and finishing Polyurethane Corbels.

### WALL AND CEILING PREPARATION

Prior to installing Corbels make sure walls and ceilings are

- dust free
- dry
- grease free

If needed, lightly sand and wipe surface with a damp cloth.


### PAINTING

Corbels can be painted either before installation or after. It is up to the installer.

Use a high quality **Acrylic Latex or Oil based paint**. Corbels are factory pre-primed and ready to paint or faux finish.

## INSTALLATION

Polyurethane Corbels can be glued, nailed or both.

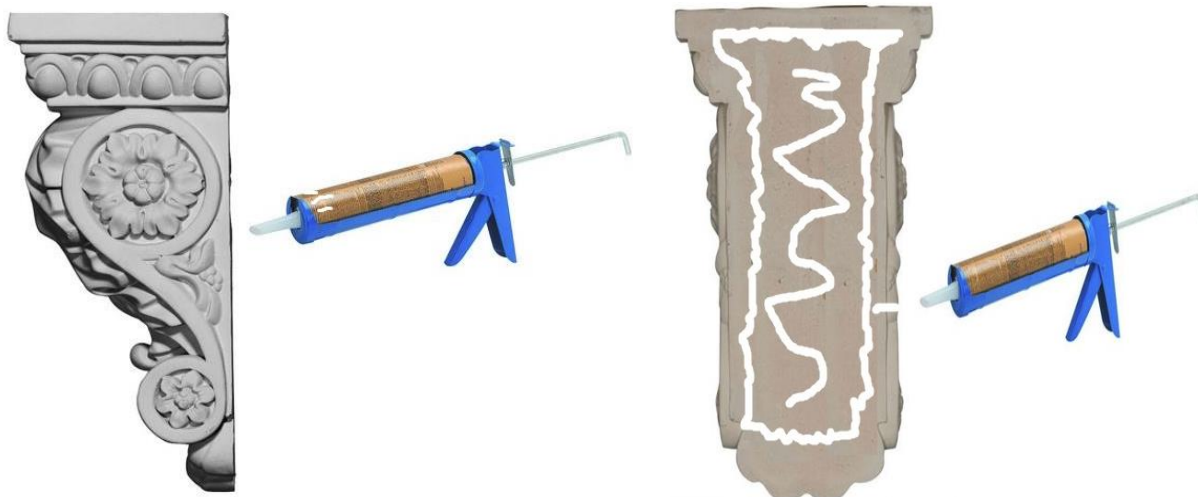

- Apply a continuous ¼” bead of premium polyurethane construction adhesive along the back edges of the corbel. Wipe away any excess glue immediately before it can harden. Then once glue is dried, repeat if necessary with adhesive or filler.
- Hold down Corbel into place. Make sure it is tight against both the ceiling and the wall. By having both edges tight against the ceiling and the wall will provide consistency and a correct angle.
- Finishing nails may be used for added support. Finisher nailer will speed up the process of installation. If used, fill in any nail holes with caulk and smooth the surface with a finger. Once dried, you can sand it with the extra fine sandpaper.
- Keep in mind that our Polyurethane Corbels function as a **Decorative** element only, they are **Not designed to support load bearing capacity**.
- If walls or ceilings are irregular, fill any small gaps with painters caulk.
- When applying painters caulk to fill in small gaps or holes from finishing nails, use a putty knife. To clean excess caulk, use a sponge or clean cloth. After dried, if needed, use a 220 grit sandpaper to make the surface smooth. This will allow you to touch-up or paint.

American Pro Décor assumes no liability for Improper Installation.