

## **Undermount Drawer Slide Installation**


 Please install the drawer and slide well, and keep the slide full extension outside the drawer.

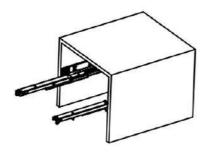


2) The locking brackets be installed on the bottom of the drawer.

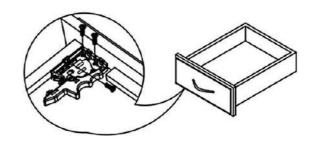

3 ) Please put the drawer flat on the slide, and close the drawer completely. When the slide be connected with the locking brackets, then the installation to be finished.

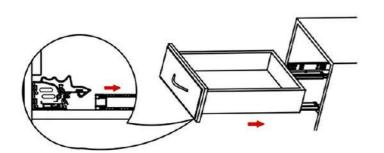

4) Press the locking brackets then you can take out the drawer.

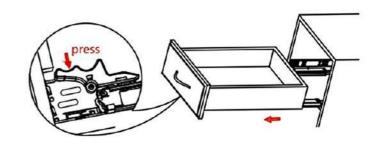

## **Installation Diagram**

W:internal cabinet width L:drawer length NL:Nominal length DL:internal cabinet depth X:the drawer board thickness

