


Rod Installation Guide

Tools Needed

Pencil
Tape Measure
Drill and drill bit
Screwdriver
Allen Wrench (Included)

1. Using bracket and level, determine a desired position. Mark location on wall for screws.
2. Where marked, drill pilot holes with drill bit and insert wall anchors.
Please note that wall anchors may not be necessary for all applications.
3. Attach bracket to wall using screws provided.
4. Repeat steps 1 to 3 for additional brackets. Install center bracket.
5. Tighten set screws to lock rod into place.

1. Rod Installation

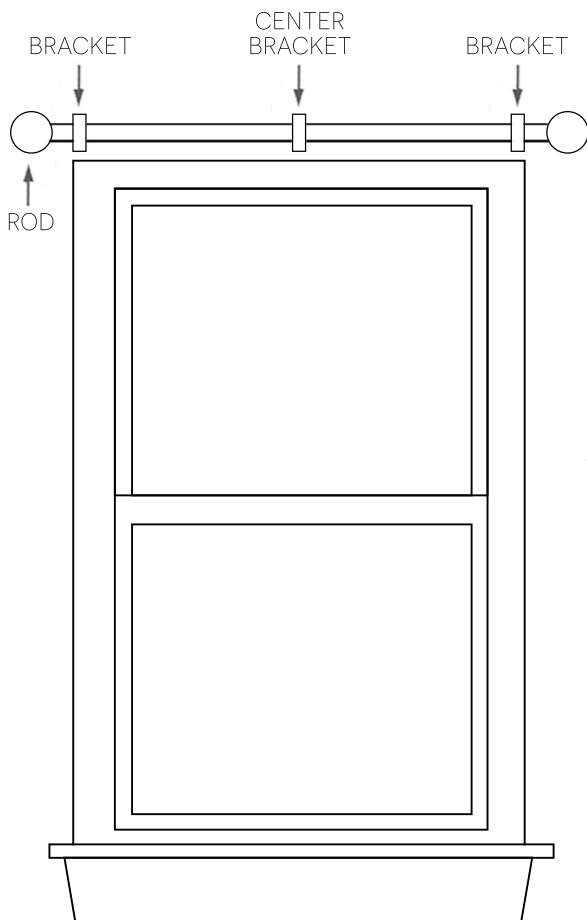

2. Bracket Installation

