

WARRANTY

We strive to offer high-quality product and we also try our best to satisfy each customer that orders from us with product or service as needed.

Each customer a record of their order such as the order number ,or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

**Are you having difficulty
with assembly? Missing parts?**

Please contact us : info@firststopintl.com

telephone No.:5627813327


send an email with your order No. to us

**For return, please check the return policy with
the retailer or market place you bought from.**

Appreciate your purchasing from us.

Pop up your life by our furniture !

uixe

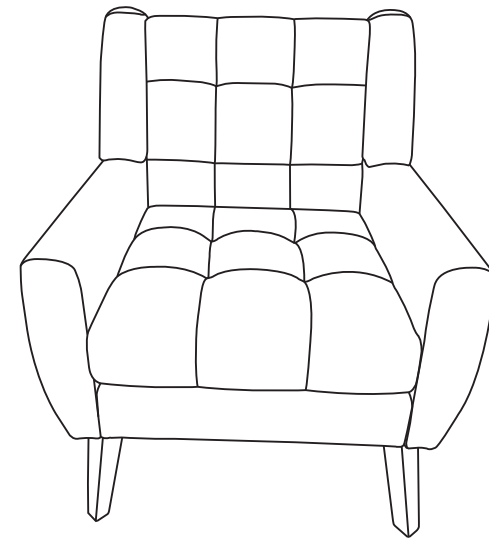

ITEM NO. SF0002

NOTE:


This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- Keep furniture away from heat and fire.
- Keep furniture away from sharp objects.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not jump or strike on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.


PARTS LIST

Ax1

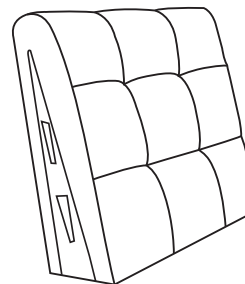


Back

Bx1

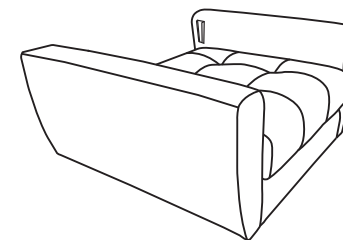


Seat Frame

Cx1

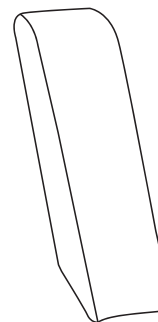

Right Wing
(packed in bottom of part B)

Dx1

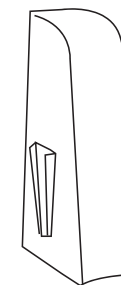

Left Wing
(packed in bottom of part B)




Weight Limitation

400LBS


HARDWARE and TOOL LIST

Ex4

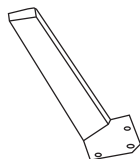

Legs

Fx12



Bolt

M8X20

Gx1




Allen Key

Be sure to check all packing material fitting the packing list. Be careful for small parts, which may have come loose inside the carton during shipment.

ASSEMBLY INSTRUCTIONS


Step 1

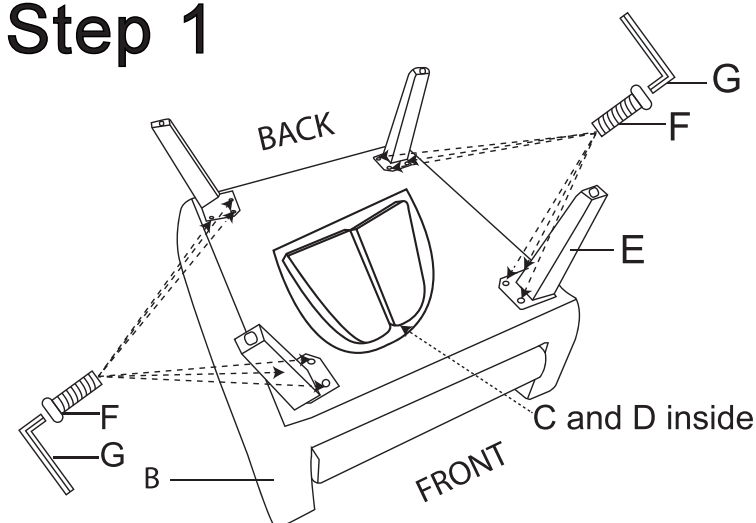

Each screw is rotated to 30% first, and the three screws on each foot are screwed in, and then completely tightened with the allen key.

Turn the seat frame B upside down on clean padded surface, Use bolt F, allen key G to attach the legs E on rear bottom of the armrest fasten all boltes to secure.

Step 2

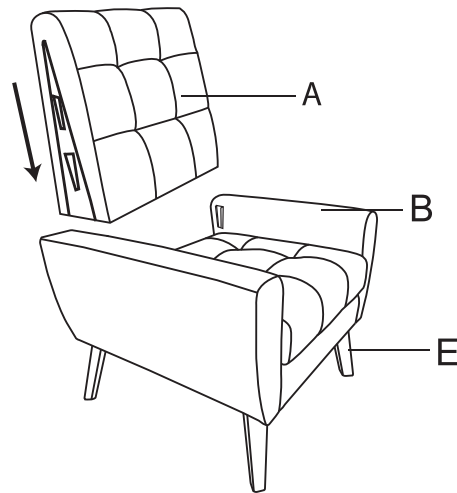


Operate carefully to prevent damage to fabric when metal connectors are inserted.

Turn the chair base assembly upright, carefully align male and female metal brackets on both sides then push the back A all the way down to secure.


Step 3

Squeeze firmly horizontally towards the backrest, align the metal connector, and then press firmly down until it is fully secured.

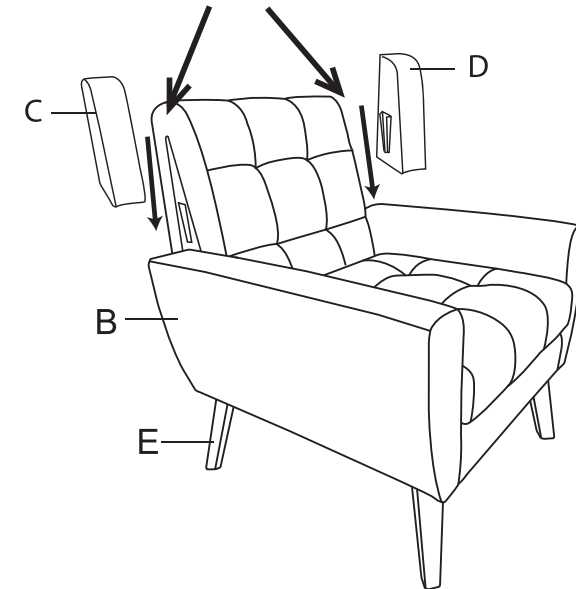

Take the left wing D and right wing C out of the bottom of the seat, and carefully align the metal brackets on either side of the back to ensure full bite.

Step 4

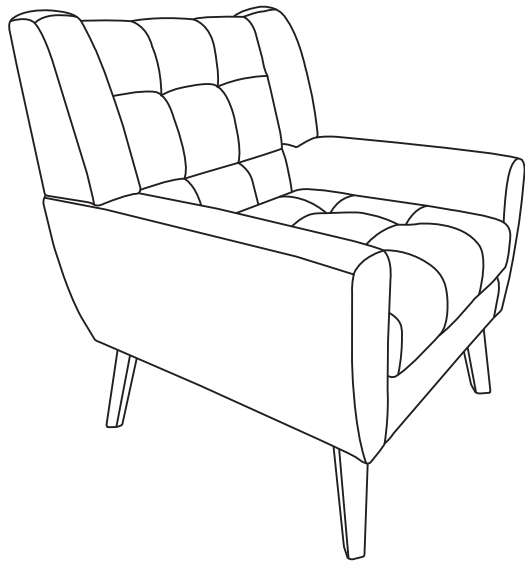

Tidy up the sofa to make it beautiful, adjust the screws on the sofa foot, make the sofa stable, and the assembly is completed.