

# BROADFORK WITH FIBERGLASS HANDLES ASSEMBLY GUIDE

## RECOMMENDED TOOLS

### 2 SETS OF PLIERS

**\*FOR THESE INSTRUCTIONS, WE USED A PAIR OF NEEDLE NOSE PLIERS AND A 14-mm SOCKET WRENCH**



## INCLUDED

**BROADFORK HEAD**

**2 BROADFORK HANDLES**

**4 BOLTS**

**4 LOCKING NUTS**



# BROADFORK ASSEMBLY GUIDE - STEP 1



**ALIGN HANDLE HOLES WITH THE HOLES ON THE BROADFORK HEAD  
(LOGO SHOULD FACE TOWARDS THE LEFT OF THE PRODUCT - SEE IMAGE ABOVE)**



# BROADFORK ASSEMBLY GUIDE - STEP 2




**INSERT BOTH BOLTS ALL THE WAY THROUGH THE HOLES OF THE HEAD AND THE HOLES OF THE HANDLE UNTIL IT REACHES THE OPPOSITE SIDE**





# BROADFORK ASSEMBLY GUIDE - STEP 3

**TIGHTEN BOLTS INITIALLY BY  
HAND, THEN USE PLIERS TO FULLY  
TIGHTEN HANDLE**

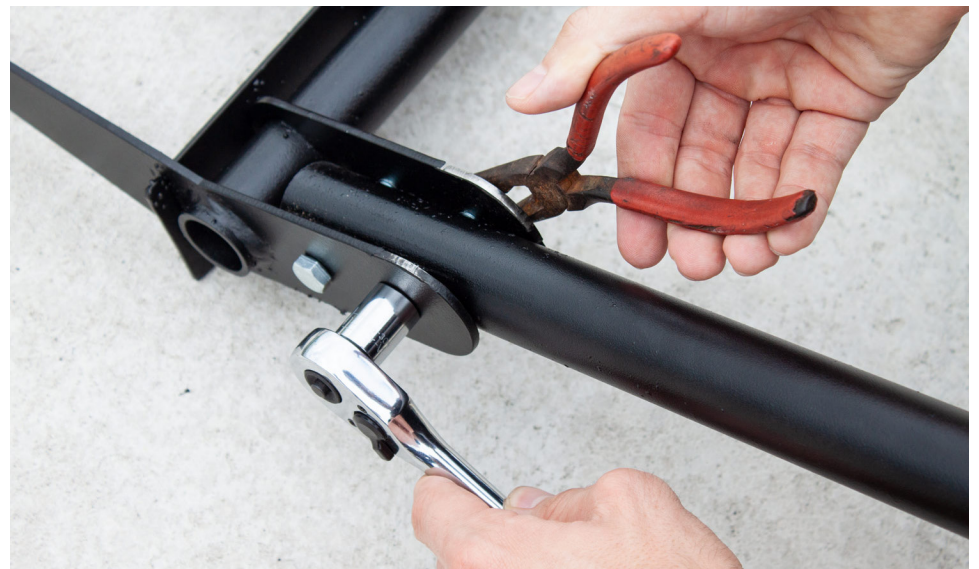

# BROADFORK ASSEMBLY GUIDE - STEP 4



**REPEAT THE SAME PROCESS FOR THE OTHER HANDLE  
(LOGO ON GRIP SHOULD ALSO FACE THE LEFT)**

