
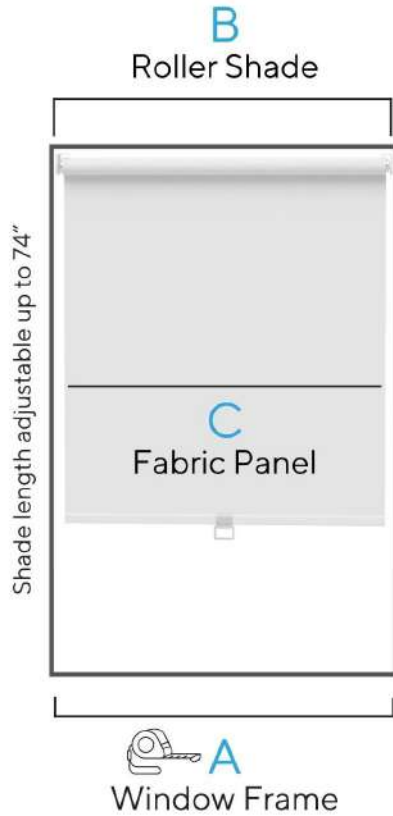


iFit™ Cordless Roller Shade


Measuring Instructions

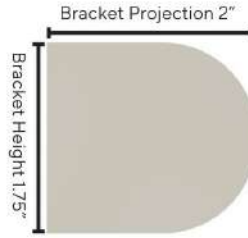

INSIDE MOUNT

Minimum frame depth needed is 1-3/4"

Width of:	A Window Frame	B Roller Shade <small>including mounting hardware</small>	C Fabric Panel
Measurement:	Measure along the top, inside of the window frame (round down to an even 1/4")	Must be less than A Window Frame	1-1/4" less than B Roller Shade
EXAMPLE	40-1/4"	40" 	38-3/4"
		Size to order	

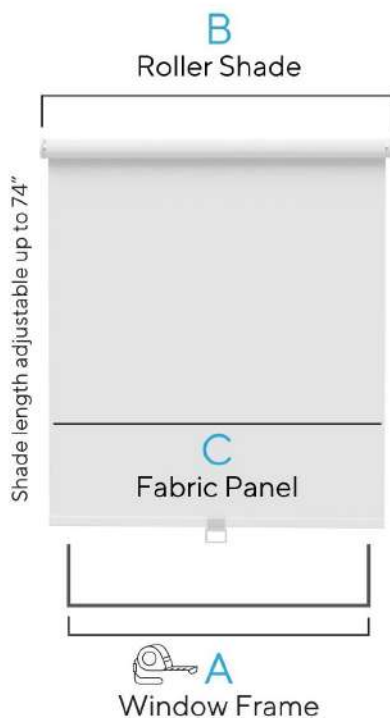

OUTSIDE MOUNT

Width of:	A Window Frame	B Roller Shade <small>including mounting hardware</small>	C Fabric Panel
Measurement:	Measure along the top, outside of the window frame (round down to an even 1/4")	Add 3" or more to A Window Frame	1-1/4" less than B Roller Shade
EXAMPLE	40"	43" 	41-3/4"
		Size to order	