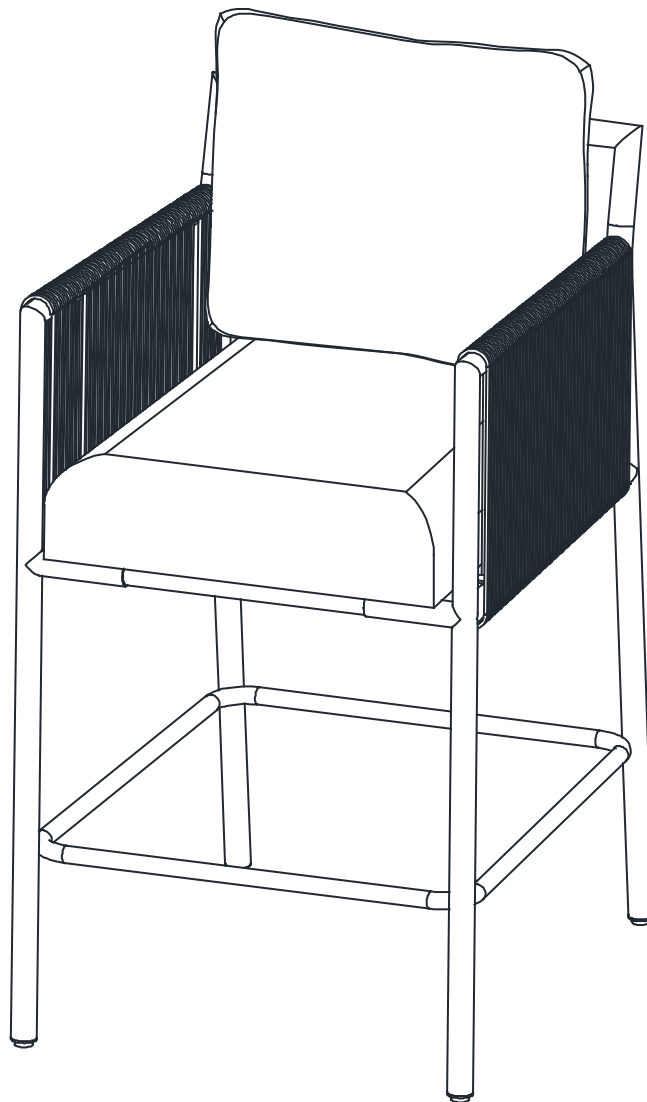















KJW.Y109 Assembly Manual

Counter Height Barstool



CAUTION

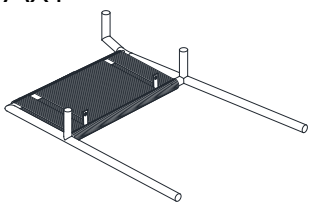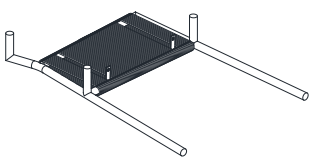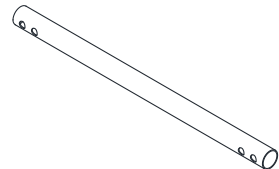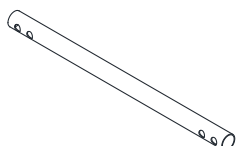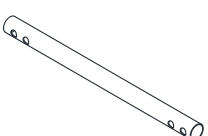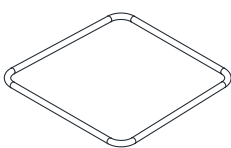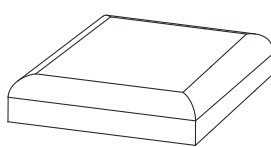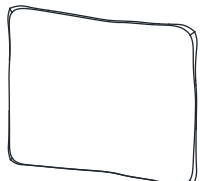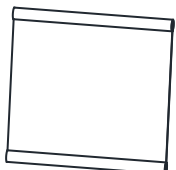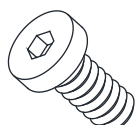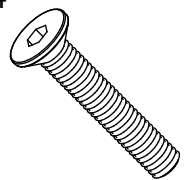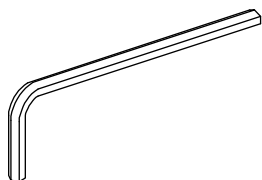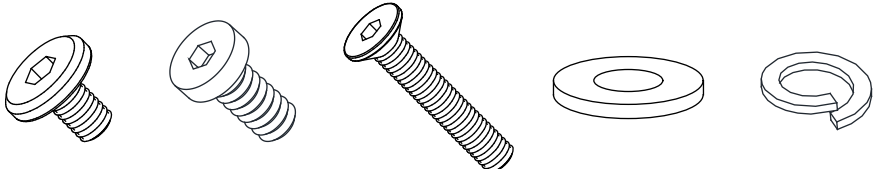THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Ax1  Right Arm	Bx1  Left Arm	Cx1  Long Stretcher	Dx1  Medium Stretcher
Ex1  Short Stretcher	Fx1  Footrest	Gx1  Seat Cushion	Hx1  Back Cushion
Ix1  Back Sleeve	Jx1  Front Sleeve	Kx12  M6 x 10mm Short Bolt	Lx4  M6 x 20mm Bolt
Mx4  M6 x 30mm Long Bolt	Nx4  Ø6xØ18 Flat Washer	Ox4  M6 Spring Washer	Px1  4# Allen Wrench
Qx4  15mm Felt Pad	Extra Hardware 		

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


Note: Do NOT use power tools for assembly.

ASSEMBLY INSTRUCTIONS

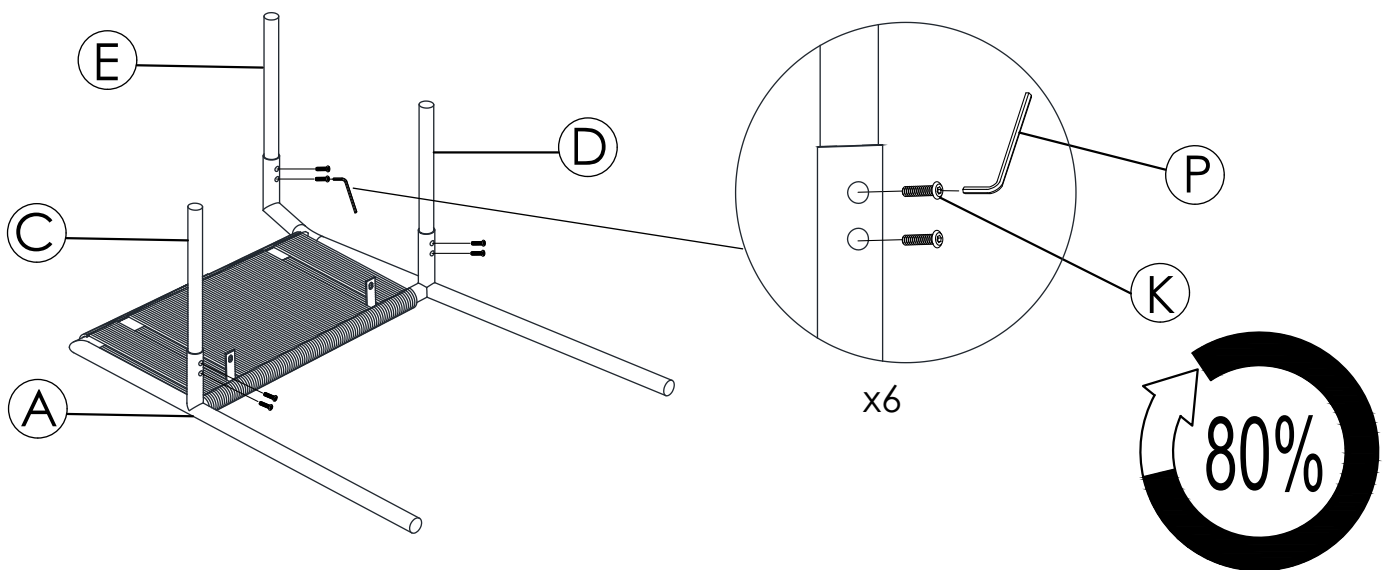
- 1 Attach the front of Right Arm (A) and Long Stretcher (C), using Short Bolts (K) and Allen Wrench (P).
Attach the back of Right Arm (A) and Short Stretcher (E) & Medium Stretcher (D), using Short Bolts (K) and Allen Wrench (P).
Do not fully tighten.



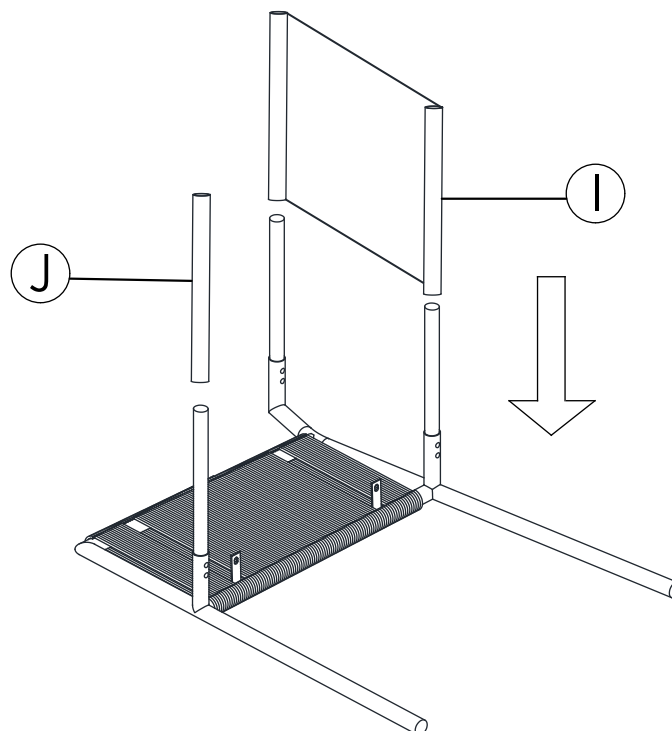
- 2 Slide the Front Sleeve (J) over the Long Stretcher (C).
Slide the Back Sleeve (I) over the Short & Medium Stretchers (D&E).



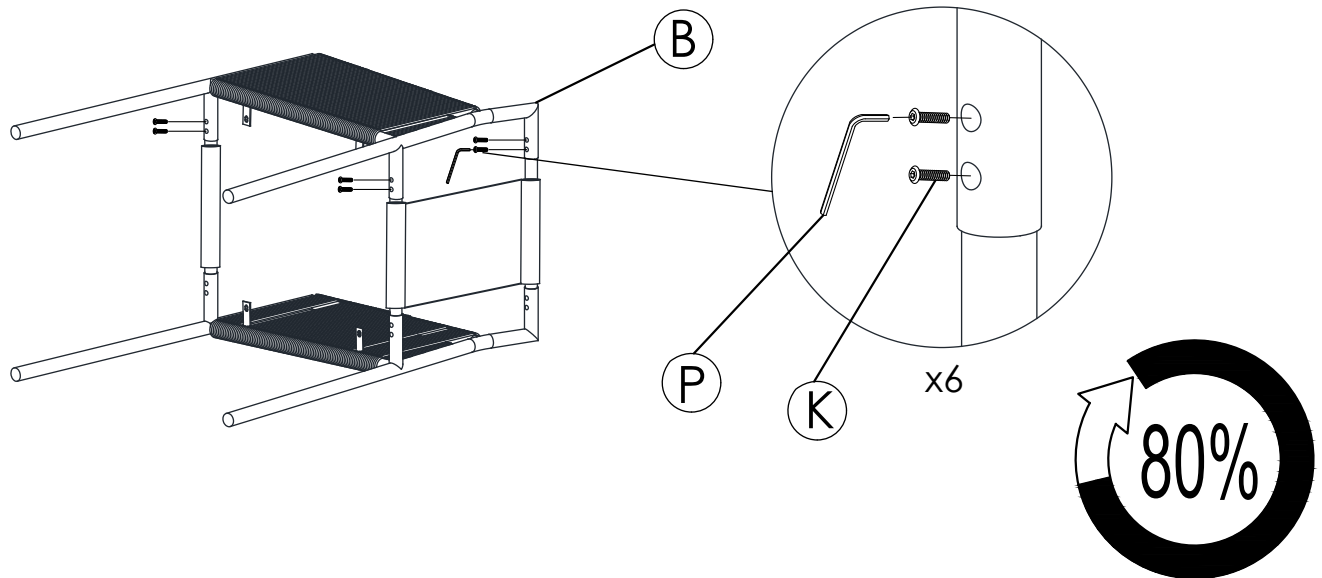
- 3** Push the other side of Sleeves (I&J) inward. Attach the Left Arm (B) and Stretchers (C&D&E), using Short Bolts (K) and Allen Wrench (P). **Do not fully tighten.**



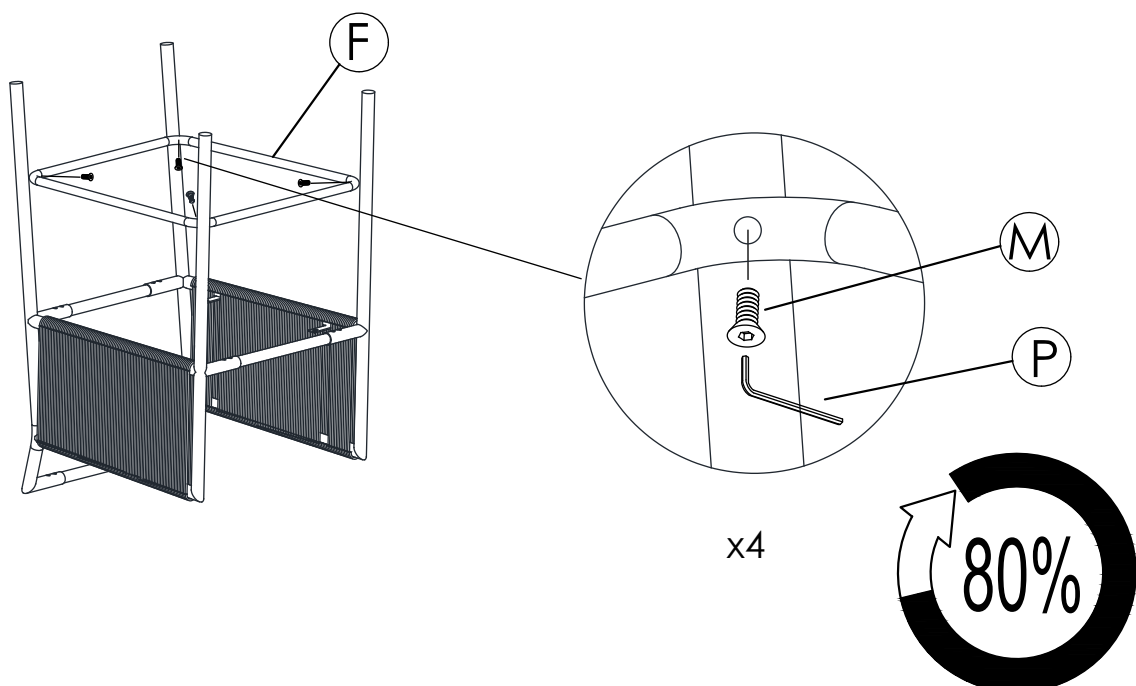
- 4** Attach the Footrest (F) and the assembled frame in Step 3, using Long Bolts (M) and Allen Wrench (P). **Do not fully tighten.**



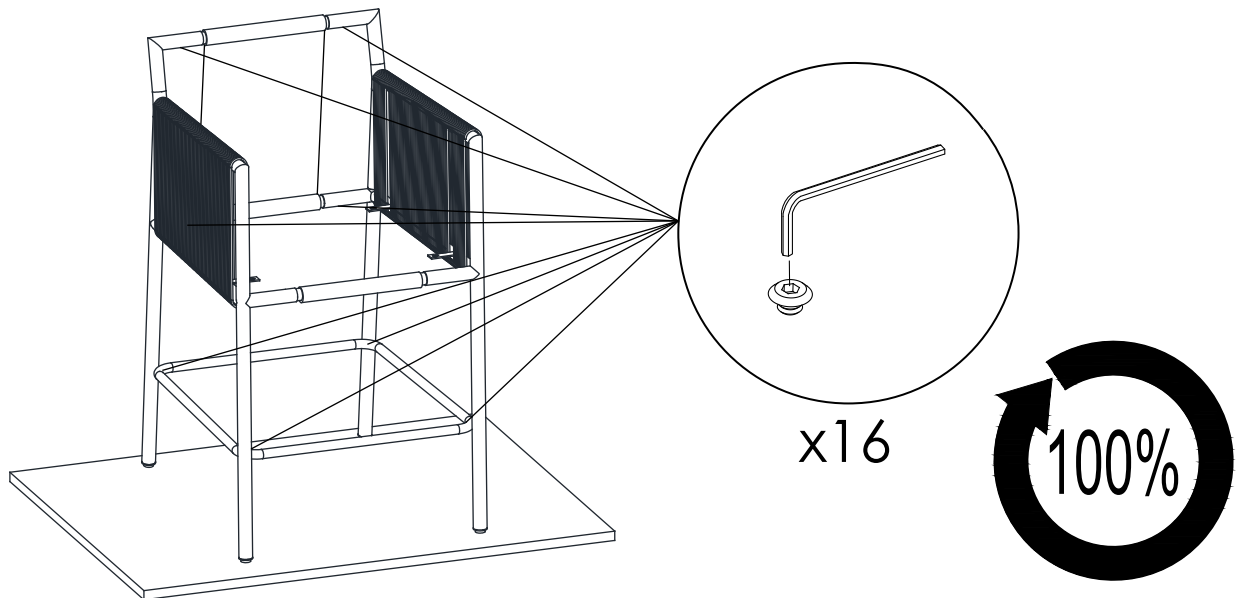
- 5** Turn assembled stool upright and place on a flat surface. Push legs up or down as necessary to level. **Once level, tighten all bolts.**



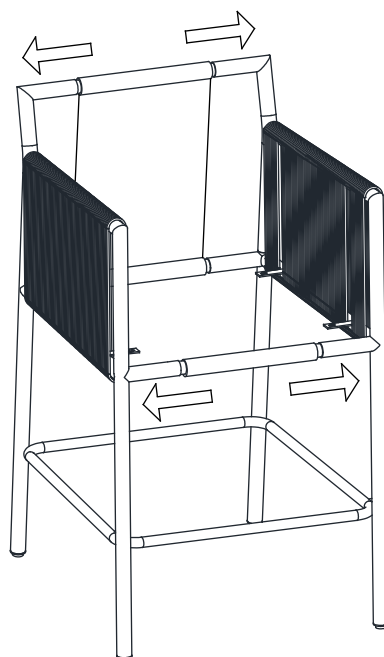
- 6** Once Secured, smooth out the fabric sleeve to cover the stretchers.



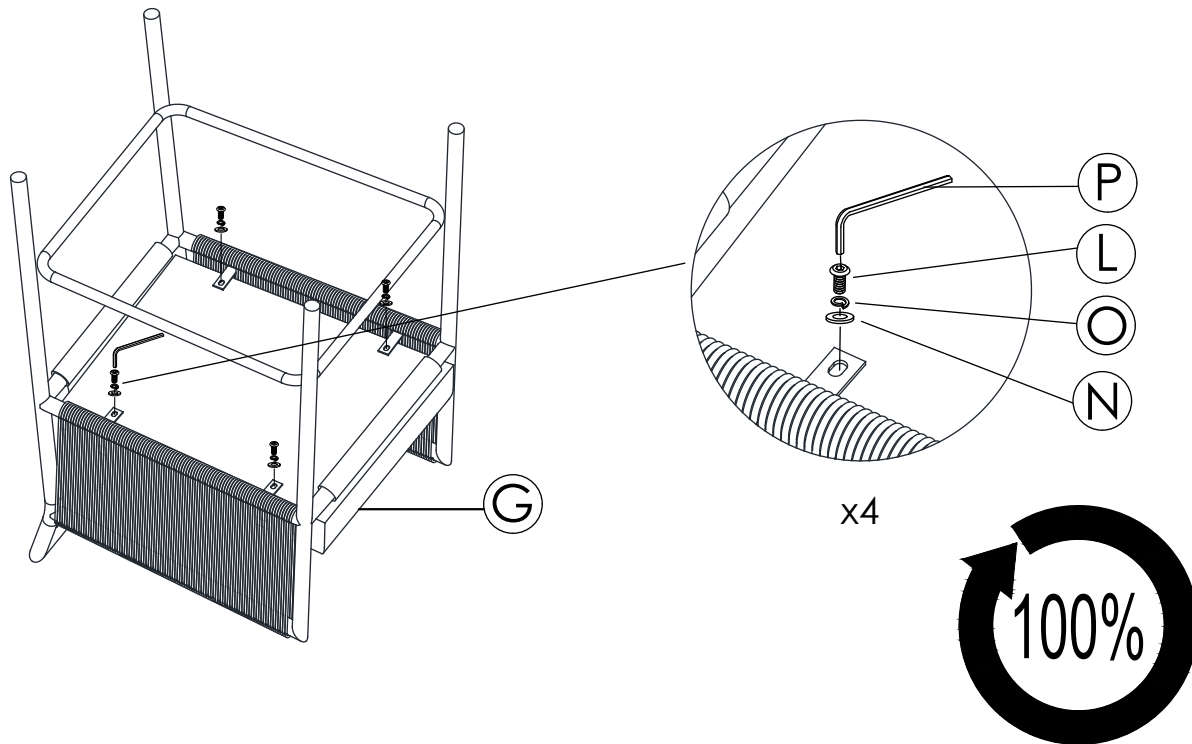
- 7** Attach the Seat Cushion (G) and the assembled frame in Step 6, using Flat Washers (N), Spring Washers (O), Bolts (L), and Allen Wrench (P).
Fully tighten.



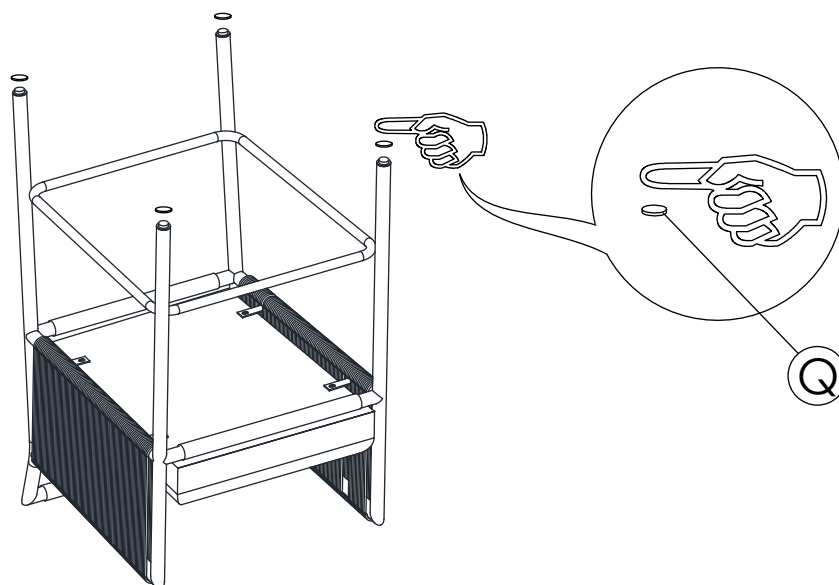- 8** Complimentary Felt Pads (Q) are included to help protect your floor or make the stool slide more easily.



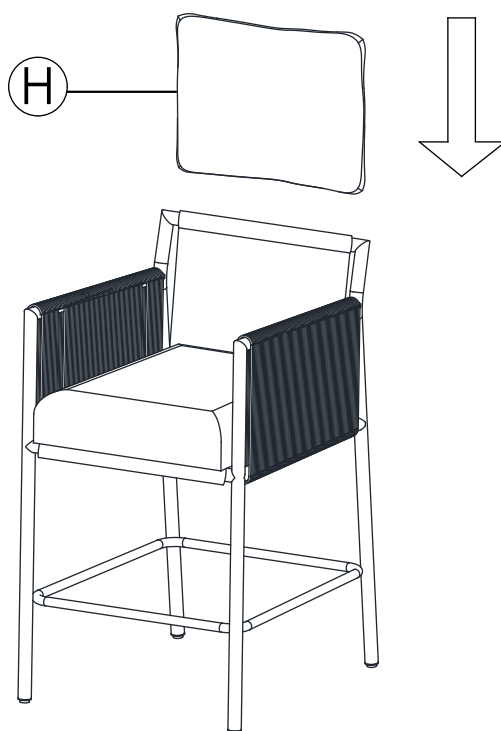- 9 Put the Back Cushion (H) on the stool.



- 10 Turn assembled chair upright and place on a flat surface.
Note: Each leg has an adjustable foot leveler to help level your stool.
Assembly complete. Enjoy.

