


INSTRUCCIONES PARA LA INSTALACIÓN Y MANTENIMIENTO

Contenido:

- 3 soportes extensibles para barra dobles
- 6 tornillos de cruz
- 6 anclajes para pared

HERRAMIENTAS NECESARIAS:

Cinta de medir, lápiz, taladro y brocas, desarmador de cruz y nivel.



Cinta de medir



lápiz




taladro y brocas



desarmador Phillips(cruz)



nivel

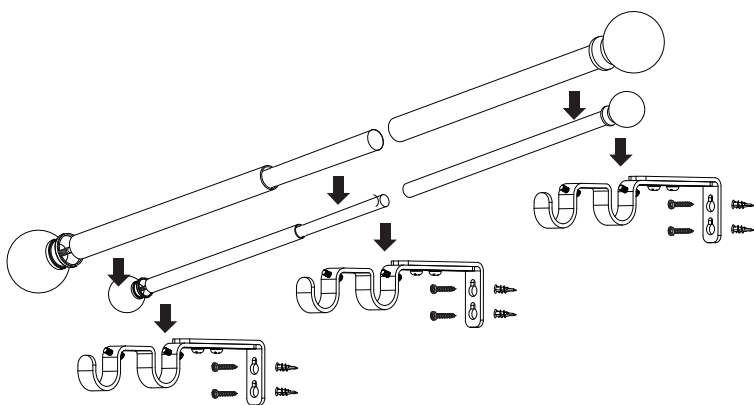

INSTALACIÓN DEL SOPORTE

PASO 1.

Desenrosque el tornillo de proyección y retire el soporte delantero. Coloque los soportes en la pared o en el techo en el lugar deseado y marque los agujeros. Utilice la cinta de medir y el nivel para asegurar que los agujeros están alineados horizontalmente.

PASO 2A.(PARA INSTALAR EN TABLA ROCA O PANEL)

Pre-taladre dos agujeros piloto (con broca 1/4") para cada soporte e inserte los anclajes a la pared o el techo y después inserte los tornillos al anclaje.

PASO 2B.(PARA INSTALAR EN MADERA)

Si se monta directamente en madera o en algún soporte, pre-taladre dos agujeros piloto para cada soporte (con broca de 1/8") e instale el soporte en la pared con los tornillos de anclaje.

PASO 3.

Coloque el soporte frontal encima del soporte base y asegure con el tornillo de proyección. Deslice el soporte frontal a la ubicación deseada y apriete el tornillo de proyección. Repita para cada soporte.

INSTALACIÓN DE LA BARRA

PASO 4

Coloque las organzas en la barra chica y las cortinas en la barra grande y deslice la barra en los soportes. Tenga en cuenta que los paneles, barras y laterales se venden por separado.

PASO 5








Deslice las barras en los soportes y coloque laterales a cada extremo de la barra.

PASO 6

Asegure cada barra apretando los tornillos incluidos.

Instrucciones de mantenimiento:

Limpie suavemente con un trapo el polvo o suciedad que tenga el producto. No utilice limpiadores abrasivos ya que podrían dañar la superficie del producto.

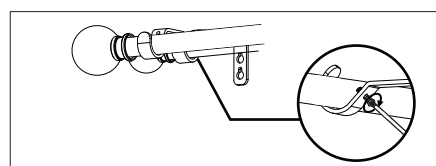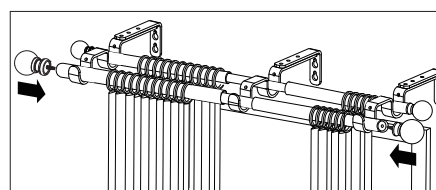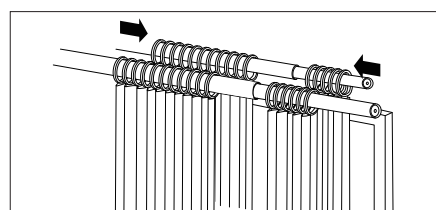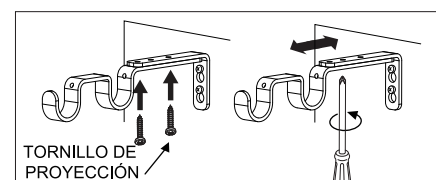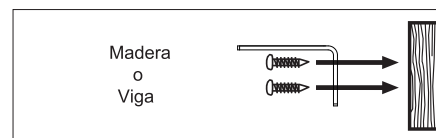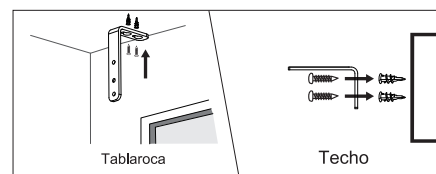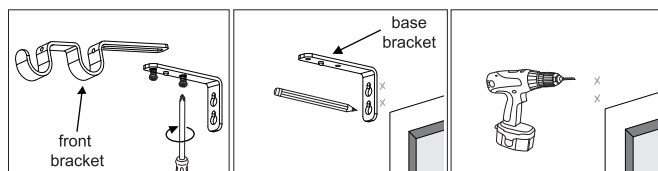


USER CARE & INSTALLATION GUIDE

Package Contents:

3 Extendable Double Rod Brackets
6 Philips Pan Head Screw
6 Wall Anchors

Tools needed:

Tape Measure, Pencil, Drill & Bit Set, Philips head Screwdriver, Level



Tape Measure



Pencil




Drill & Bit Set



Philipshead
Screwdriver



Level

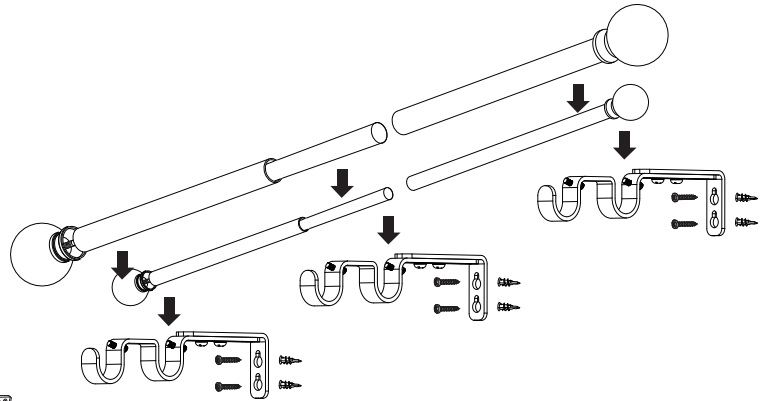

BRACKET INSTALLATION

STEP 1.

Unscrew the projection screw and remove the front bracket. Place the base bracket against the wall or ceiling at desired locations and mark screw holes. Use tape measure and level to make sure marked screw holes are horizontal to each other.

STEP 2A. (FOR MOUNTING TO DRYWALL, CEILING, OR PANELING)








Pre-drill two pilot holes for each bracket (1/4" drill bit) and insert anchors into wall/ceiling and insert screws into wall anchors.

STEP 2B. (FOR MOUNTING TO WOOD OR STUDS)

If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/8" drill bit) and install bracket on the wall with screws provided.

STEP 3.

Place front bracket on top of base bracket and secure with projection screw. Slide front bracket to desired projection, and tightening projection screw. Repeat for each bracket.

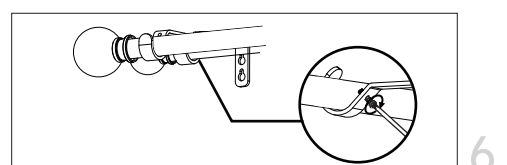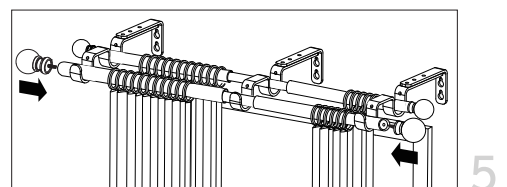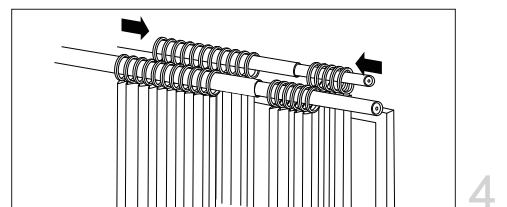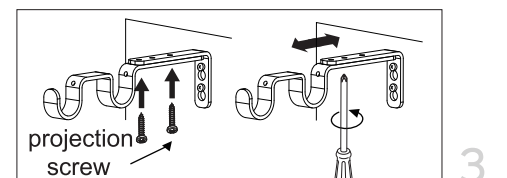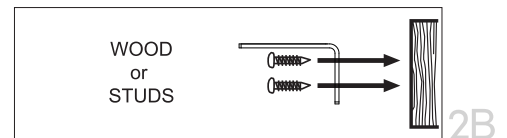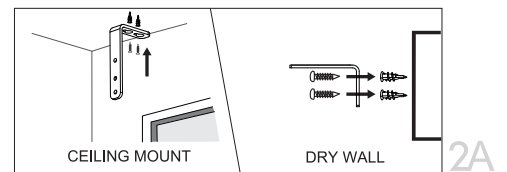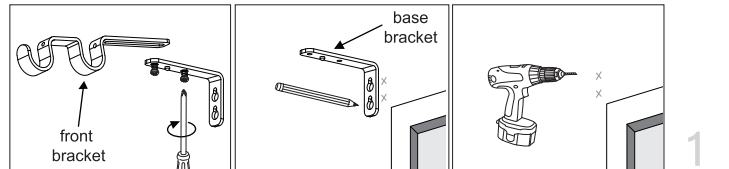

ROD INSTALLATION

STEP 4.

Place sheer panels on sheer rod and curtain panels on curtain rod.

Note that panels, rods, and finials are sold separately.

STEP 5.

Slide rods onto the brackets and add finials to the ends of the rod.

STEP 6.

Secure each rod by tightening screws provided.

Care Instruction:

Wipe gently with cloth to clean any sand, dirt, or dust on product. Do not use abrasive cleaners as they may damage the surface finish.