


INSTALLATION INSTRUCTIONS


1

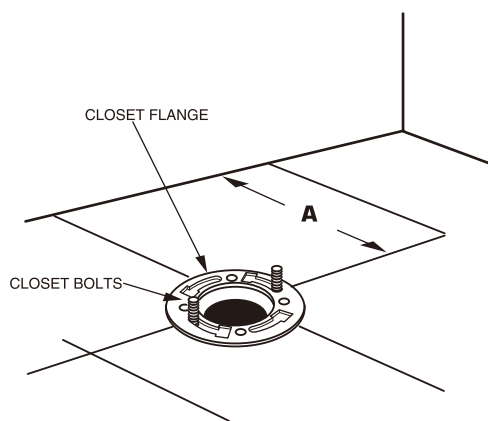

INSTALL CLOSET BOLTS

Install closet bolts in flange channel, turn 90°, and slide into place 6" (152 mm) apart and parallel to wall.


2

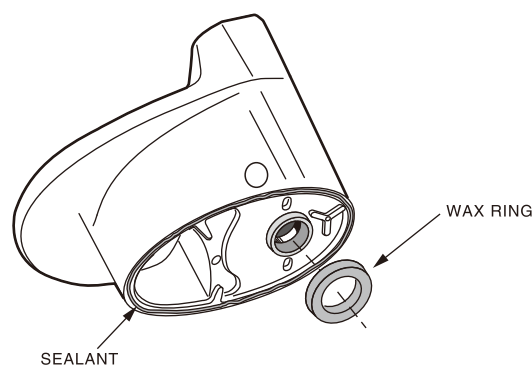

INSTALL WAX SEAL

Invert toilet on floor (cushion to prevent damage), and install wax ring evenly around waste flange (horn), with tapered end of ring facing toilet. Apply a thin bead of sealant around toilet base.


3

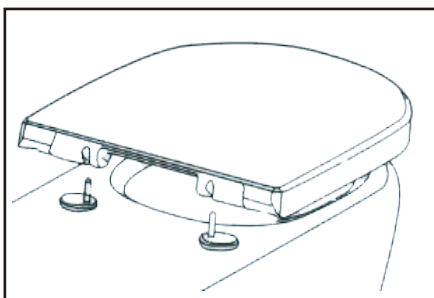

INSTALL TOILET SEAT

- Insert the inner rubber screw part into the bowl holes, then tighten leaving it slightly loose.
- Temporarily add the seat in order to position the inner screws for most accurate seat to bowl fit.
- After perfectly positioning the inner screws and the seat aligns with the bowl, remove the seat and tighter the inner screws, then add the chrome cap.
- After installing the toilet, simply clip on the seat to chrome hinges.


4

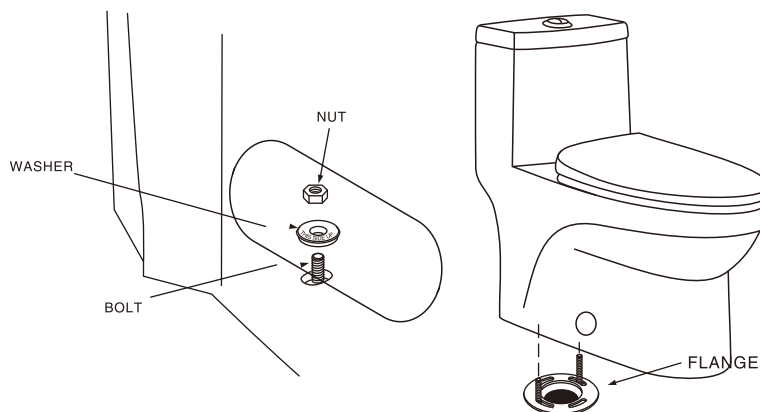

POSITION TOILET ON FLANGE

- Unplug floor waste opening and install toilet on closet flange so bolts project through mounting holes.
- Loosely install retainer washers and nuts. Side of washers marked "THIS SIDE UP" must face up!

5

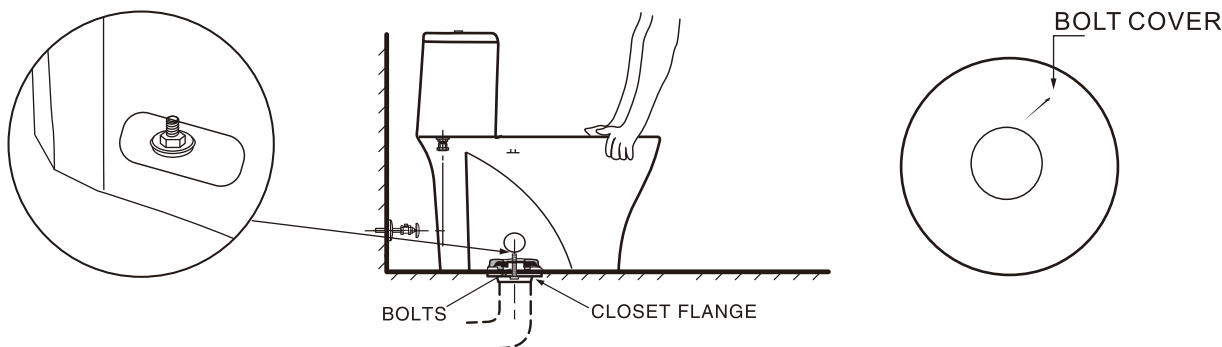

INSTALL TOILET

- Position toilet squarely to wall and, with a rocking motion, press bowl down fully on wax ring and flange. Alternately tighten nuts until toilet is firmly seated on floor.



CAUTION: DO NOT OVERTIGHTEN NUTS OR BASE MAY BE DAMAGED!

- Adhere bolt covers to toilet.
- Smooth off the bead of sealant around base. Remove excess sealant.