

TILE REDI® REDI FREE®

BARRIER FREE SHOWER PAN


MODEL 3754LBF-PVC

(Not to scale)

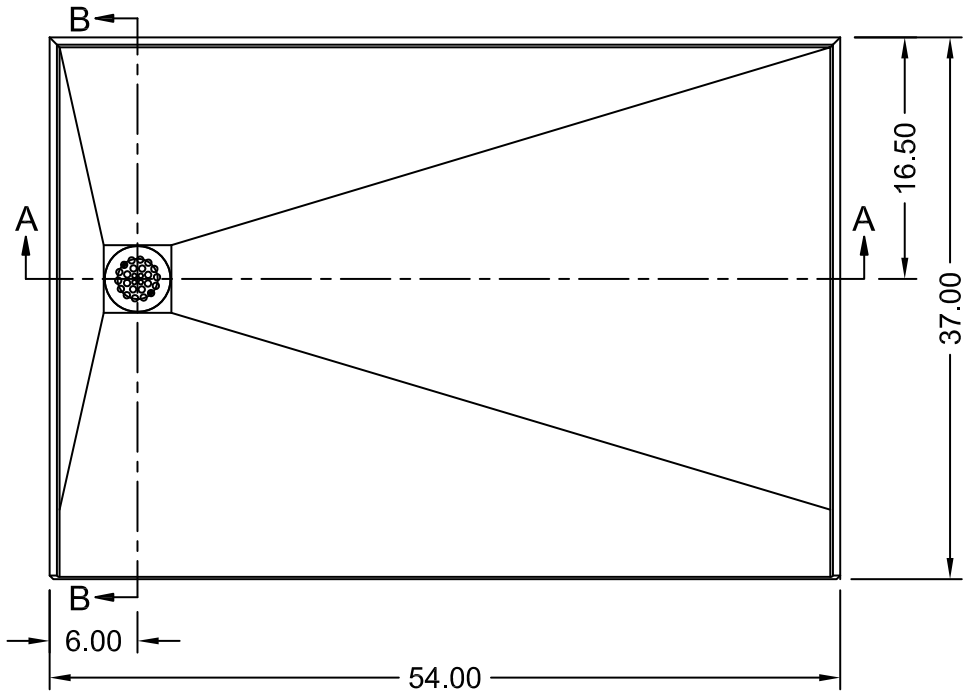

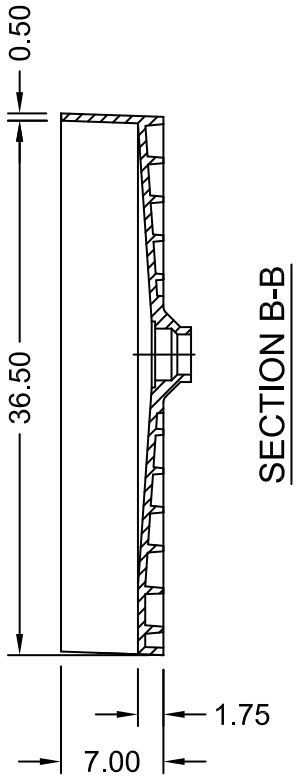

SECTION B-B

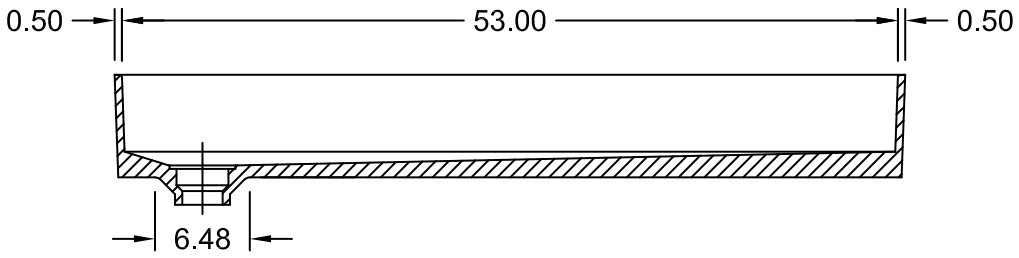

SECTION A-A

Redi Free Installation:	For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.

ANSI Z124.1-95	ANSI Z124.2-95	ICC/ANSI A117.1.98
ASTM F462-79	B45.0-02	B45.5-02

Toll Free 800.232.6156
Tel: 954.323.0125
Fax: 954.344.8064
techsupport@tileredi.com
www.tileredi.com

tile redi® Perfection through Innovation

V.2013.02.08

© 2013 TILE REDI USA, LLC