


### Connection of the Quick Drain

1. Installation of the Quick Drain System requires the connection to a minimum 1 1/2" sanitary drain line.
2. Use only SCH 40 1-1/2" diameter pipe and fittings; use approved PVC primer and glue.
3. The Sanitary Tee from the Quick Drain should be installed directly above the Drain Tee.
4. There should be a maximum of 1" of 1-1/2" PVC pipe between the two Sanitary Tees.
5. Dry fit the drain/overflow assembly to the sanitary drainage pipe and check for proper fit.
6. Glue the Quick Drain fittings, pipe, and drain overflow assembly to the sanitary drainage pipe.

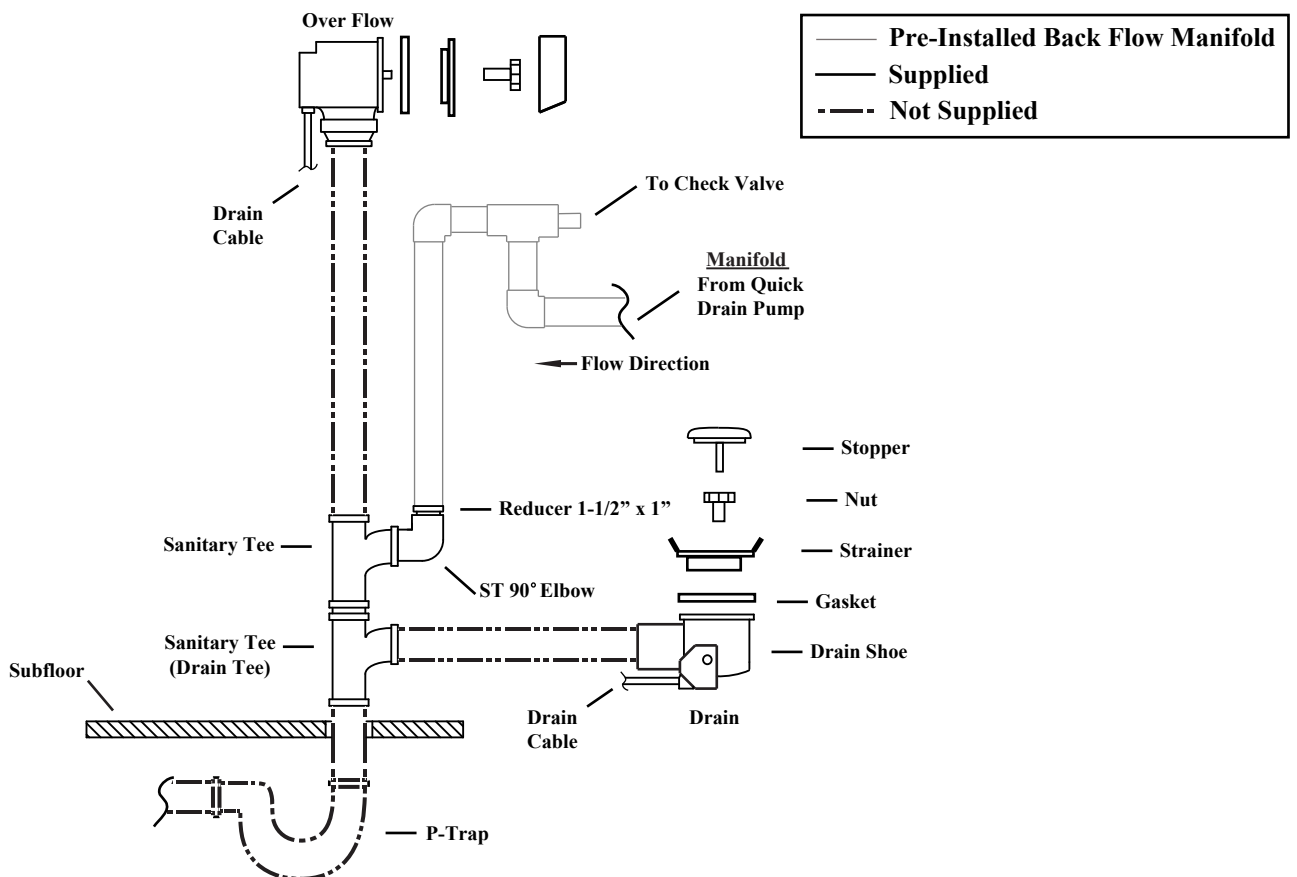

We have taken reasonable precautions to ensure the Quick Drain is suitable for residential plumbing, it is the *responsibility of the installer* to insure that the plumbing is acceptable for use of the Quick Drain. *We do not accept responsibility for damage arising from the use of the Quick Drain.*

- *Please verify compliance with local and state code requirements for the installation.*
- *Do not change or modify the location and / or piping connection of the Back Flow Manifold.*
- *Installation of the Quick Drain System requires the connection to a minimum 1 1/2" sanitary drain line.*
- *Use an approved Schedule 40 PVC Pipe, PVC Primer, and PVC Glue for sanitary pipe applications.*
- *Pre-assemble the waste / overflow assembly per installation instructions.*