




3D WINDOW FILM

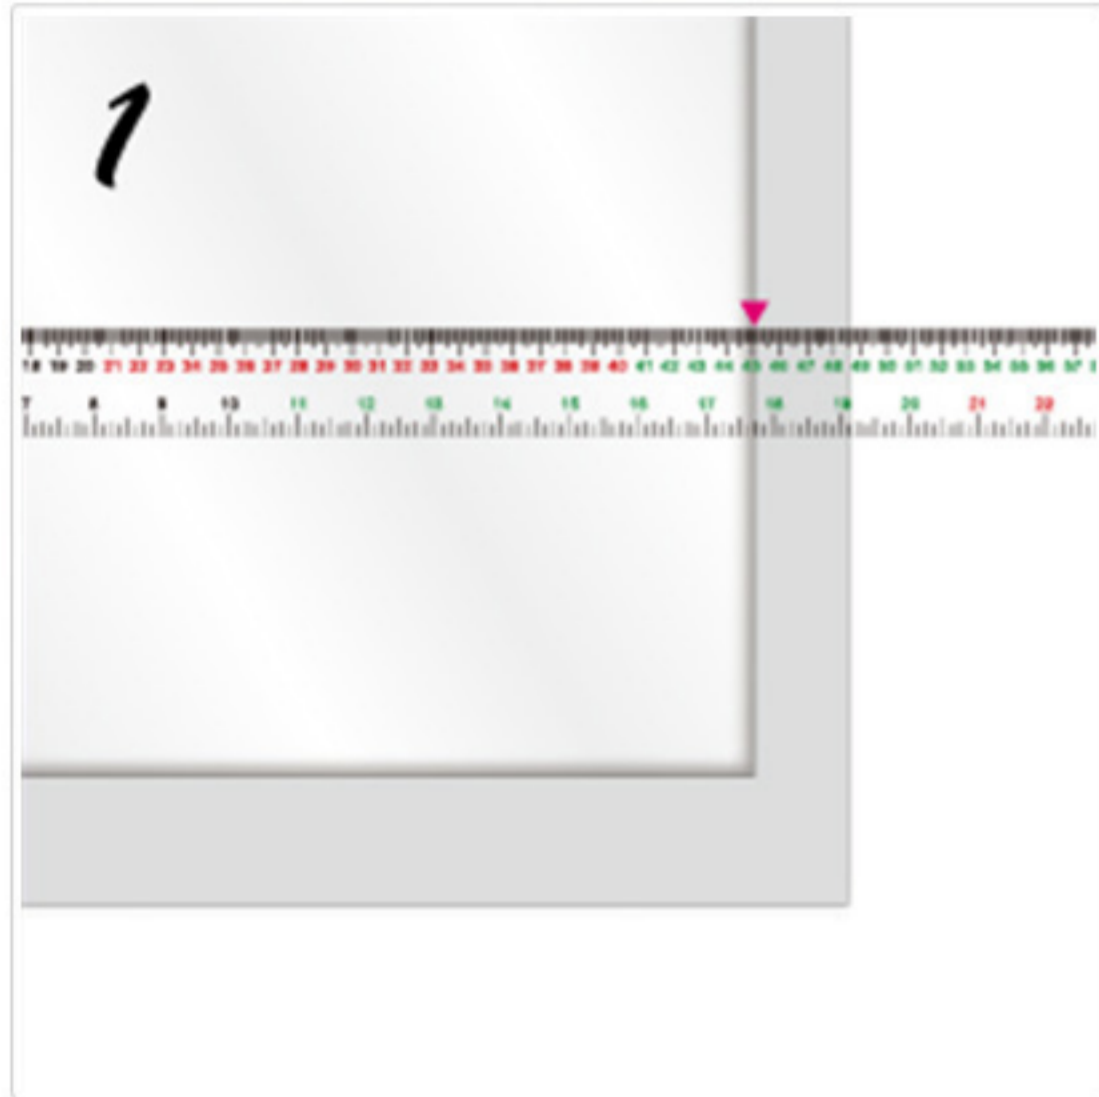

1. Measure windows & trim film.

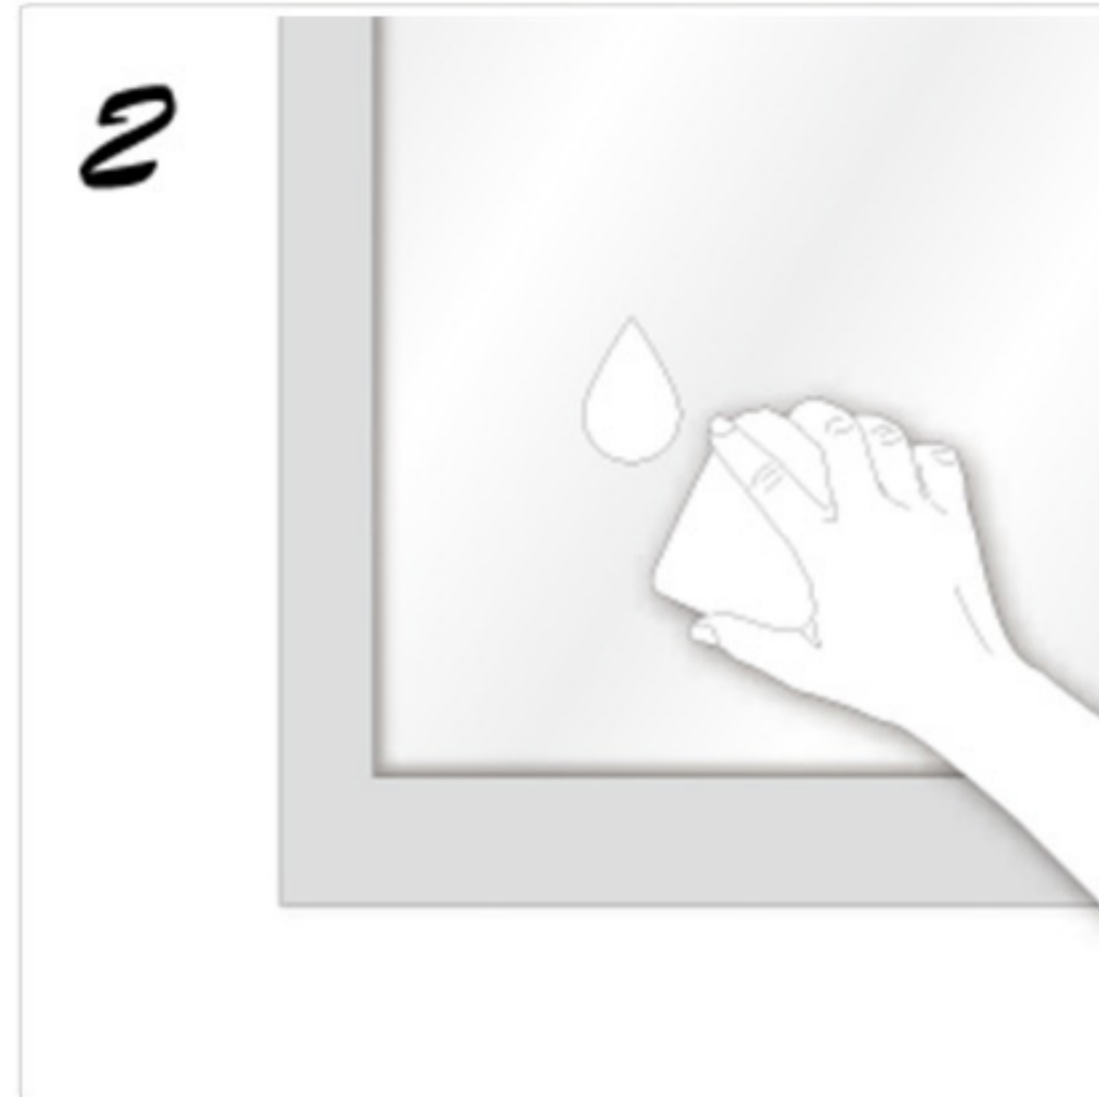


2. Clean windows glass.

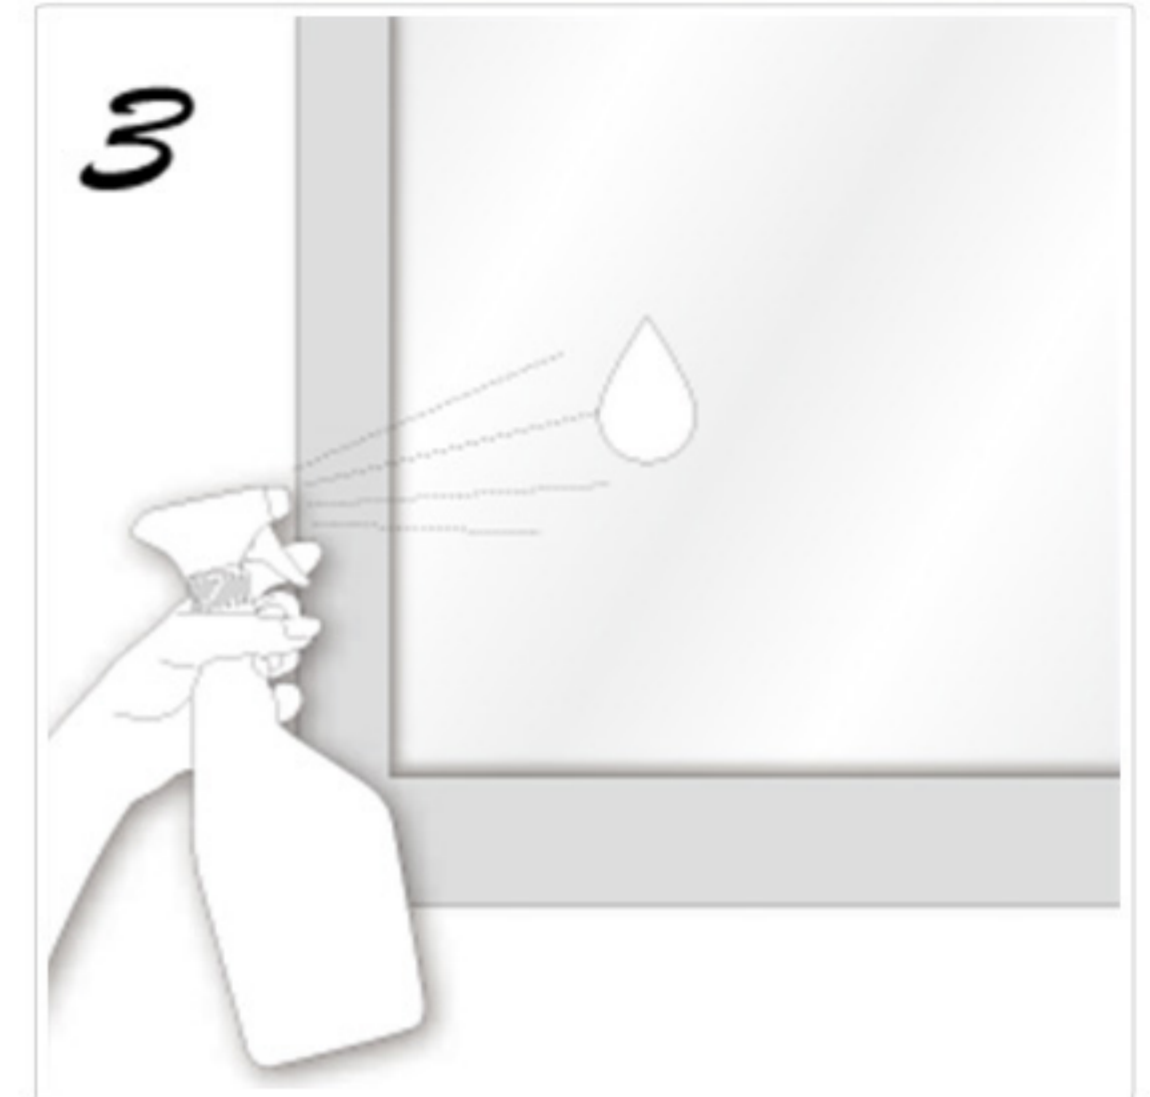


3. Wet the window glass with soapy water.



4. Remove the films' back cover.
VERY IMPORTANT.

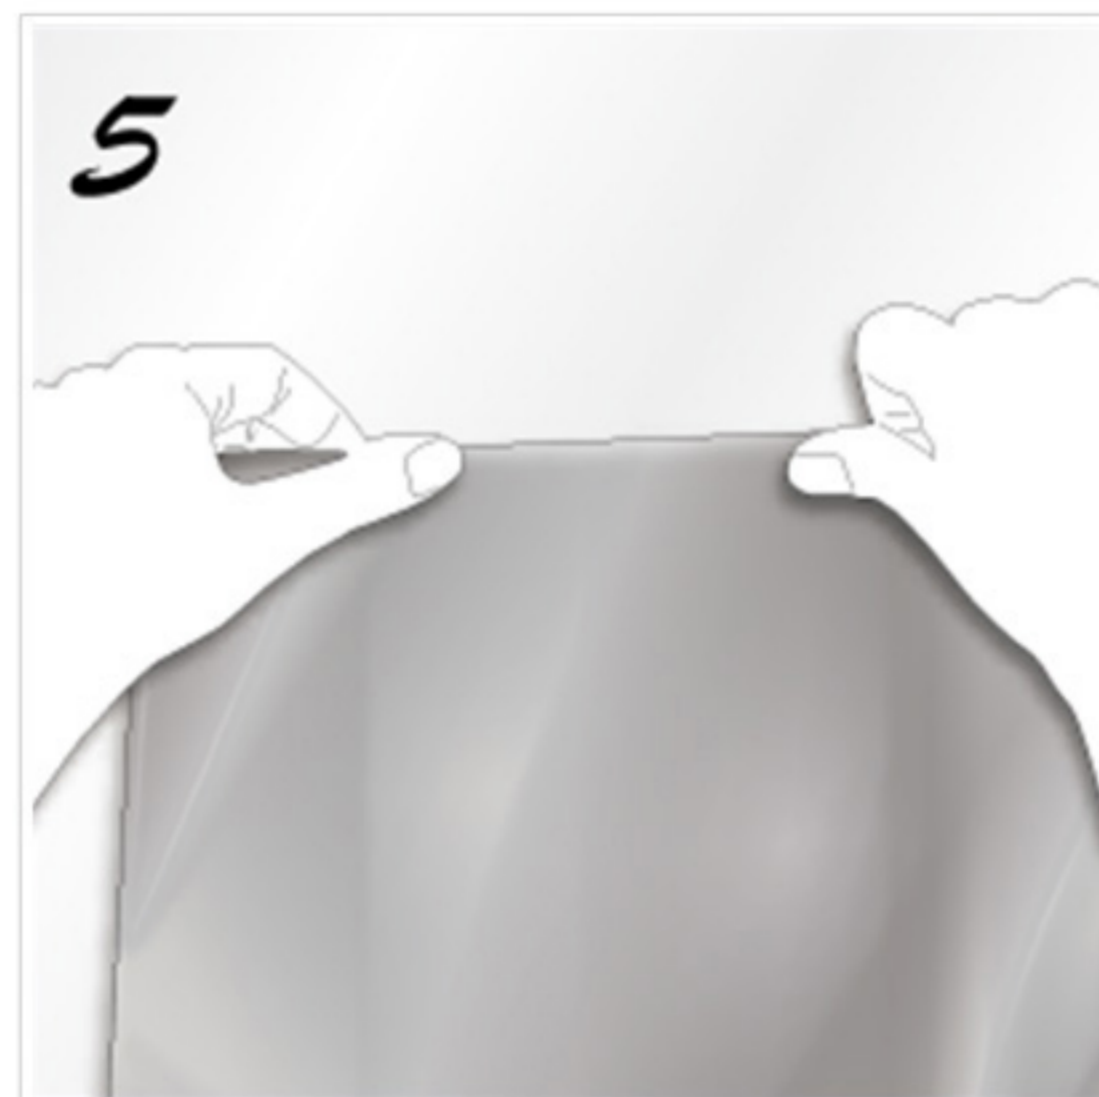

5. Install the films to glass.

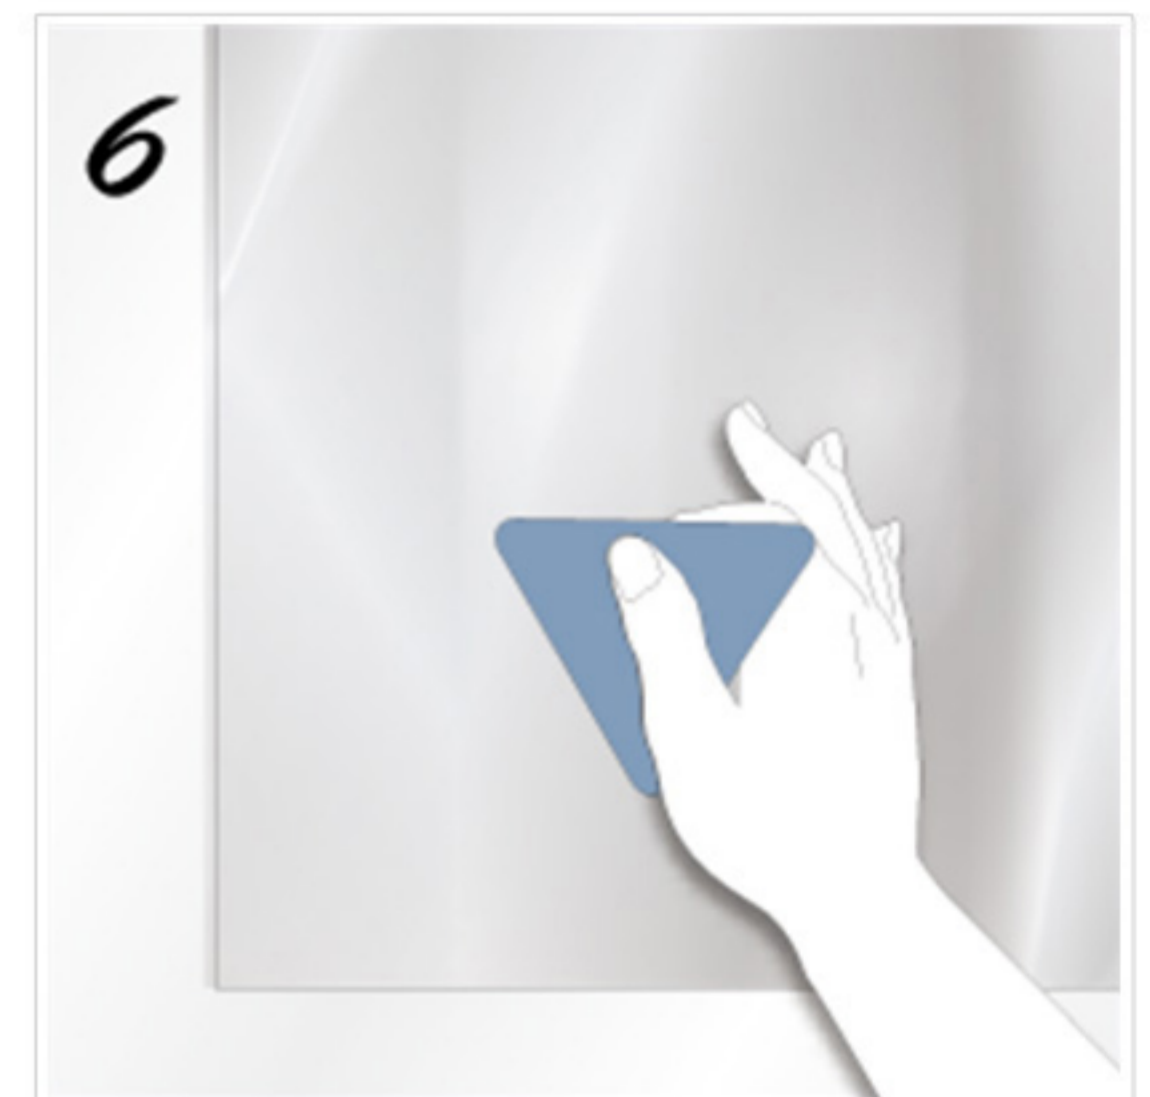

6. Squeeze out water and air bubbles
with a smooth tool, such as credit card.