






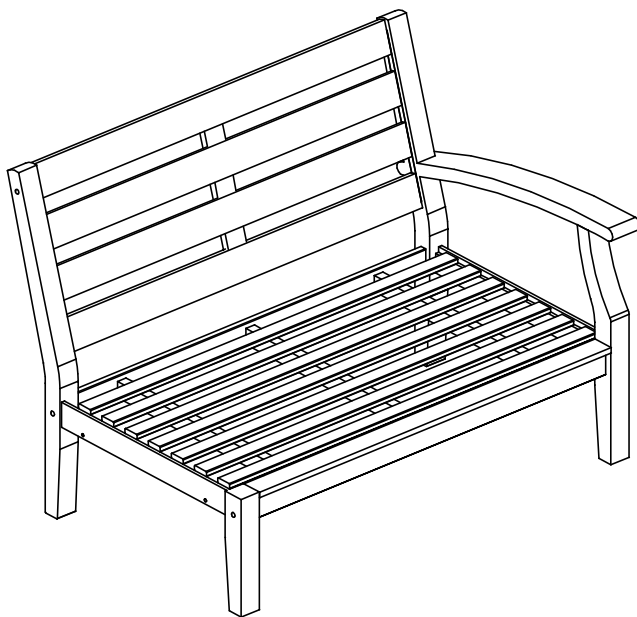


ASSEMBLY INSTRUCTIONS


E011LS-L(3A) WOODEN LEFT ARM LOVESEAT

A Right side frame  1pc	B Left side frame  1pc	C Back Rest  1pc	D Seat  1pc
E 1 3/4" Bolt  2pcs + 1pc reserve	F 2 1/4" Bolt  6pcs + 1pc reserve	G Wooden cap  6pcs + 1pc reserve	

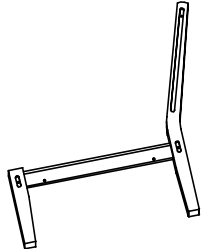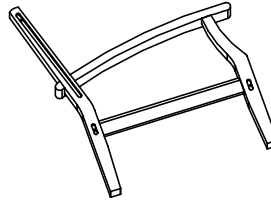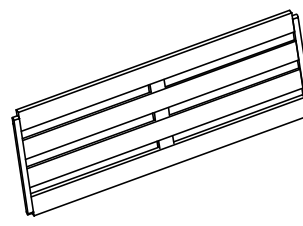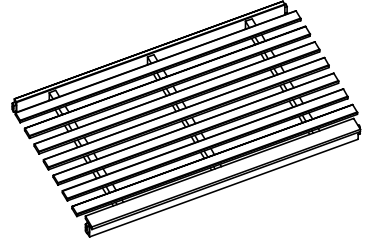


This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach the back rest(C) and seat(D) into right and left side frame(A&B) to the matching holes. Secure using 1 3/4" bolt(E) and 2 1/4" bolts(F) to left side frame(B), with screwdriver (not provided), position as shown. Don't fully tighten at this step.

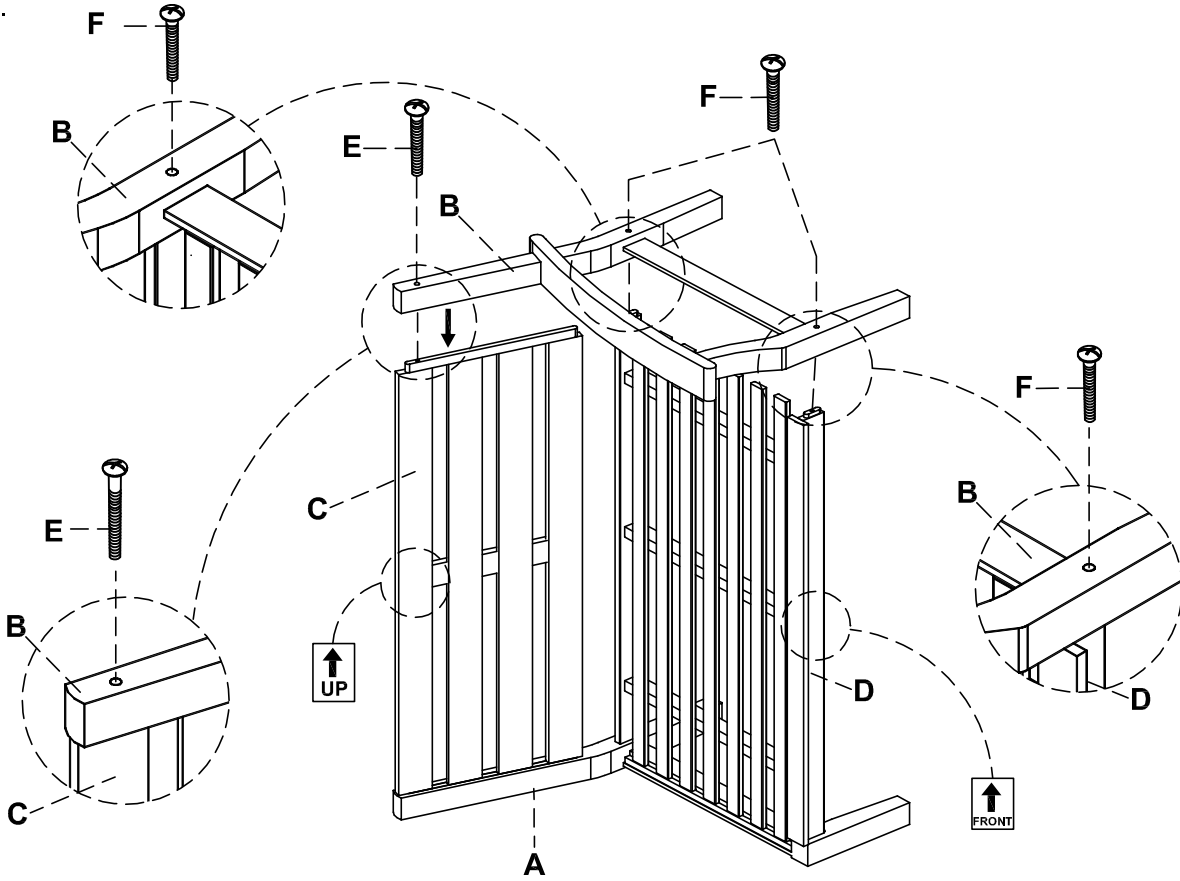


- 2** Upright the pre assembled, insert bolt(E) and bolts(F) with screwdriver (not provide). Note : To assembled the left side frame(B) was already shown in step 1. Don't fully tighten at this step.

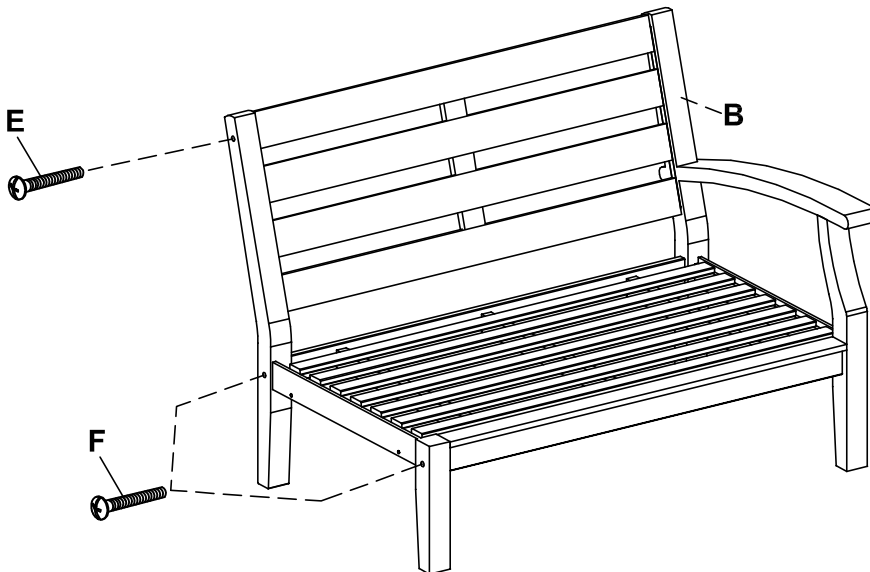

- 3 Tapping the wooden caps(G) to cover bolts using rubber mallet (not provided).The chair is now ready to use.

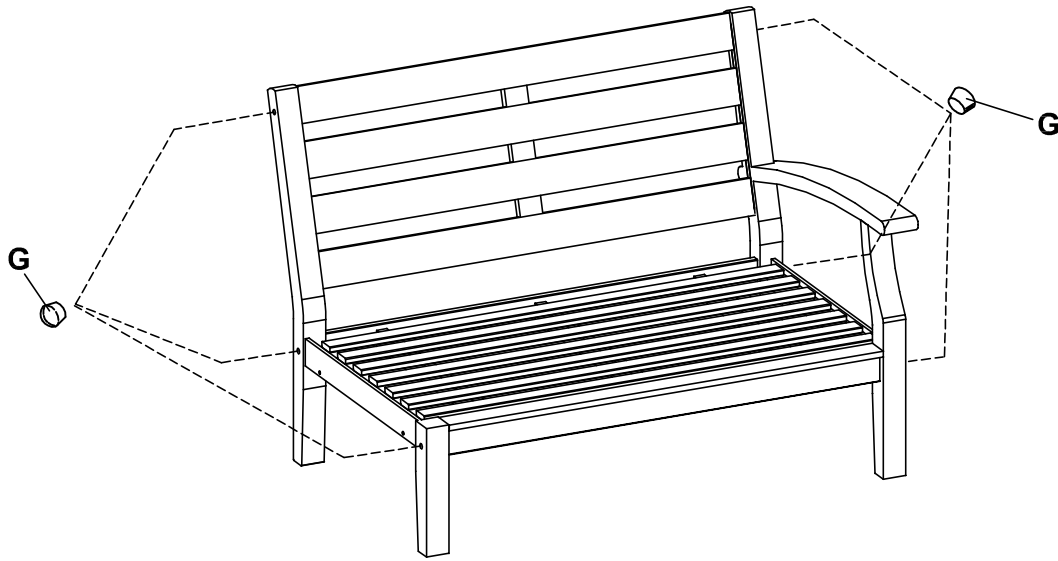

- 4 To joining the other chair, secure using 2 1/4" bolts(F) with screwdriver (not provided) from underneath of seat.

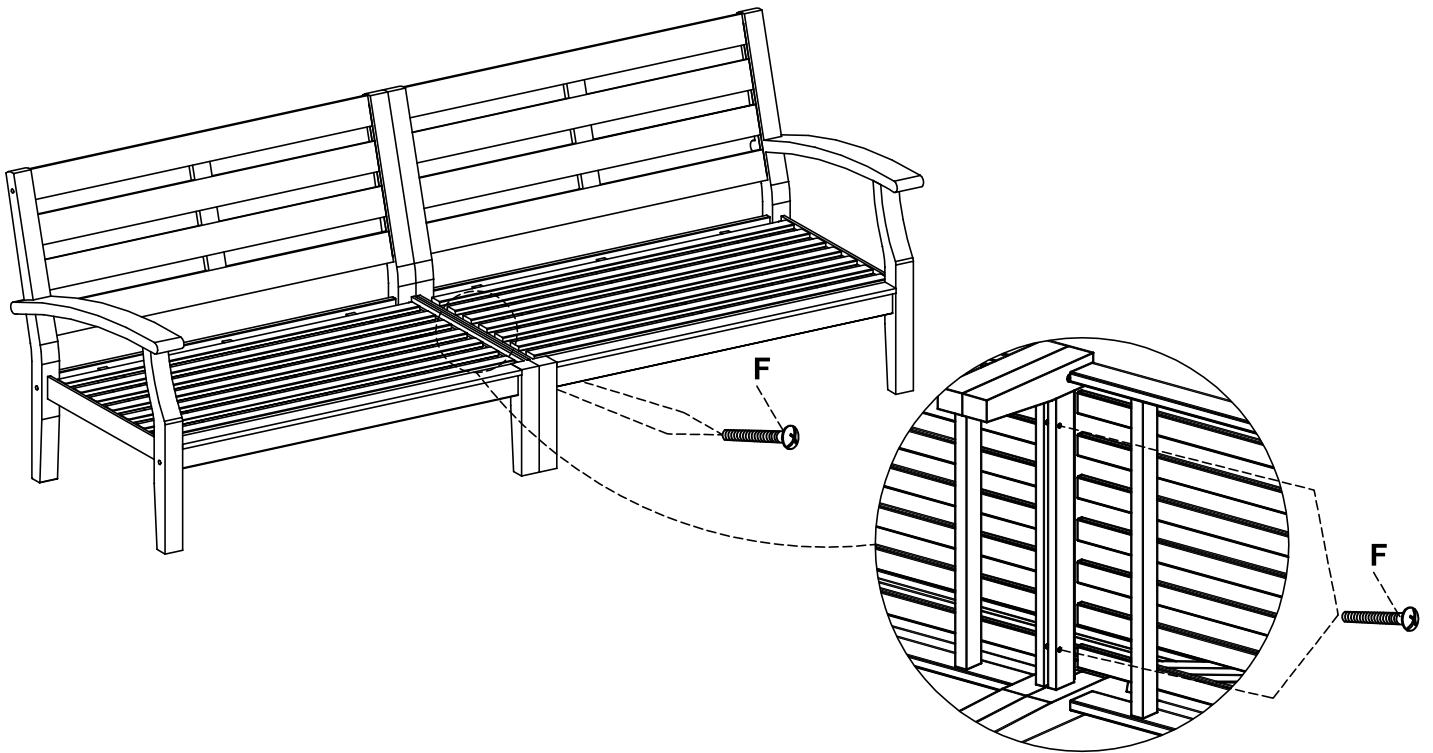


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS


E011LS-R(3A) WOODEN RIGHT ARM LOVESEAT

A Right side frame

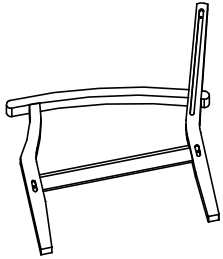


1pc

B Left side frame

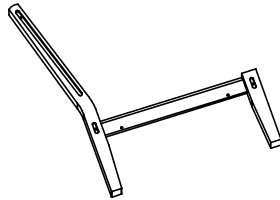


1pc

C Back Rest

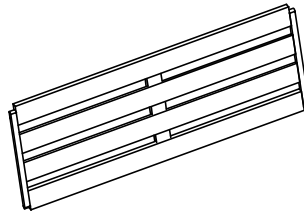

1pc

D Seat

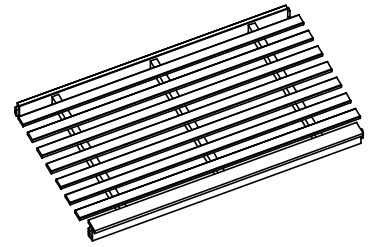

1pc

E 1 3/4" Bolt



2pcs + 1pc reserve

F 2 1/4" Bolt



4pcs + 1pc reserve

G Wooden cap




6pcs + 1pc reserve




This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach the back rest(C) and seat(D) into right and left side frame(A&B) to the matching holes. Secure using 1 3/4" bolt(E) and 2 1/4" bolts(F) to left side frame(B), with screwdriver (not provided), position as shown. Don't fully tighten at this step.

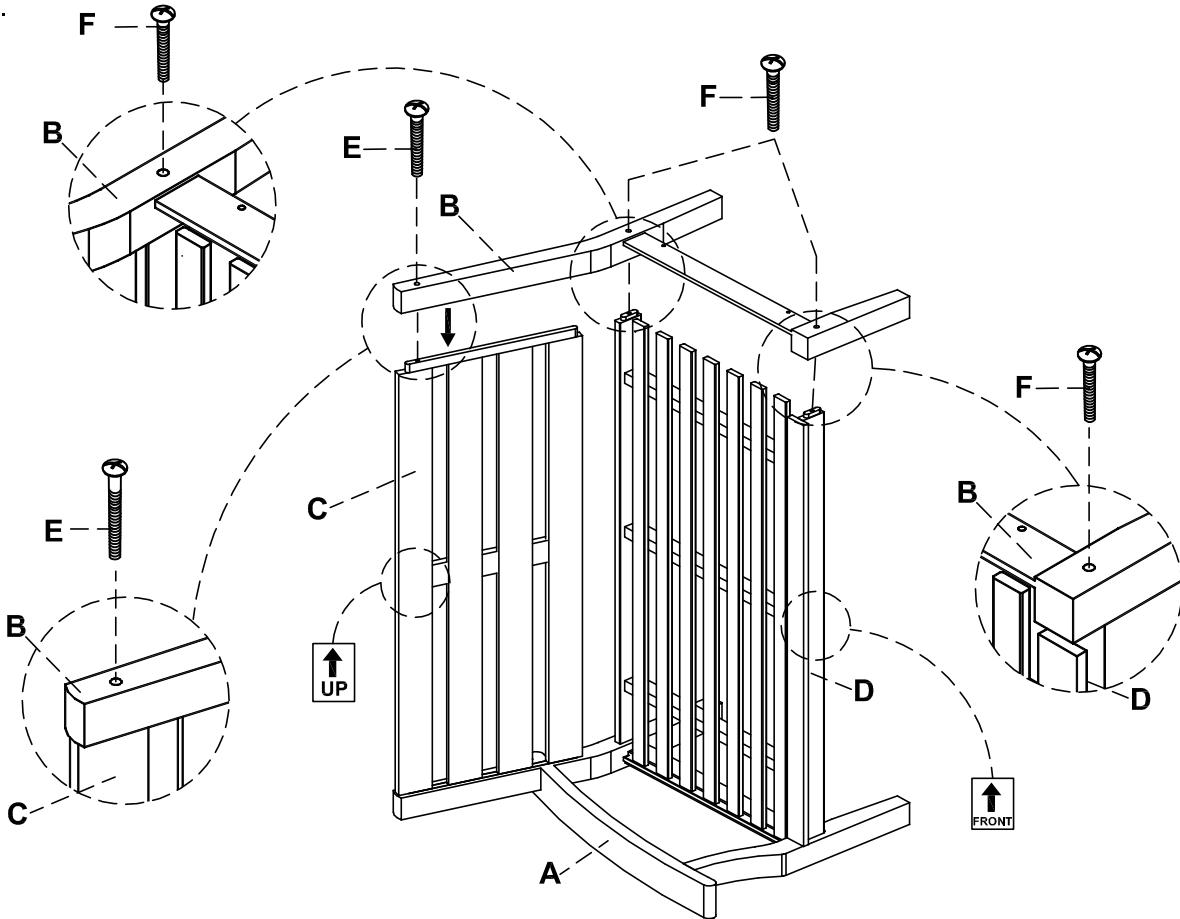


- 2** Upright the pre assembled, insert bolt(E) and bolts(F) with screwdriver (not provide). Note : To assembled the left side frame(B) was already shown in step 1. Tighten all bolts using screddriver (not provide).

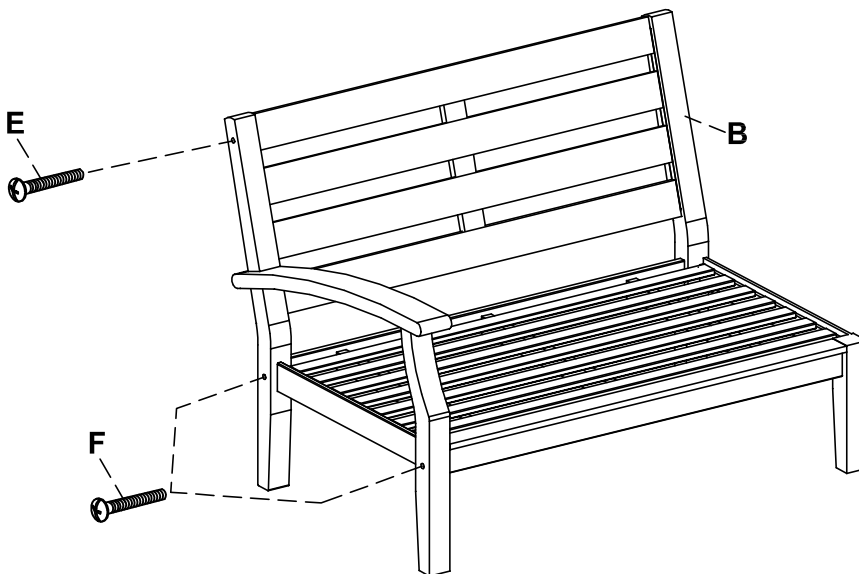

3 Tapping the wooden caps(G) to cover bolts using rubber mallet (not provided).The chair is now ready to use.

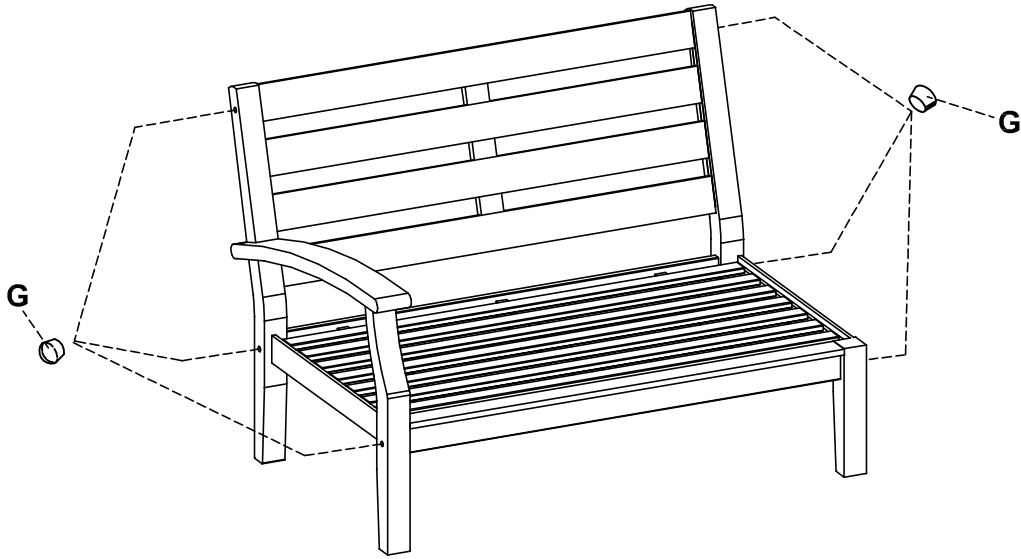

4 To joining the other chair, secure using 2 1/4" bolts(F) with screwdriver (not provided) from underneath of seat.

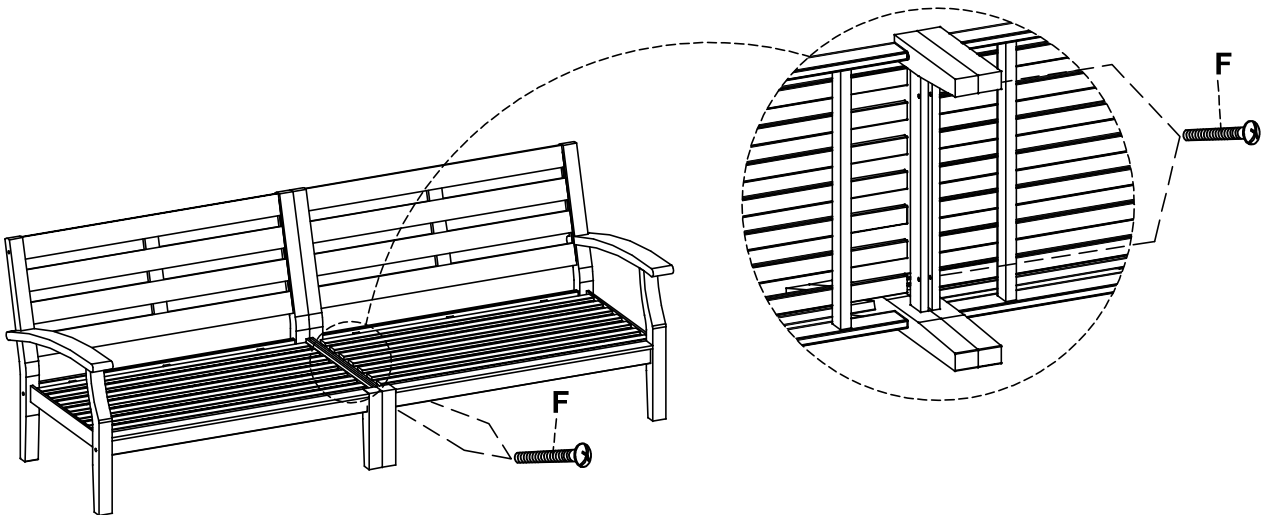


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.


ASSEMBLY INSTRUCTIONS

E011CE(3A) WOODEN EXTENSION CHAIR


A Right side frame **B** Left side frame **C** Back Rest **D** Seat

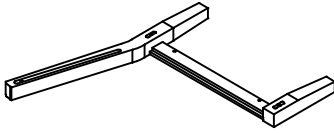


1pc

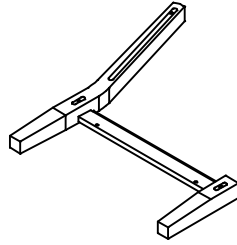

1pc

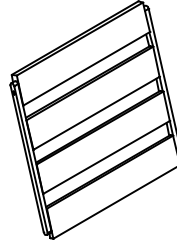


1pc

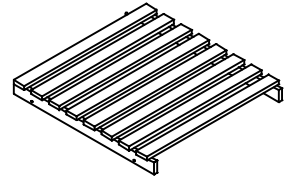


1pc

E Front apron **F** Back apron **G** 1 3/4" Bolt **H** 2 1/4" Bolt

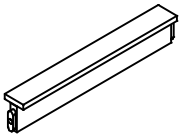


1pc

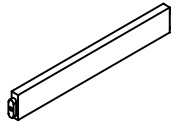

1pc




2pcs + 1pc reserve



6pcs + 1pc reserve


I 1" Screw **J** Wooden cap



4pcs + 1pc reserve




6pcs + 1pc reserve

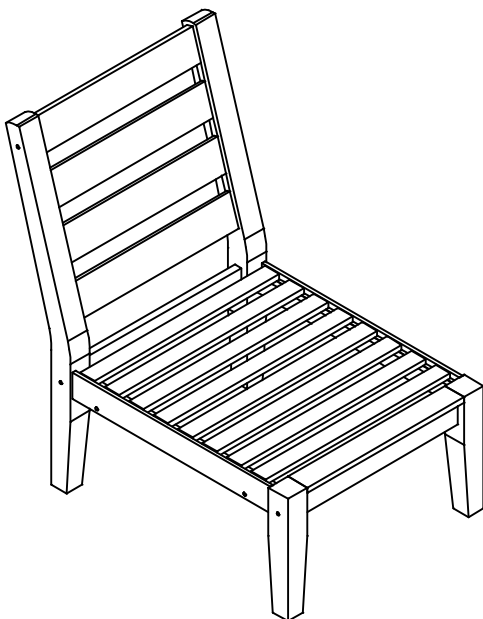


This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Attach the back rest(C) and aprons(E & F) into right and left side frame(A&B) to the matching holes. Secure using 1 3/4" bolt(G) and 2 1/4" bolts(H) to left side frame(B), with screwdriver (not provided), position as shown. Don't fully tighten at this step.

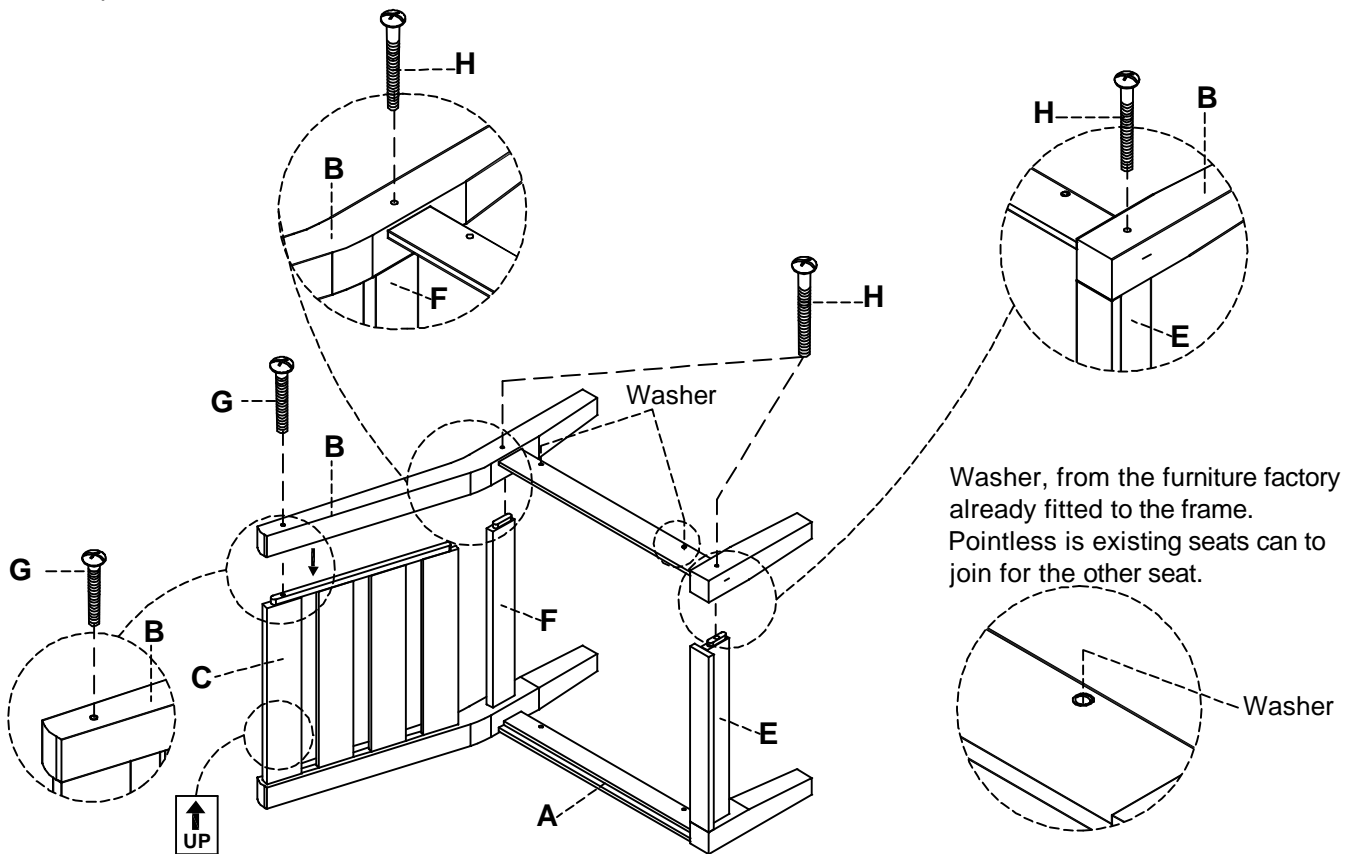


2 Upright the pre assembled, attach seat(D) and secure right frame(A), using bolt(G) and bolt(H) with screwdriver (not provide). Note : To assembled the left side frame(B) was already shown in step 1. Don't fully tighten at this step.

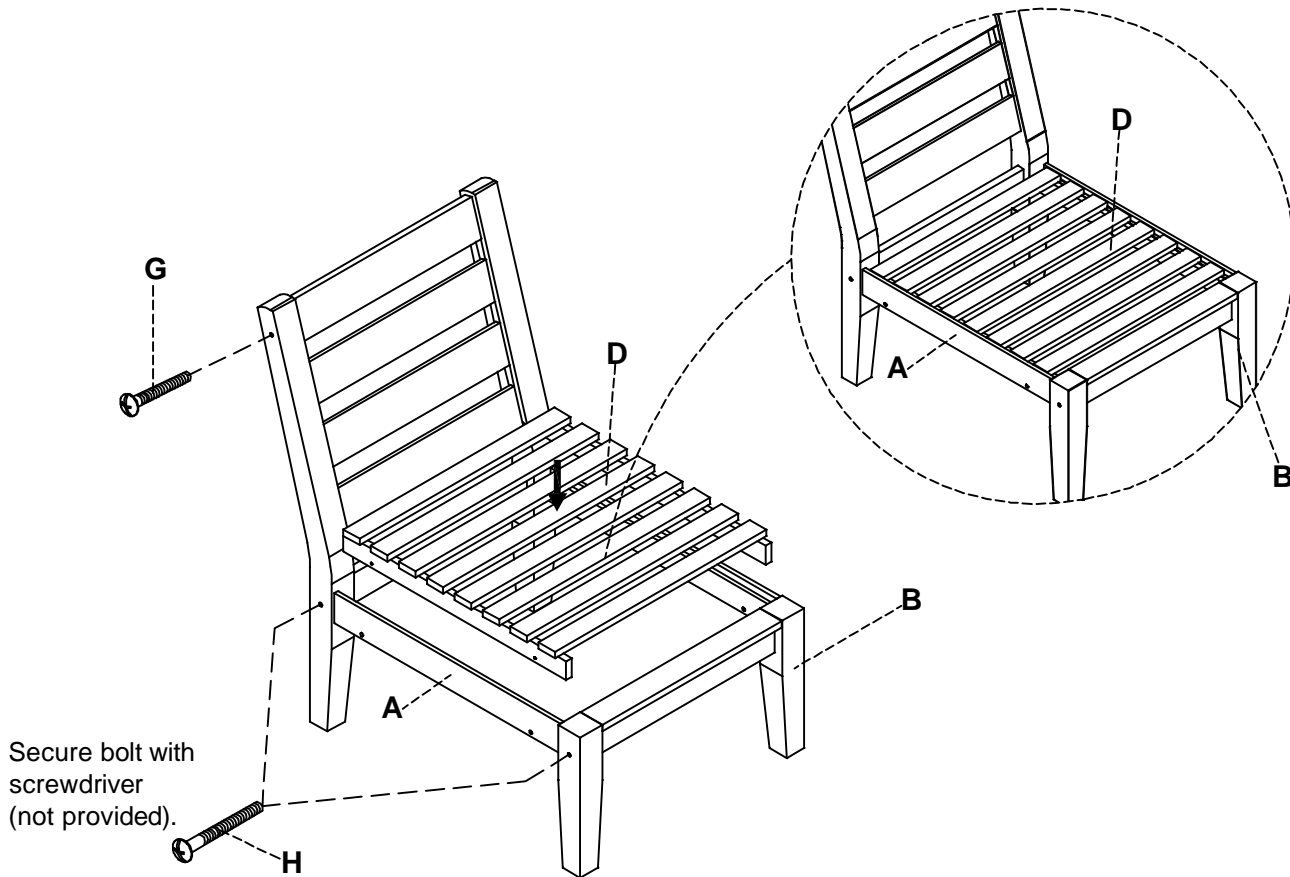


- 3** Secure the seat(D) and frame(A&B), using 1" screws(I), position as shown. Tighten all bolts and screws using screwdriver (not provided).

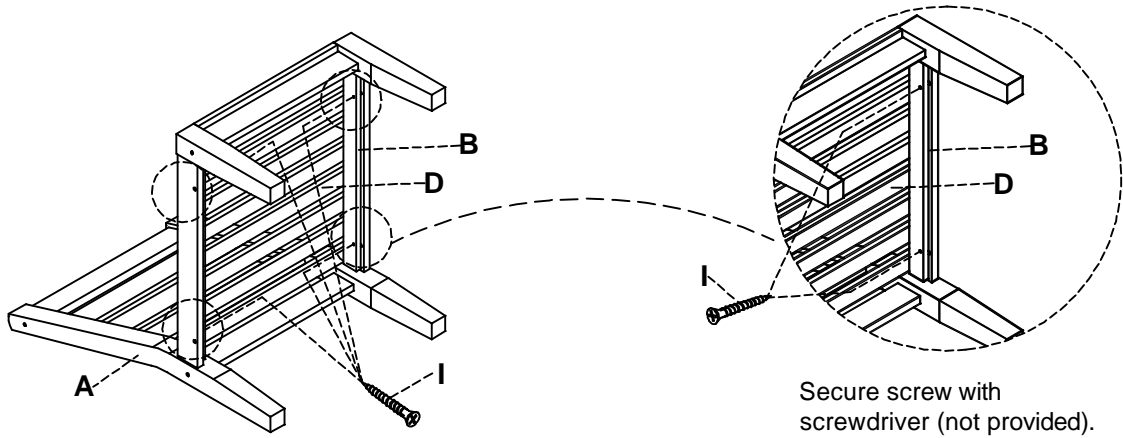

- 4** Tapping the wooden caps(J) to cover bolts using rubber mallet (not provided).The chair is now ready to use.

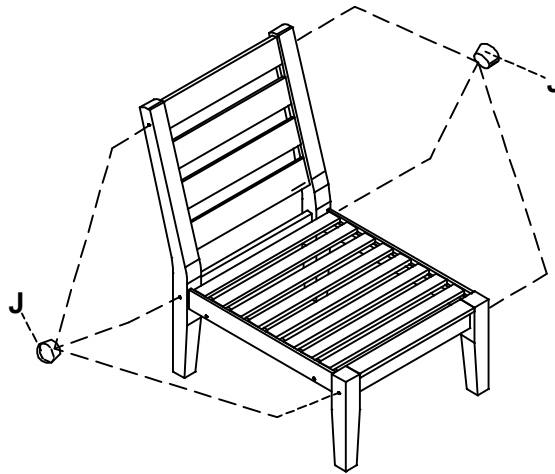

- 5** To joining the other chair, secure using 2 1/4" bolts(H) with screwdriver (not provided) from underneath of seat.





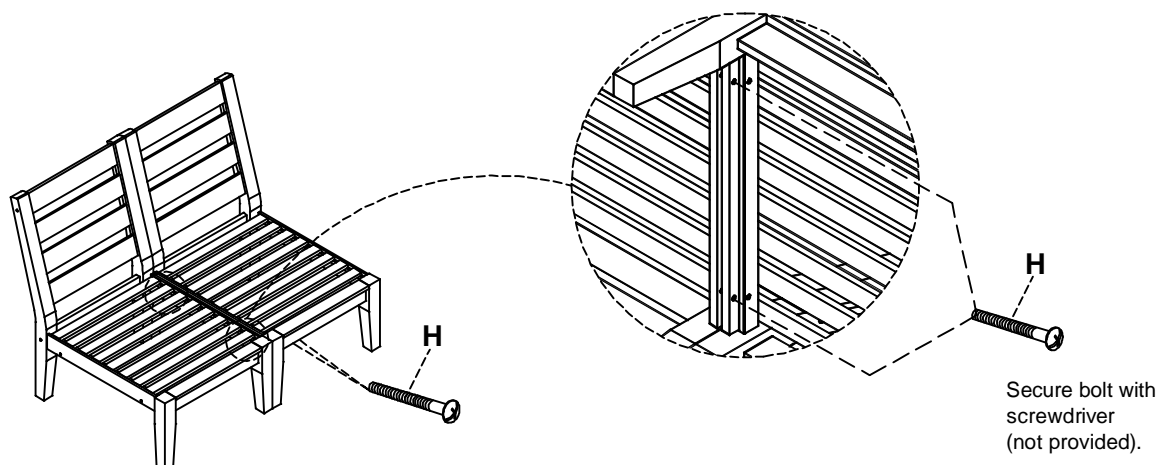






Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

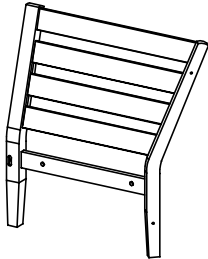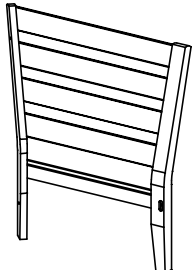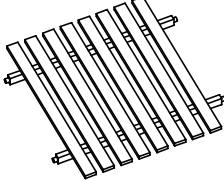
E011CR(3A) WOODEN CORNER CHAIR

A Right side frame  1pc	B Left side frame  1pc	C Seat  1pc	D Left apron  1pc
E Right apron  1pc	F Leg  1pc	G 2" Bolt  4pcs + 1pc reserve	H 2 1/4" Bolt  4pcs + 1pc reserve

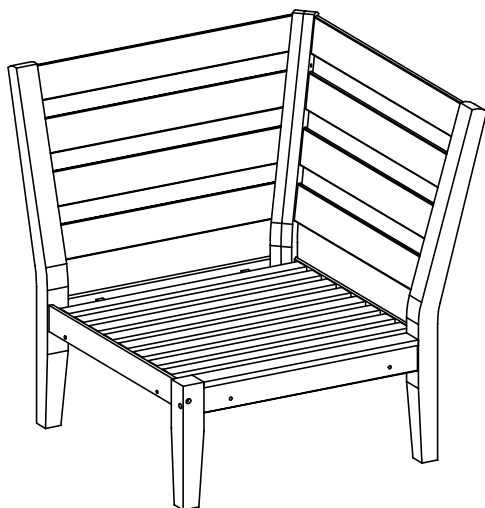


This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Attach the right apron(E) and left apron(D) to the leg(F). Secure using 2 1/4" bolts(H) ,with screwdriver (not provided). Put the seat(C) to left apron(D), and then attach right side frame(A) into the assembly to the matching holes, secure using 2" bolt(G) to left side frame(B), with screwdriver (not provided), position as shown. Don't fully tighten at this step.

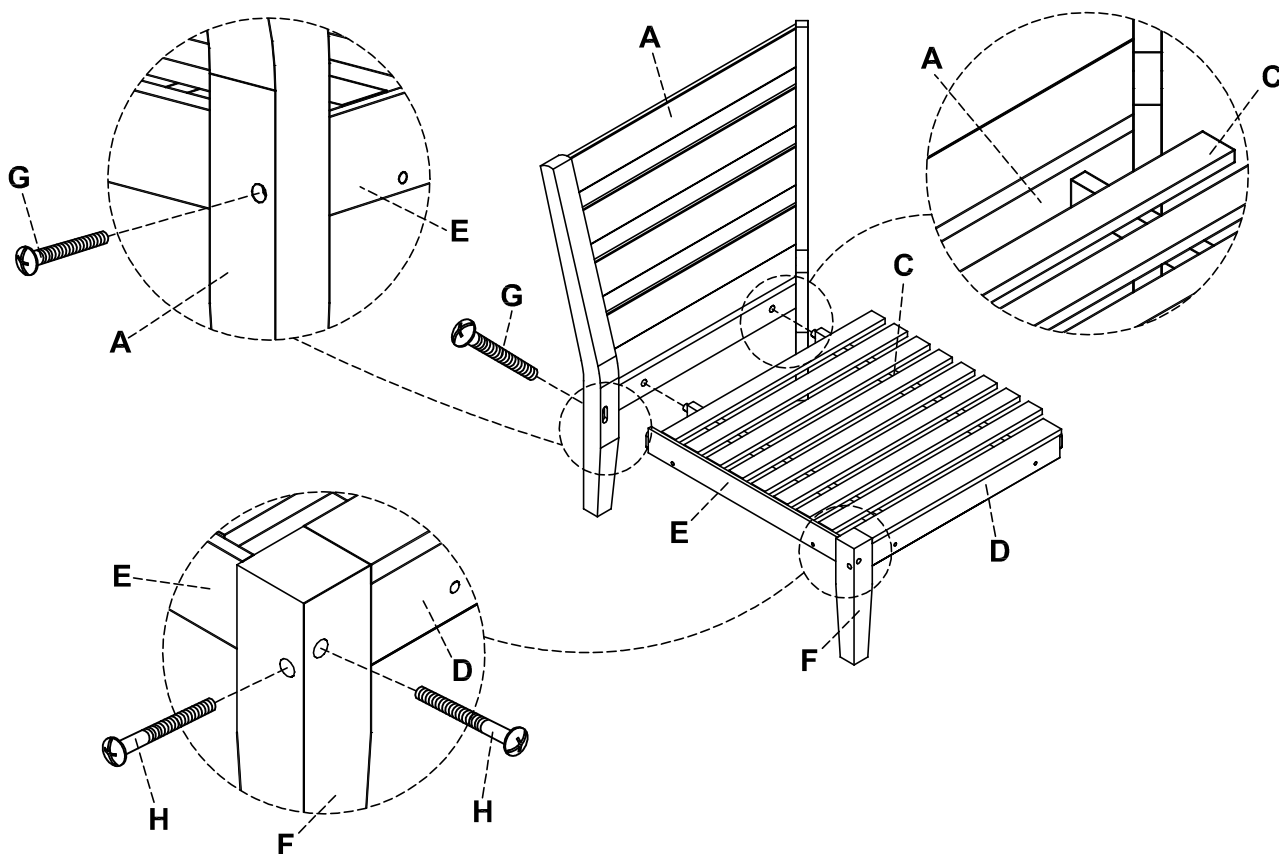


2 Attach the left side frame(B) into the pre assembly from step 1 to the matching hole, secure using 2" bolt(G) with screwdriver (not provide), position as shown. Don't fully tighten at this step.

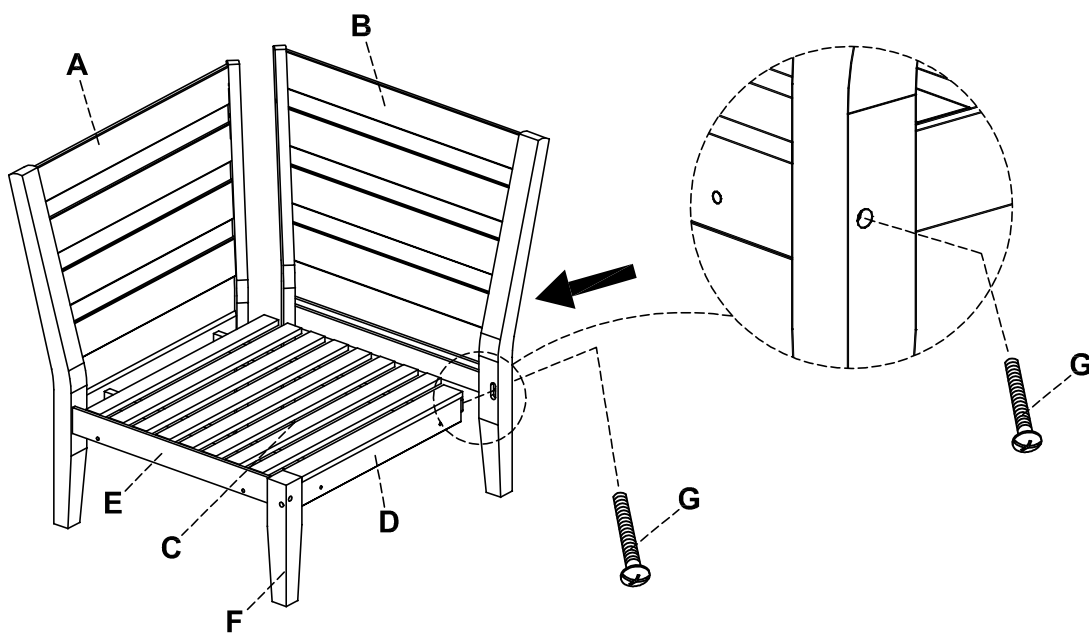

3 Insert bolts(G) with screwdriver (not provided). Note : To connect the right and left side frame(A&B). Tighten all bolts using screwdriver (not provided).

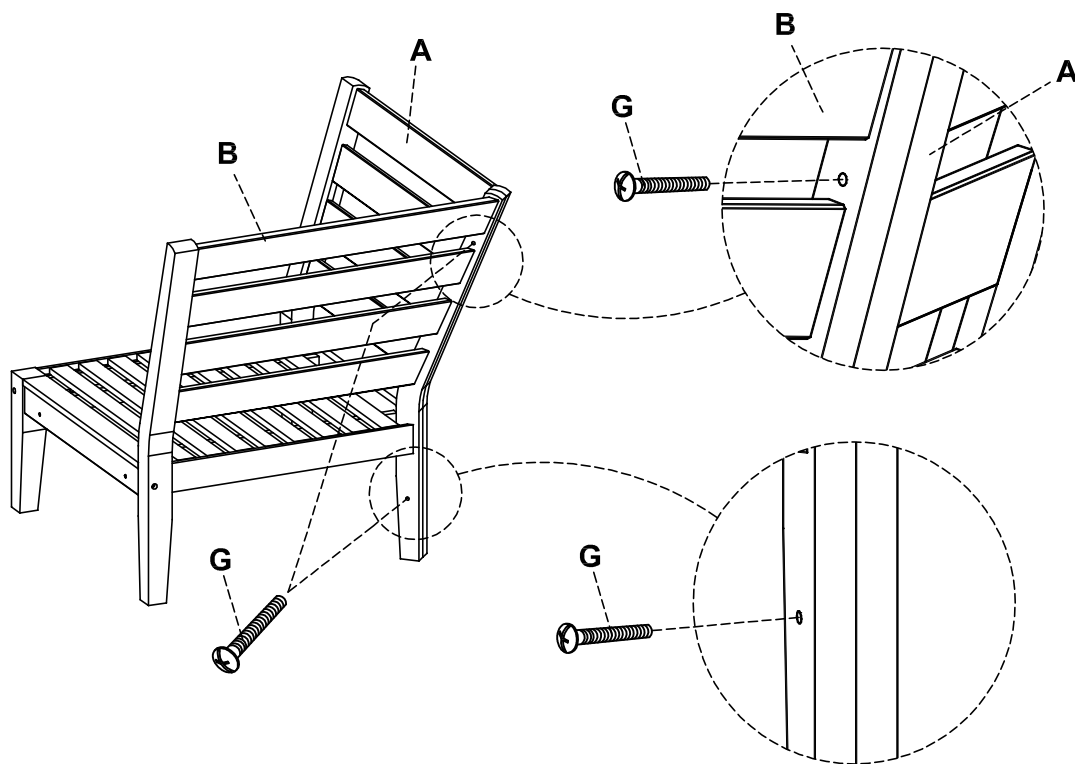

4 To joining with the other chair, secure using 2 1/4" bolts(H) with screwdriver (not provided) from underneath of seat.

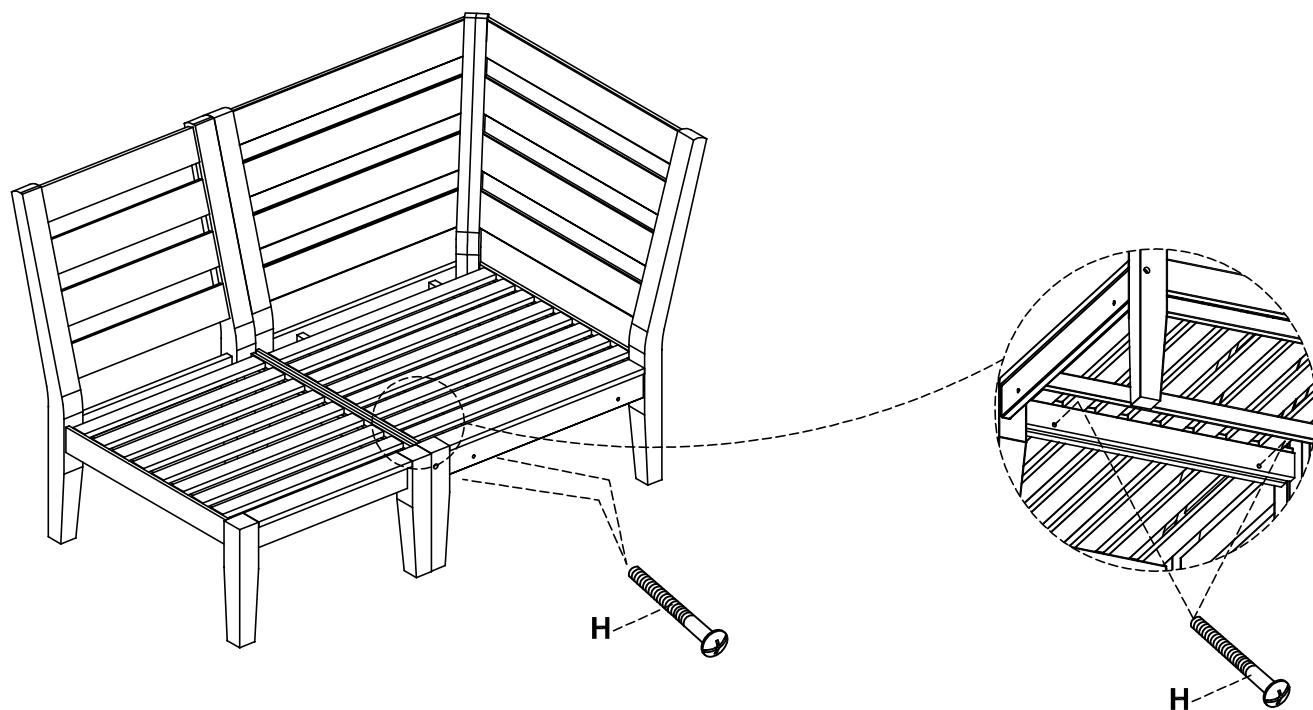

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.