

# Tie and Belt Valet


3H98

**Rubbermaid** configurations™

Rubbermaid Incorporated, Huntersville, NC 28078-1801 | 1-888-895-2110  
[www.rubbermaid.com](http://www.rubbermaid.com) A ~~Newell~~ Rubbermaid Brand




Tools Needed  
for Installation




Description	Part Number	Quantity	
Sliding Rack	10606132	1	
Outer Tube Frame	1060661	1	
Bar Lock	1060685	1	
#10 x 7/8" Bolt	-	1	
Nylon Lock Nut	-	1	


## Installation Steps

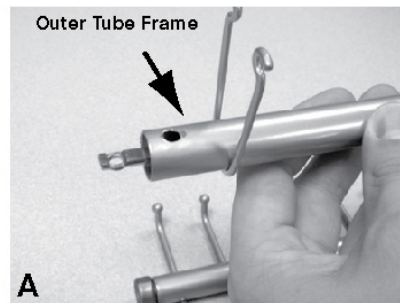


Insert Sliding Rack into Outer Tube Frame while making sure that the hole in the Sliding Rack is on the same end as the hole in the Outer Tube Frame. The hooks should be facing up.

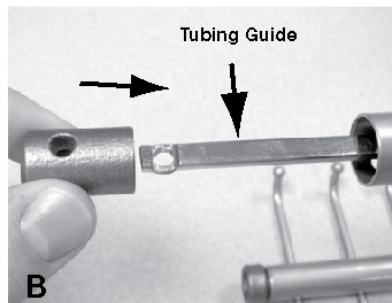


Insert Bar Lock onto Tubing Guide.

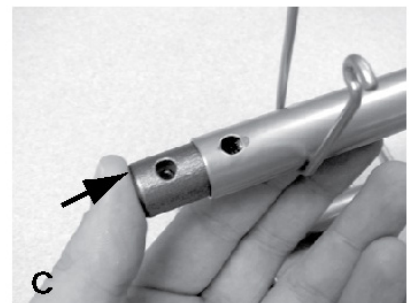


Insert Bar Lock and Tubing Guide into Outer Tube Frame while aligning holes in Bar Lock and Outer Tube Frame.

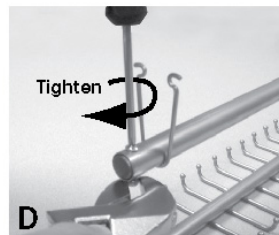


Insert Bolt through hole and tighten with a wrench and screwdriver.

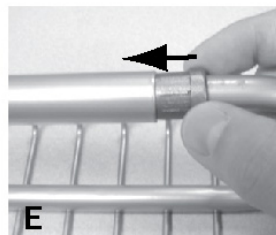

Insert Sliding Rack bushing into Outer Tube Frame.

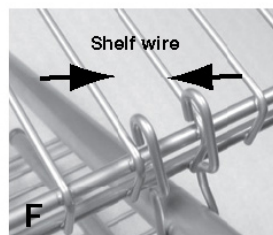

At the desired location, hang hooks over front edge of shelf. Make sure that the hooks are located **between** the shelf wires.

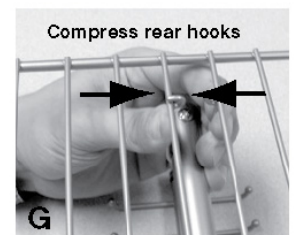

Compress rear hooks together and attach them to the shelf wire.