

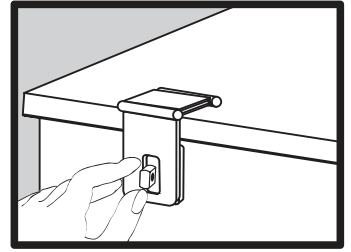


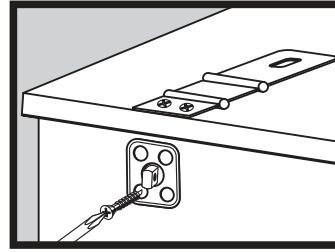

Wear Safety Goggles  
Utilice Gafas Protectoras

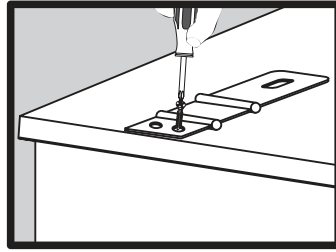

## English

Ideal for chests, cabinets and doors.  
Screws are concealed when hasp is locked.

## Instructions:

1. Place hasp in desired location and mark screw holes.
2. Drill 3/32" pilot holes.
3. Install and tighten hasp.
4. Align staple with hasp and mark screw holes.
5. Drill 3/32" pilot holes.
6. Install and tighten staple.

## Español

Ideal para baúles, gabinetes y puertas. Los tornillos se ocultan al cerrar el pasador.

## Instrucciones:

1. Coloque el pasador en la ubicación deseada y marque los orificios para los tornillos.
2. Perfore orificios guía de 3/32" (2.4mm).
3. Instale y ajuste el pasador.
4. Alinee la grapa con el pasador y marque los orificios para los tornillos.
5. Perfore orificios guía de 3/32" (2.4mm).
6. Instale y ajuste la grapa.

MADE IN CHINA  
HECHO EN CHINA

Distributed by  
Home Depot U.S.A., Inc.  
2455 Paces Ferry Rd. NW  
Atlanta, GA 30339