
## **ASSEMBLY INSTRUCTION**


## RATTAN FURNITURE

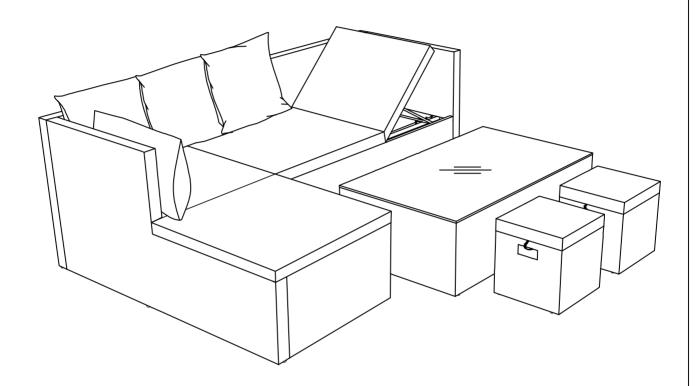

## WF198983AAC; WF198984AAC


## Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

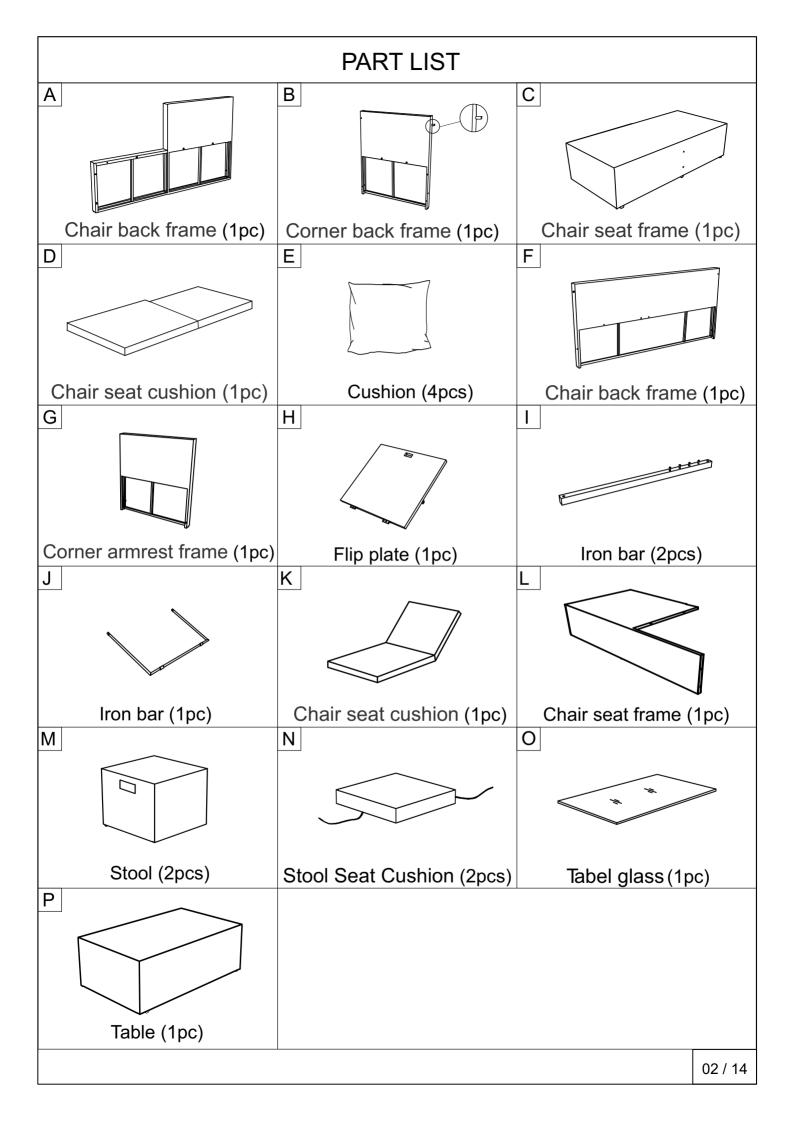


HARDWARE		
1	2	3
Bolt M6 X 30	Bolt M6 X 40	Bolt M6 X 70
(8pcs)	15 + 2pcs (extra 2pcs)	(4pcs)
4	5	6
Bolt M6 X 20	Washer Ø6 x 14	Ø6 x 16 x 2
(2pcs)	27 + 2pcs (extra 2pcs)	(2pcs)
7	8	9
Ø6 x 20 x 5	Eru M6	Allen
(4pcs)	(2pcs)	(2pcs)
10	11	
•		
Ø13 x1	Spanner No.10	
(5pcs)	(1pc)	
		03 / 14

**Step 1:** Connect chair back frame (A) and corner back frame (B) with bolt (3), washer (5).

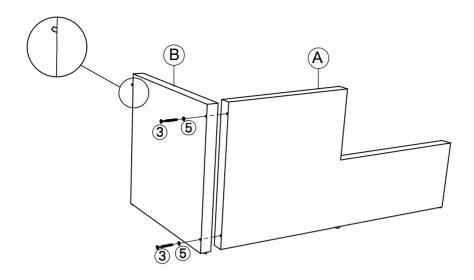

③\*2 5\*2 A\*1 B\*1

**Step 2:** Connect part from Step 1 and chair seat frame (C) with bolt(1), bolt (2), washer (5).

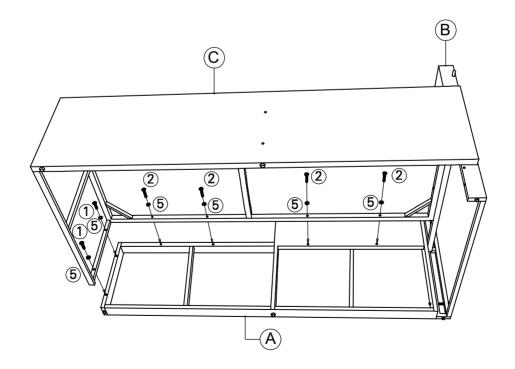


1) \*2

2 \*4

**(5)\*6** 


C\*1


Step 3: Connect part from Step 2 with bolt (2), washer (5).

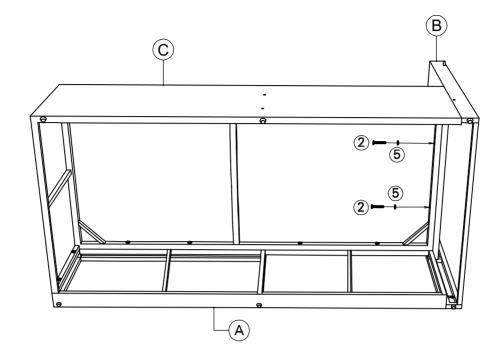


②\*2 **⑤**\*2

Step 4: Connect part from Step 3 with bolt (1), washer (5).

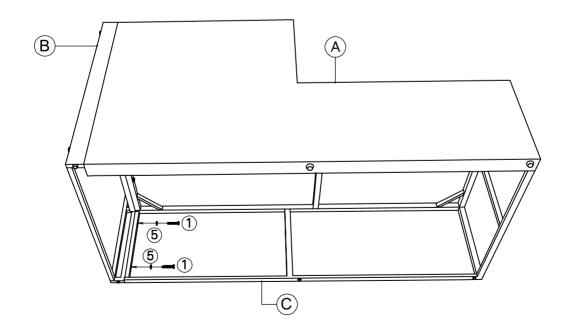


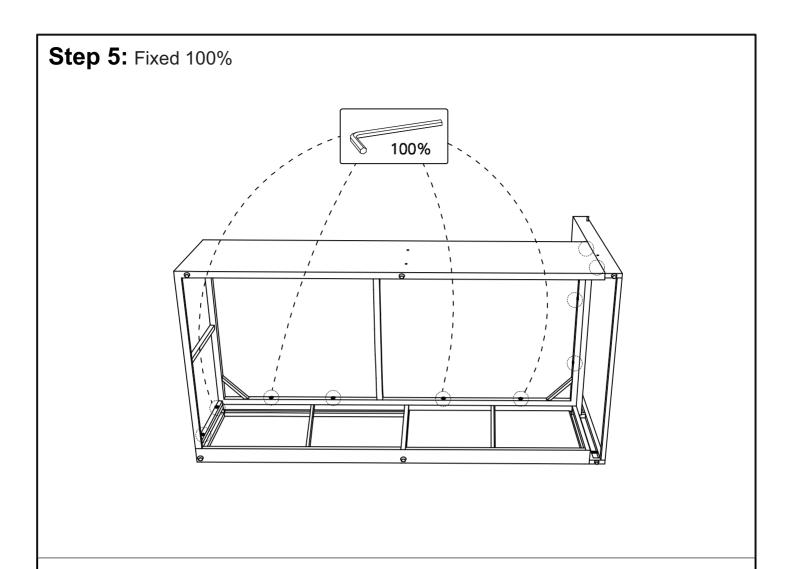



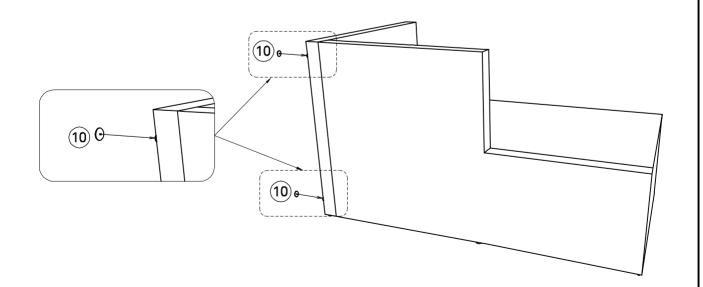


**Step 7:** Connect Flip plate (H) and iron bar (J) with bolt(1), washer (5), washer(6) and eru(8).

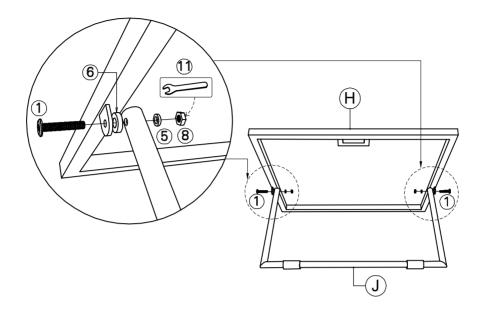


①\*2 ⑤\*2 ⑥\*2 ⑧\*2 H \*1 J \*1

Step 8: Connect chair seat frame (L) and Flip plate (H) with bolt (4).

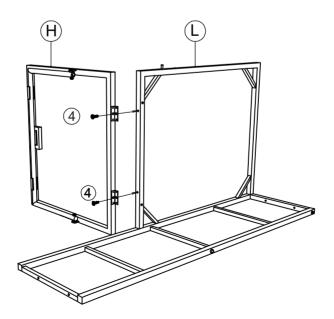


**Step 9:** Connect chair back frame (F) and Corner armrest frame (G) with bolt (3) and washer (5).

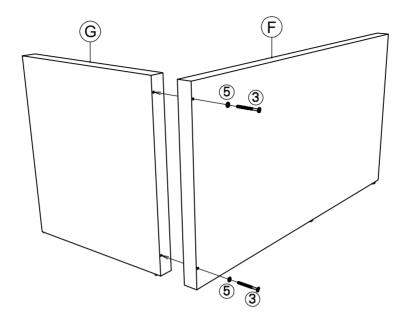


③\*2 5\*2 F \*1 G\*1

Step 10: Connect part from Step 8 and part from Step 9.

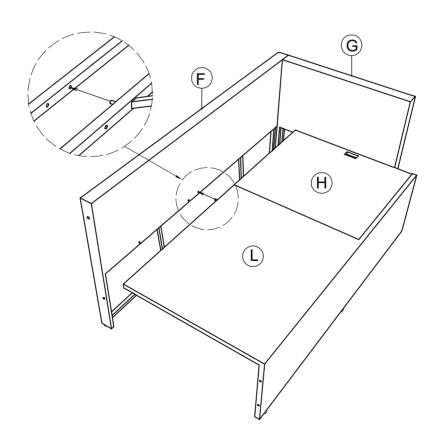


Step 11: Connect part from Step 10 with bolt (2) and washer (5).

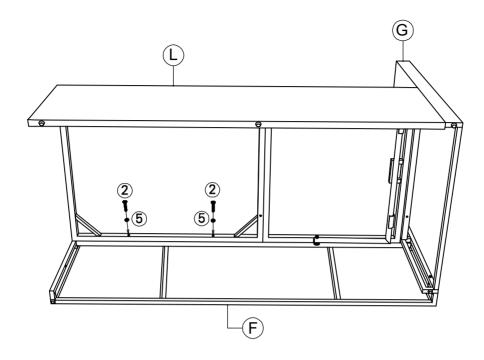


②\*2 ⑤\*2

Step 12: Connect part from Step 11 with bolt (1) and washer (5).

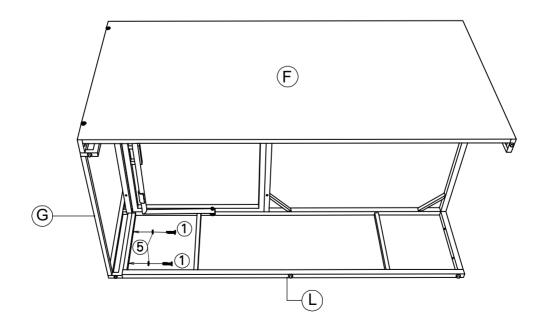


**Step 13:** Connect part from Step 12 and iron bar (I) with bolt (2) ,washer (5) and washer (7).

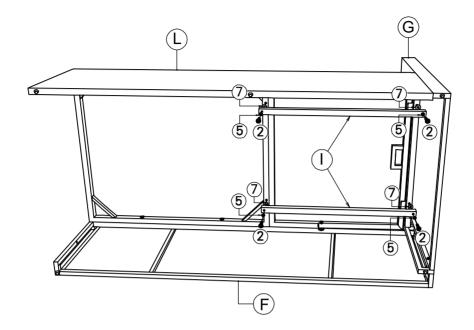


2\*4 5\*4 7\*4 I \*2


Step 14: Connect part from Step 6 and part from Step 13.

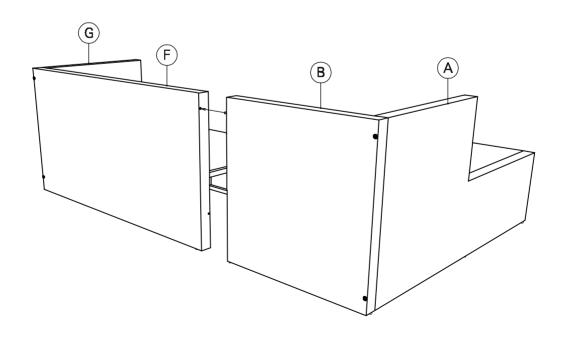

Step 15: Connect part from Step (14) with bolt (2), washer (5).

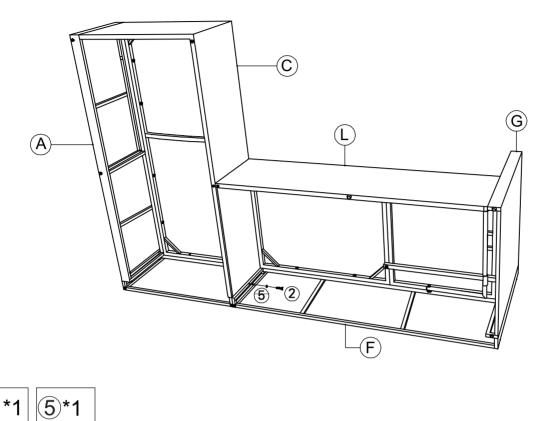


Step 16: Connect part from Step 15 with bolt (2),washer (5).

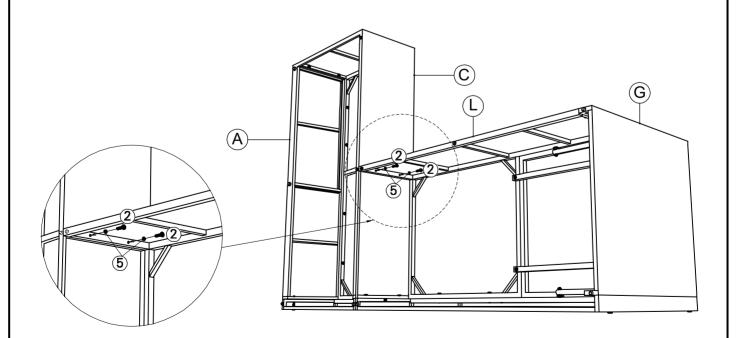


**2**\*2

Step 17: Fixed 100%.

Step 18: Connect part from Step 17 with detail (10).

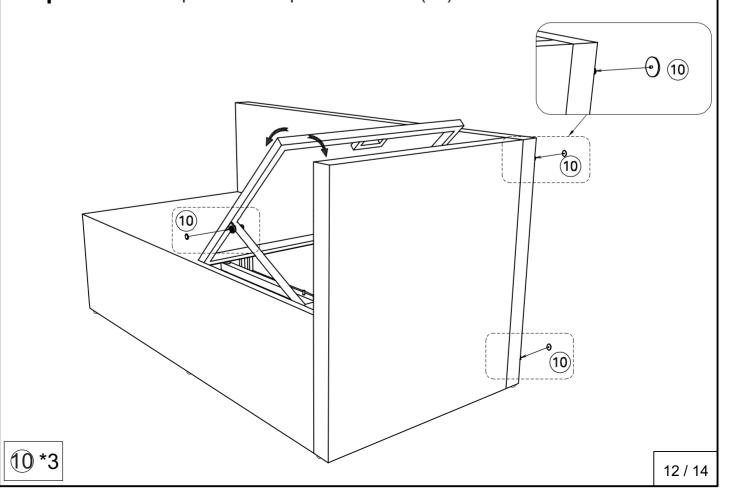


**Step 19:** Put on Chair Seat Cushion (D), Chair Seat Cushion (K) and Cushion (E) to complete Chair.

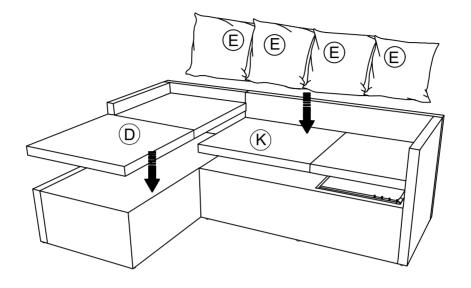


D \*1 E\*4 K\*1

Step 20:Complete chair .

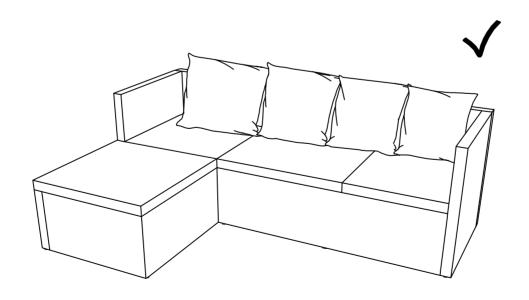

Step 21: Put on Stool Seat Cushion (N) to complete Stool (M).

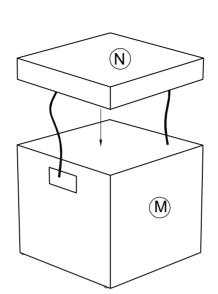

x2

M \*2 N \*2

**Step 22:** Put on Glass Table (O) to complete Table (P).

