


Cosmopolitan Grand Single Rod Set

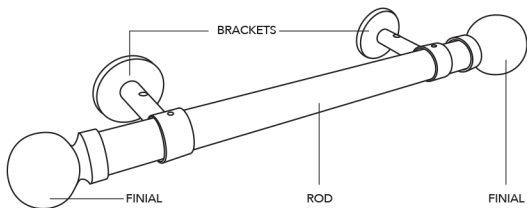


Mounting the Brackets

Mounting the Brackets


STEP 1:

Place the panel on the rod. To ensure it drapes at the correct length, hold it up to the spot you wish to install it; this will allow you to raise or lower your treatment as desired. After you've located the ideal location, use a pencil to mark the wall where the top of the rod is resting.

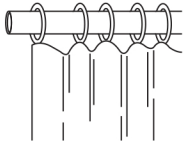

STEP 2:

Remove the panel from the rod and then center the rod over the window opening at the desired height. Using the pencil, mark where the ends of each rod are positioned; if you're using a center bracket, note the middle point between these two spots as well. Measure 2" inward from the marks you've made on both ends and mark those spots. This is where the brackets will be installed.

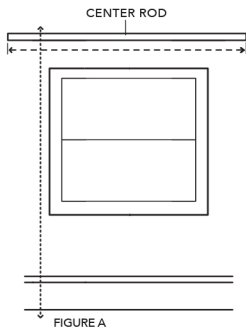

STEP 3:

Place bracket level against wall at the marked spots. Using a pencil, lightly draw a circle around the base of the bracket onto wall, see Figure A.

Check to make sure the circles are level & aligned with each other.


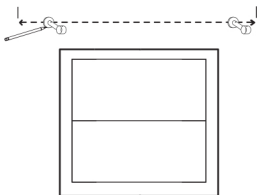


FIGURE B



Mark all holes needed showing locations of screw holes for all brackets.

Remove mounting plate and center it inside of the circle outline on wall. Mark the screw hole locations for all brackets. See Figure B.

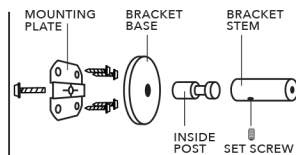


FIGURE C

Place bracket base on top of mounting plate and thread in the inside post and tighten all the way.

FIGURE D

Insert bracket stem into inside post and secure with set screw.


Attach the metal mounting plate to the wall, aligning the holes in the plate with the marks made in the previous step, see figure B. Be sure and attach the plate to the wall with the appropriate mounting hardware. (It is always recommended to try and attach to the wood studs inside the wall. Where this is not possible please use a wall anchor suitable to carry the weight of your hardware selection as well as your draperies and any accessories.)

Attaching Finials

For treatments using rings and do not have a center support bracket

Insert the rod through the first bracket and then place the required number of rings on the rod but leave two rings out. Then slide the rod through the second bracket. All the rings should now be in between the two brackets. For split drapery, add a ring at each end of the rod and then attach the finial. See Page 9 Attaching Finials.

This will prevent drapery to be pulled all the way to one side or the other when opening and closing it. If you are opening your drapery only from one side, leave one ring between the finial and bracket on the side you won't be opening it from.

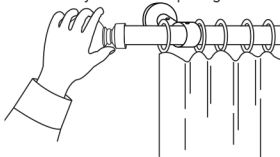

For treatments without rings and no center support bracket

Attach the finial to one end of the rod, and slide it through the first bracket.

Position the drapery panel on the rod, and then slide it through the last bracket.

Cap the opposite end with the second finial.

For treatments using rings and have a center support bracket

Insert the rod through the end and center support bracket. Before inserting it through the last bracket, place half of the required number of rings on the rod but leave two rings out. Then slide the rod through the last end bracket.

Go back to the opposite side and take the rod out of the end bracket to allow you to place the remaining of the rings minus two of them. All the rings should now be in between the two end brackets and center support bracket. For split drapery, add a ring at one end of the rod and then attach the finial. See Page 9 Attaching Finials.

This will prevent drapery to be pulled all the way to one side or the other when opening and closing it. If you are opening your drapery only from one side, leave one ring between the finial and bracket on the side you won't be opening it from.