

## High Density Foam Tape Weatherstrip


Easy to Use:

1. Unroll tape and apply to clean and dry surface above 40°F. Press in place and trim to length. Peel off paper backing.

Door: Top/Latch side – Apply to door stop so closing door compresses tape.

Hinge side – Apply to door jamb so tape is compressed between jamb and edge of closing door.

Window: Place tape on bottom of sash rail to form seal when window is closed.

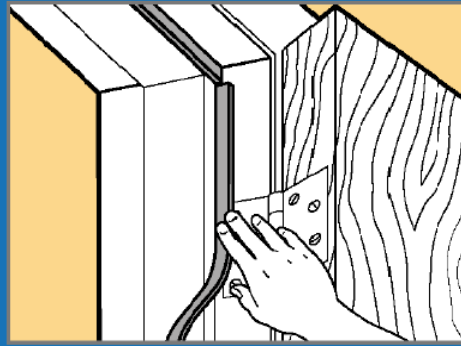

## Burlete de Cinta de Espuma de Alta Densidad

Fácil de Usar :

1. Desenrolle la cinta y aplíquela a una superficie limpia y seca con temperatura sobre 5 °C (40 °F). Presione en su lugar y corte al largo deseado. Retire el papel protector.

Puerta : Lado de Arriba y de Cerradura – Aplique al tope de la puerta para que al cerrarla la cinta se comprima.

Lado con las bisagras – Aplique a la jamba de la puerta para que la cinta se comprima entre la jamba y la orilla de la puerta al cerrar.

Ventana : Coloque la cinta en la parte inferior del riel del marco para formar un sello cuando la ventana está cerrada.