



# ASSEMBLY INSTRUCTIONS

## FULL HOUSE BED WITH TRUNDLE

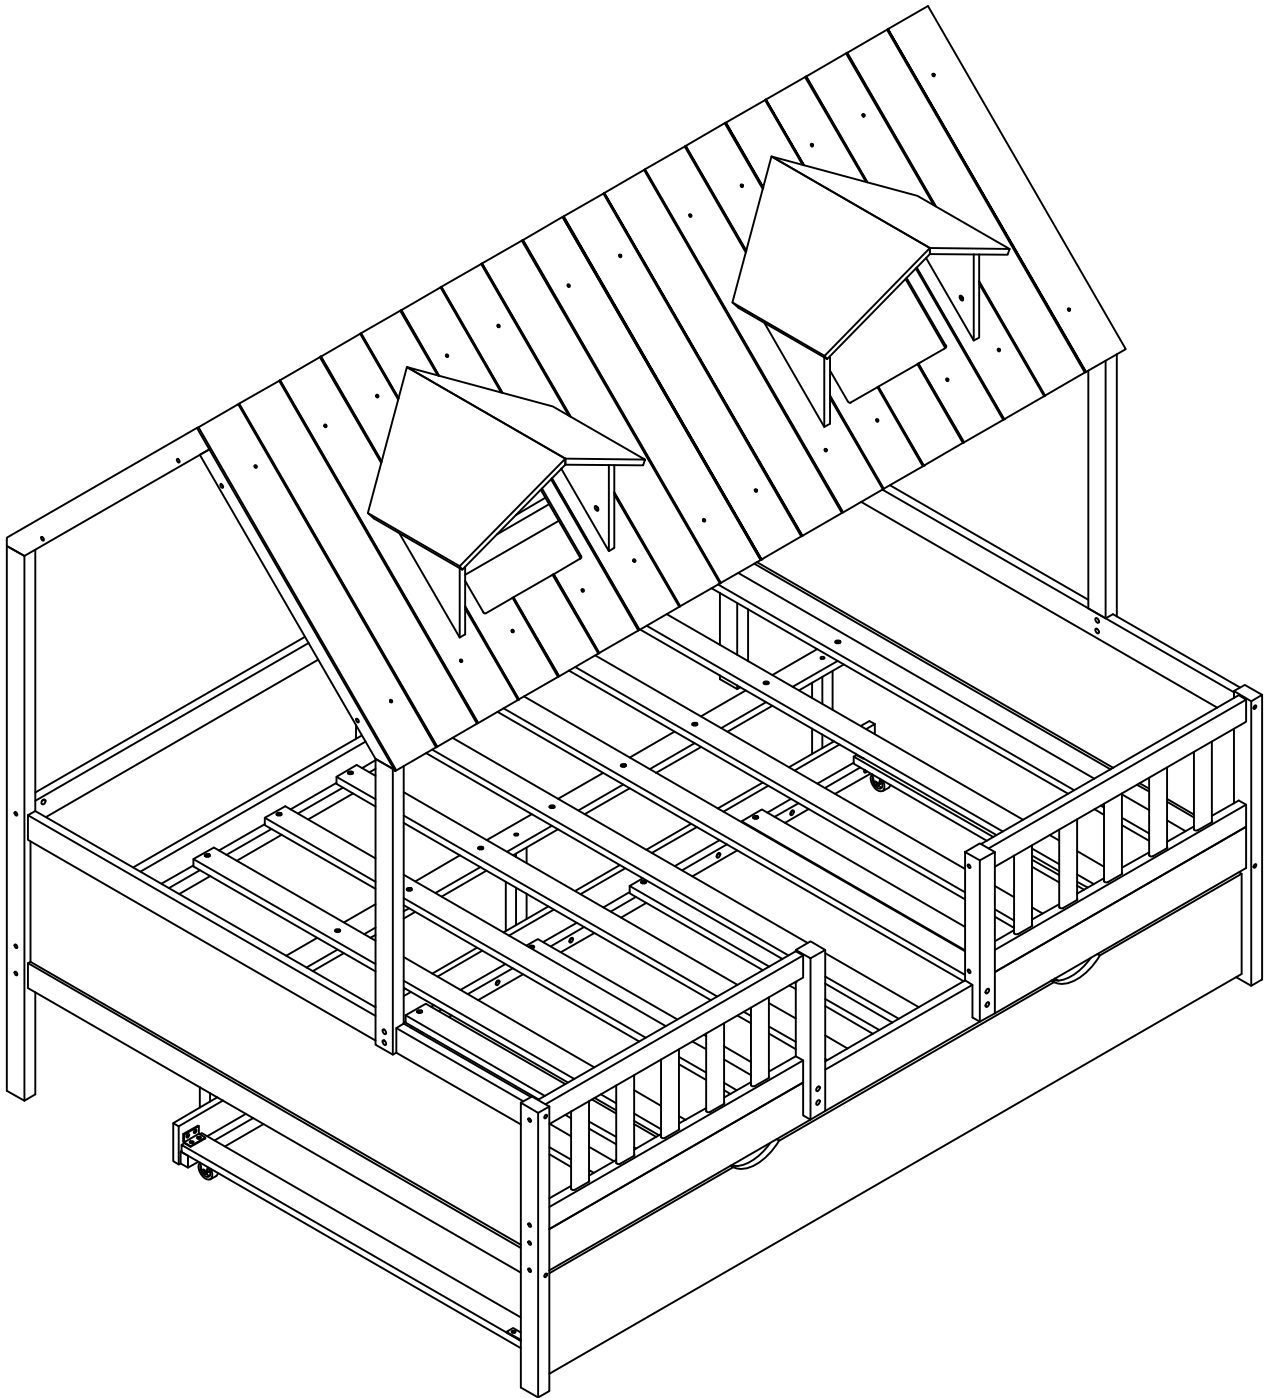

WF298175/WF298176





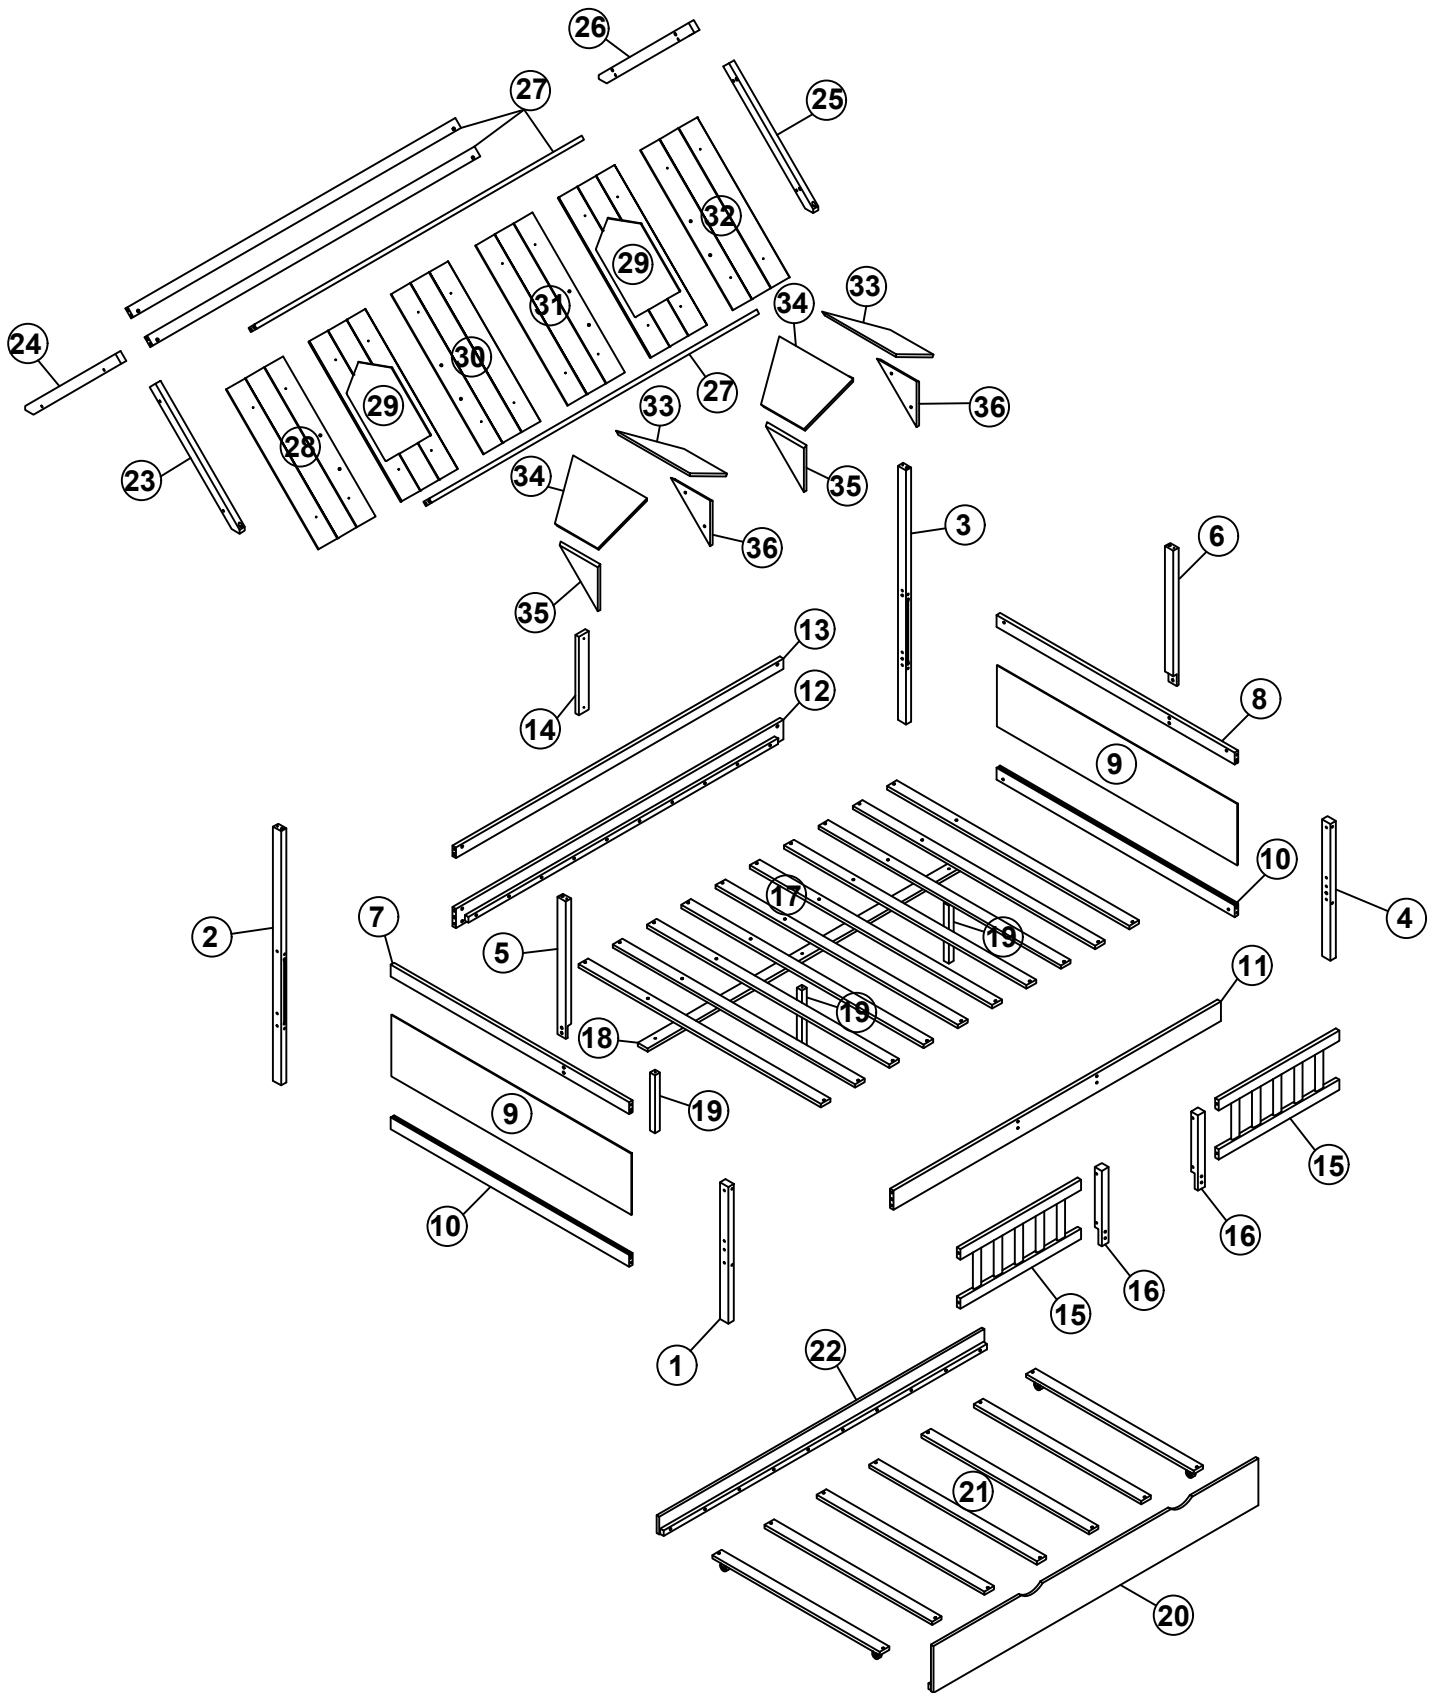















# ASSEMBLY INSTRUCTIONS



# ASSEMBLY INSTRUCTIONS

## PARTS LIST

















W298175

<b>1</b>	 Left front leg	1pc	<b>16</b>	 Front guard rails support	2pcs
<b>2</b>	 Left back leg	1pc	<b>18</b>	 Center rails	1pc
<b>3</b>	 Right back leg	1pc	<b>19</b>	 Center rails support legs	3pcs
<b>4</b>	 Right front leg	1pc	<b>20</b>	 Trundle front panel	1pc
<b>5</b>	 Headboard panel	1pc	<b>22</b>	 Trundle back panel	1pc
<b>6</b>	 Headboard panel	1pc	<b>23</b>	 Roof left front crossbar	1pc
<b>11</b>	 Side rails	1pc	<b>24</b>	 Roof left back crossbar	1pc
<b>12</b>	 Side rails	1pc	<b>25</b>	 Roof right front crossbar	1pc
<b>13</b>	 Back guard rails	1pc	<b>26</b>	 Roof right back crossbar	1pc
<b>14</b>	 Back guard rails support	1pc	<b>27</b>	 Roof crossbar	4pcs



















# ASSEMBLY INSTRUCTIONS

## PARTS LIST

W298176


<b>7</b>	Headboard panels		1pc	<b>29</b>	Roof panels		2pcs
<b>8</b>	Headboard panels		1pc	<b>30</b>	Roof panels		1pc
<b>9</b>	Head board frames		2pcs	<b>31</b>	Roof panels		1pc
<b>10</b>	Headboard panels		2pcs	<b>32</b>	Roof panels		1pc
<b>15</b>	Front guard rails		2pcs	<b>33</b>	Window panels		2pcs
<b>17</b>	Slats		10pcs	<b>34</b>	Window panels		2pcs
<b>21</b>	Slats		7pcs	<b>35</b>	Window panels		2pcs
<b>28</b>	Roof panels		1pc	<b>36</b>	Window panels		2pcs

## HARDWARE LIST (WF298175)


<b>A</b>	Ø4x30		46PCS	<b>J</b>	4x58		1PC
<b>B</b>	Ø4x20		24PCS	<b>K</b>	6.5x90		2PCS
<b>C</b>	Ø4x15		32PCS	<b>L</b>	6.5x60		7PCS
<b>D</b>	Ø3.5x12		16PCS	<b>M</b>	Ø10x40		28PCS
<b>E</b>	1/4x90		12PCS	<b>N</b>	95x95x20		2PCS
<b>F</b>	1/4x75		22PCS	<b>O</b>	40x20x20		2PCS
<b>G</b>	1/4x45		8PCS	<b>P</b>	Ø38x46x38		4PCS
<b>H</b>	1/4x35		4PCS	<b>Q</b>	15x15x2		8PCS
<b>I</b>	1/4x25		4PCS	<b>R</b>	1/4x25		3PCS
					Phillip head screw Not include		


# ASSEMBLY INSTRUCTIONS

## Step 1

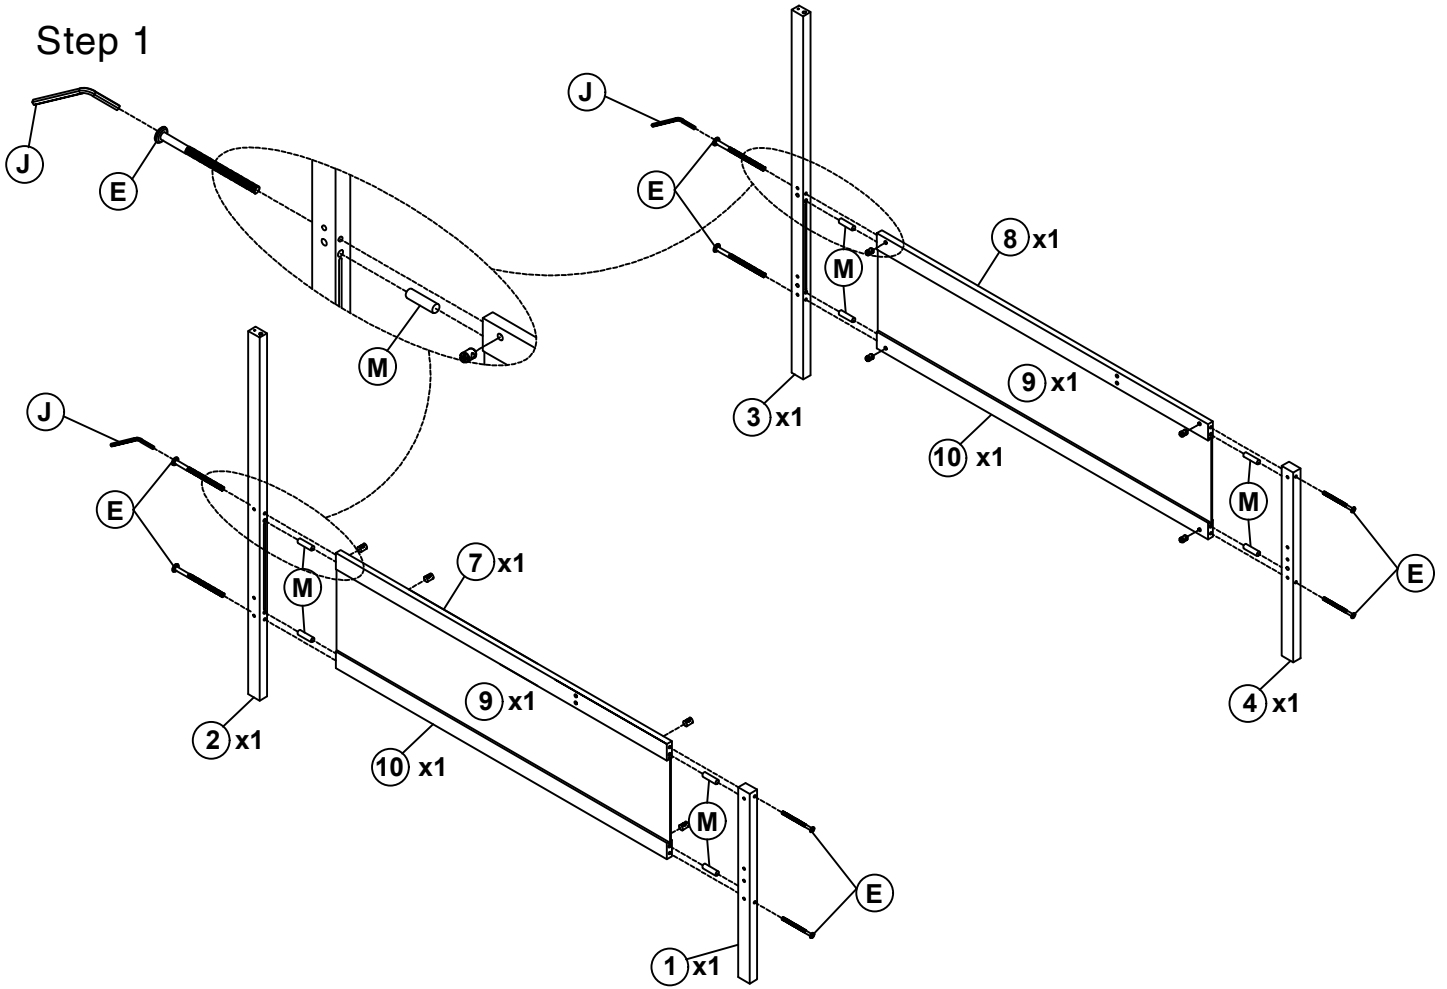



<b>M</b>	Ø10x40		8PCS
----------	--------	---------------------------------------------------------------------------------------	------


<b>E</b>	1/4x90		8PCS
----------	--------	-------------------------------------------------------------------------------------	------

<b>J</b>	4x58		1PC
----------	------	---------------------------------------------------------------------------------------	-----

## Step 2

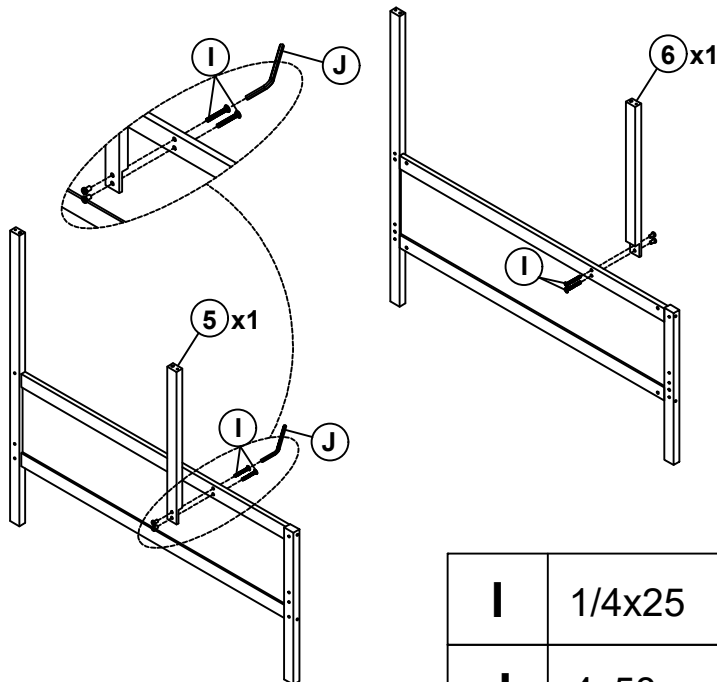




<b>I</b>	1/4x25		4PCS
----------	--------	---------------------------------------------------------------------------------------	------

<b>J</b>	4x58		1PC
----------	------	---------------------------------------------------------------------------------------	-----


# ASSEMBLY INSTRUCTIONS

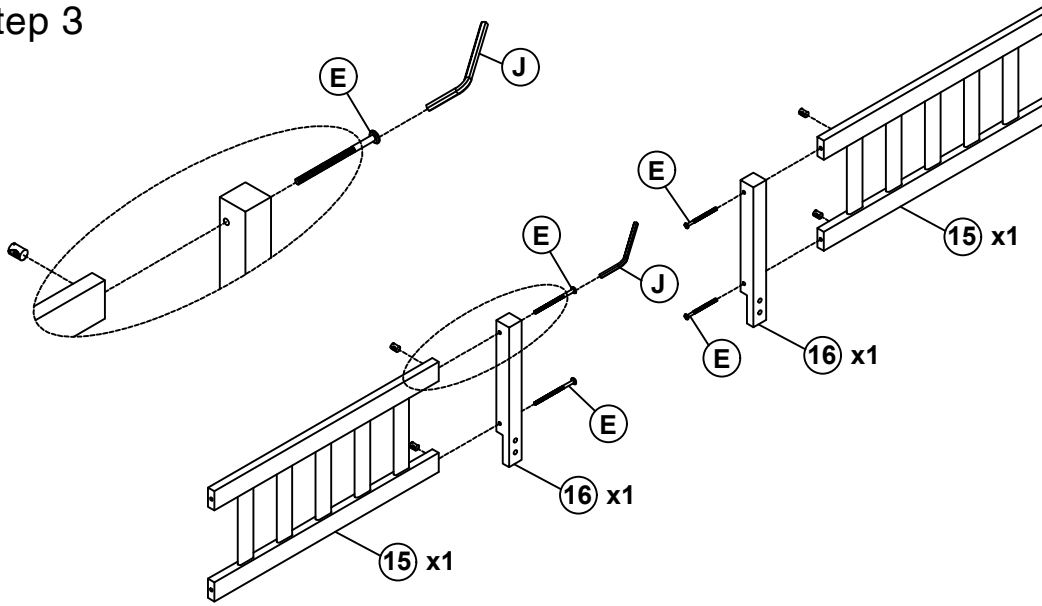



## Step 3

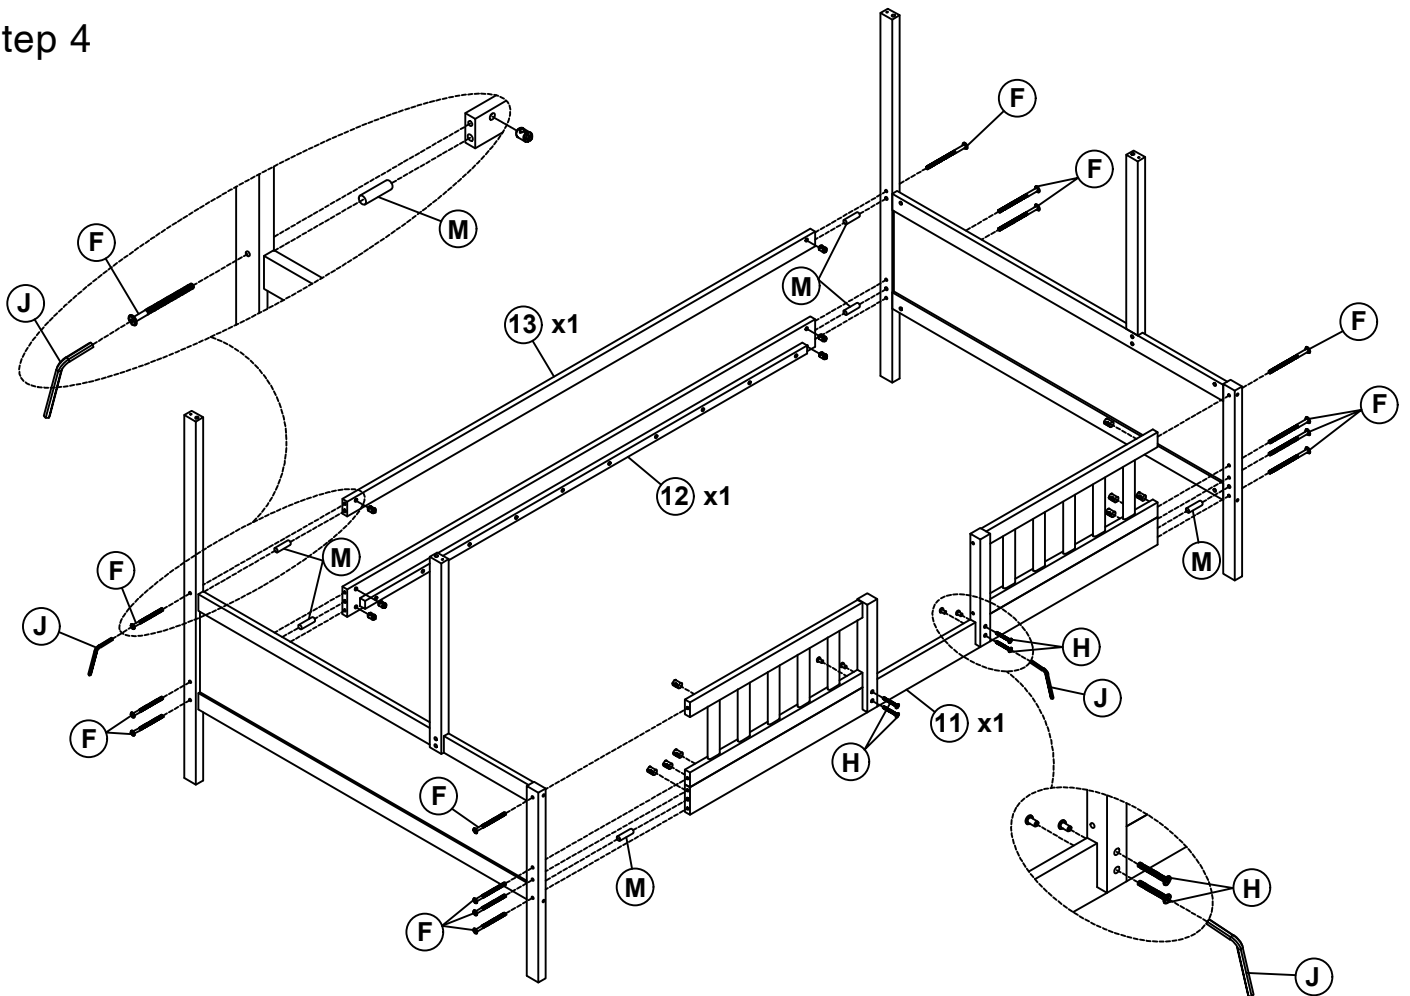

<b>E</b>	1/4x90		4PCS	<b>J</b>	4x58		1PC
----------	--------	-----------------------------------------------------------------------------------	------	----------	------	-------------------------------------------------------------------------------------	-----


## Step 4






<b>F</b>	1/4x75		14PCS	<b>M</b>	Ø10x40		6PCS
<b>H</b>	1/4x35		4PCS	<b>J</b>	4x58		1PC

# ASSEMBLY INSTRUCTIONS
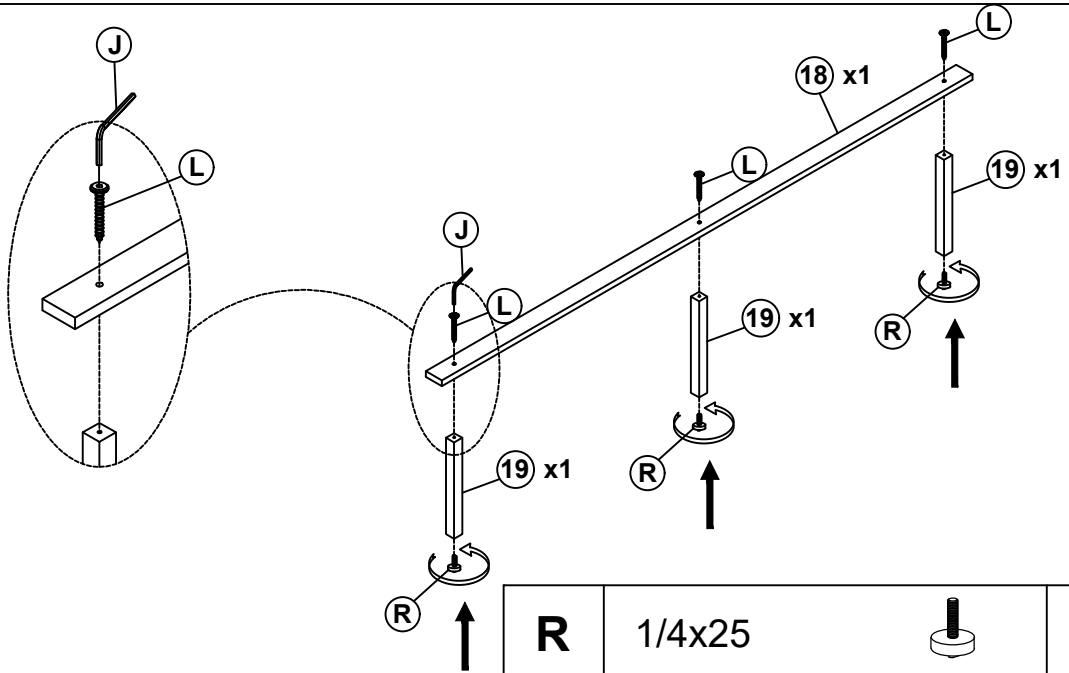
## Step 5





<b>R</b>	1/4x25		3PCS
<b>J</b>	4x58		1PC

<b>L</b>	6.5x60		3PCS
----------	--------	-----------------------------------------------------------------------------------	------

## Step 6


First attach 2pcs part 17 to the front and end of the frame, between side rails. Then attach the remaining part 17 equidistantly between side rails.

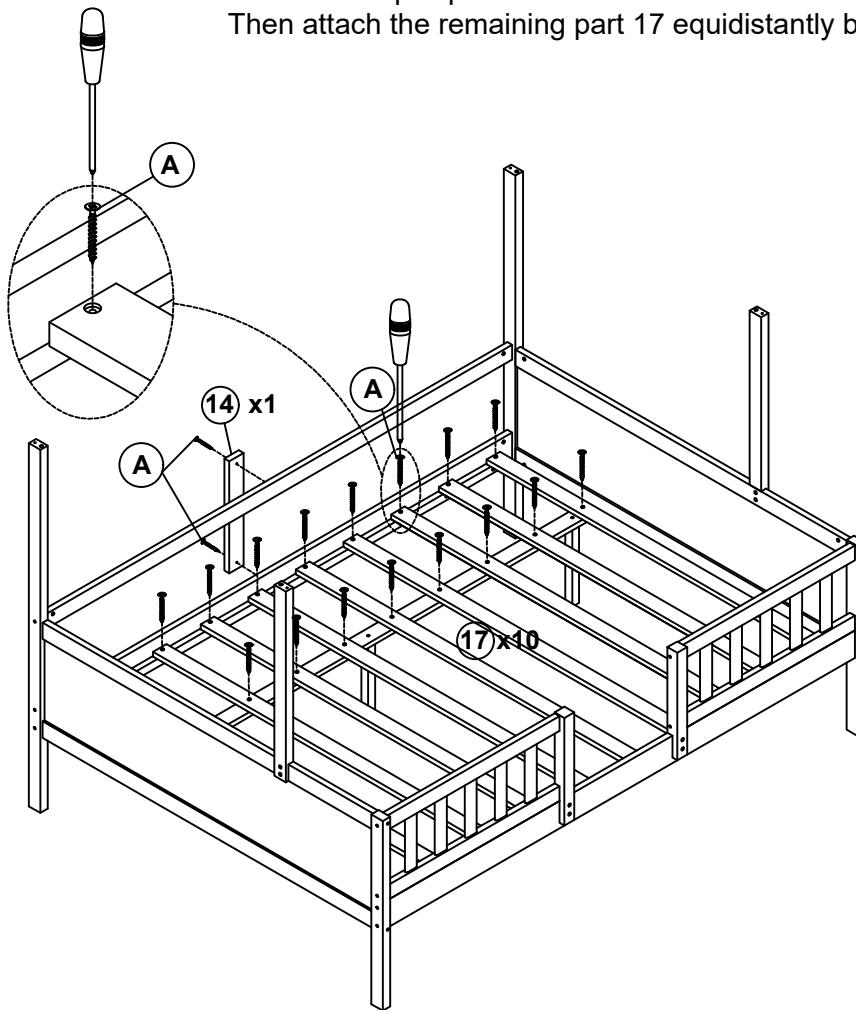




<b>A</b>	Ø4x30		32PCS
----------	-------	---------------------------------------------------------------------------------------	-------


# ASSEMBLY INSTRUCTIONS

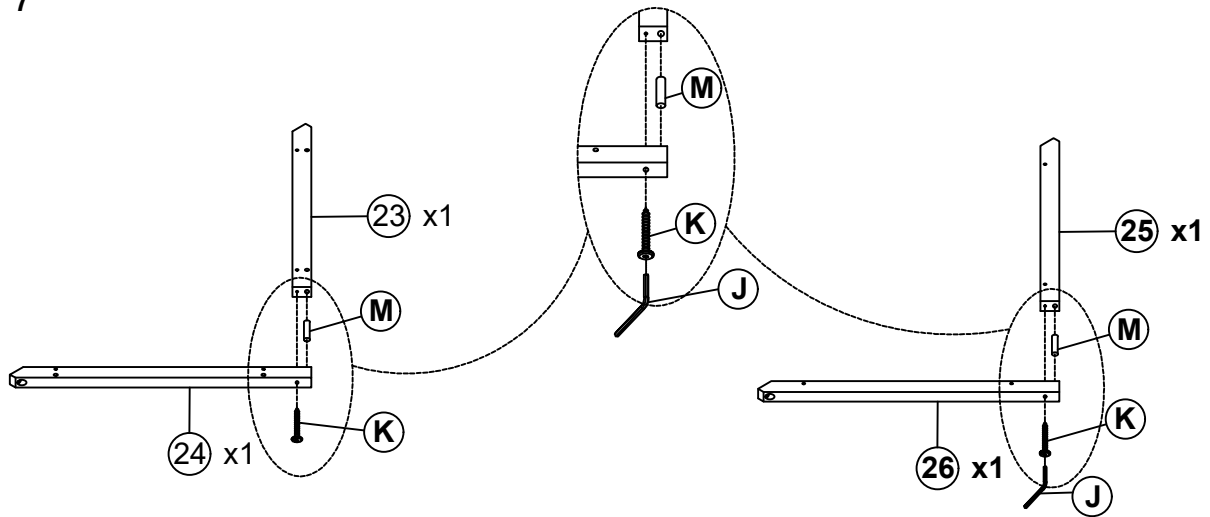


## Step 7



				<b>K</b>	6.5x90		2PCS
<b>M</b>	Ø10x40		2PCS	<b>J</b>	4x58		1PC
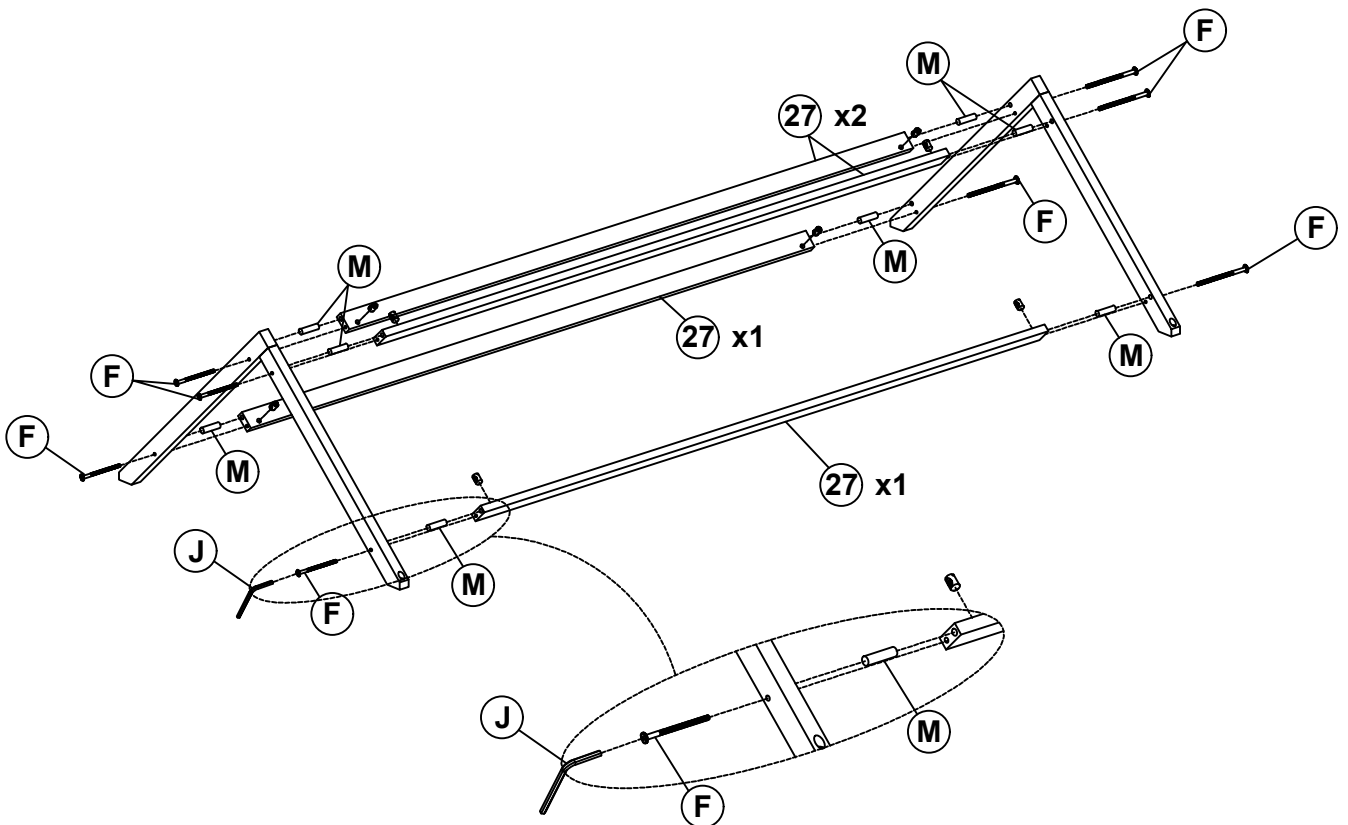
## Step 8







				<b>F</b>	1/4x75		8PCS
<b>M</b>	Ø10x40		8PCS	<b>J</b>	4x58		1PC




# ASSEMBLY INSTRUCTIONS

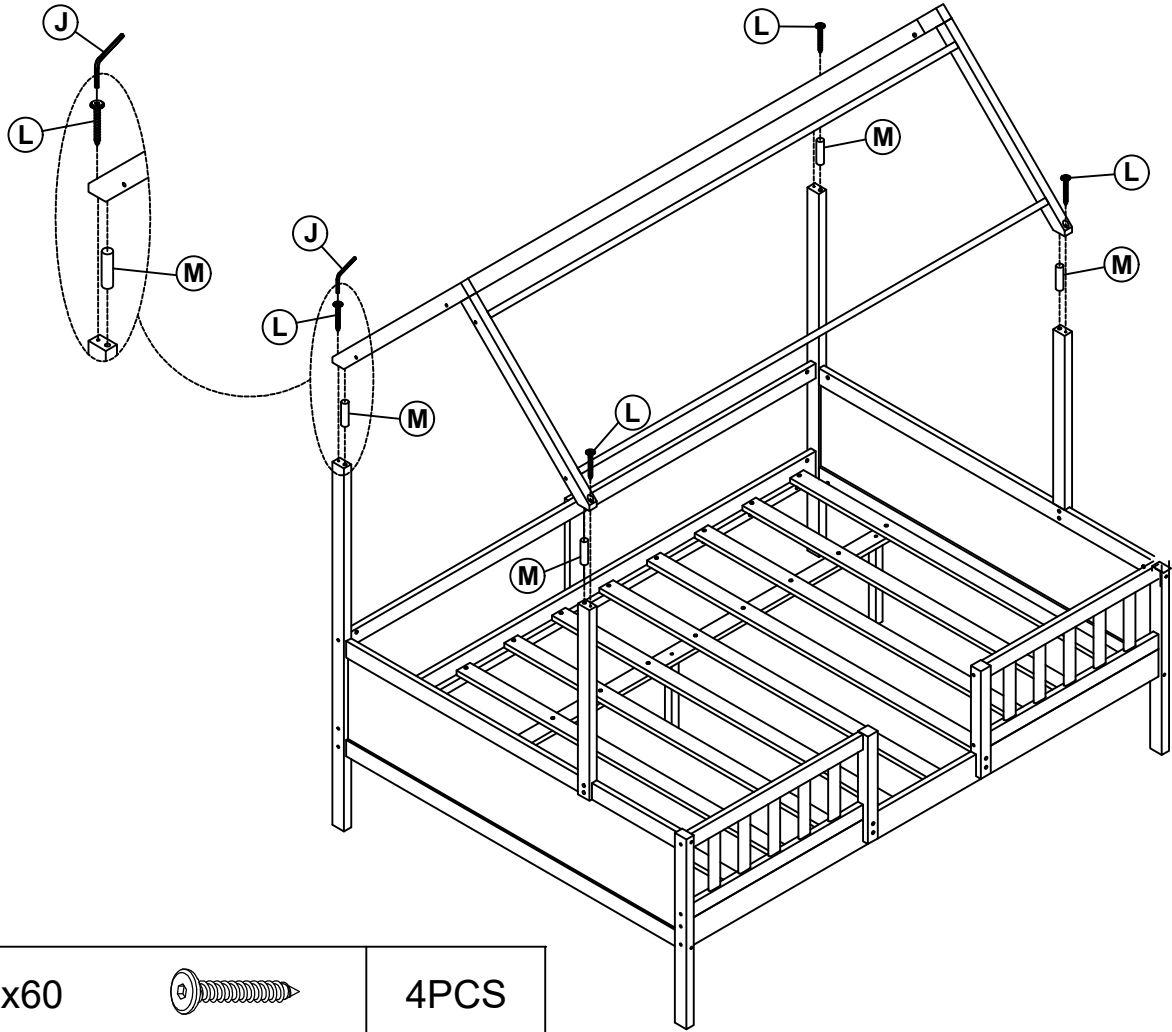
Step 9



<b>L</b>	6.5x60		4PCS			
<b>M</b>	Ø10x40		4PCS	<b>J</b>	4x58	
						1PC


Step 10

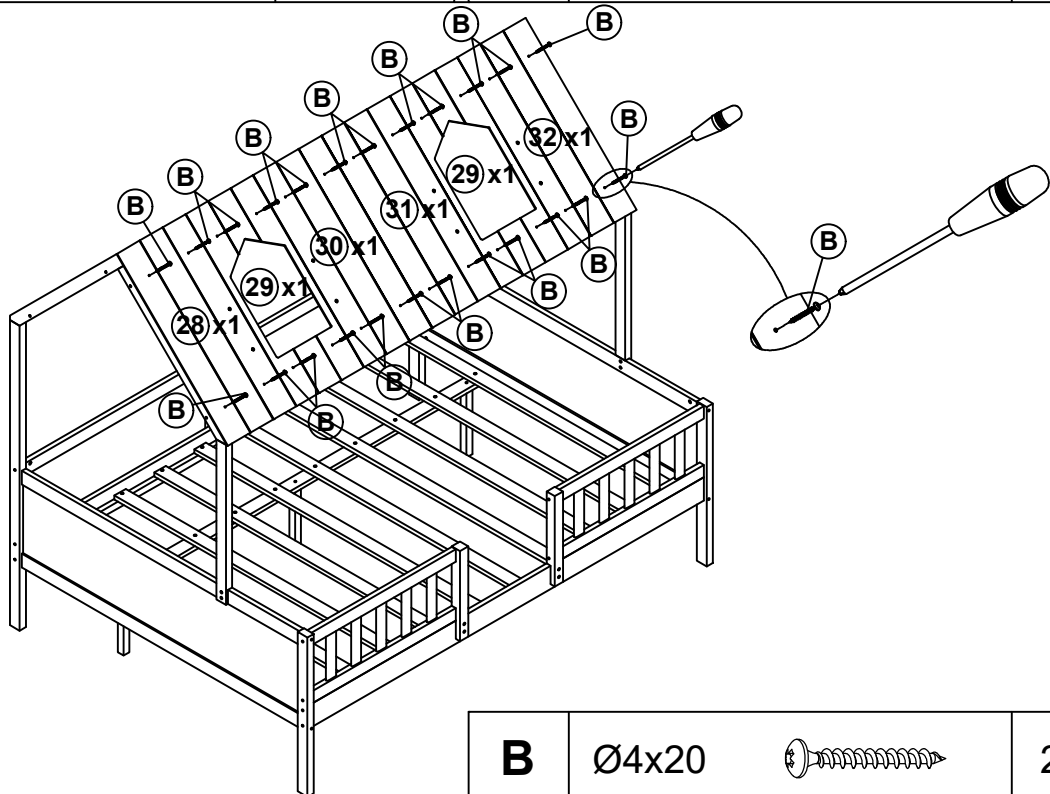



<b>B</b>	Ø4x20		24PCS
----------	-------	---------------------------------------------------------------------------------------	-------


# ASSEMBLY INSTRUCTIONS

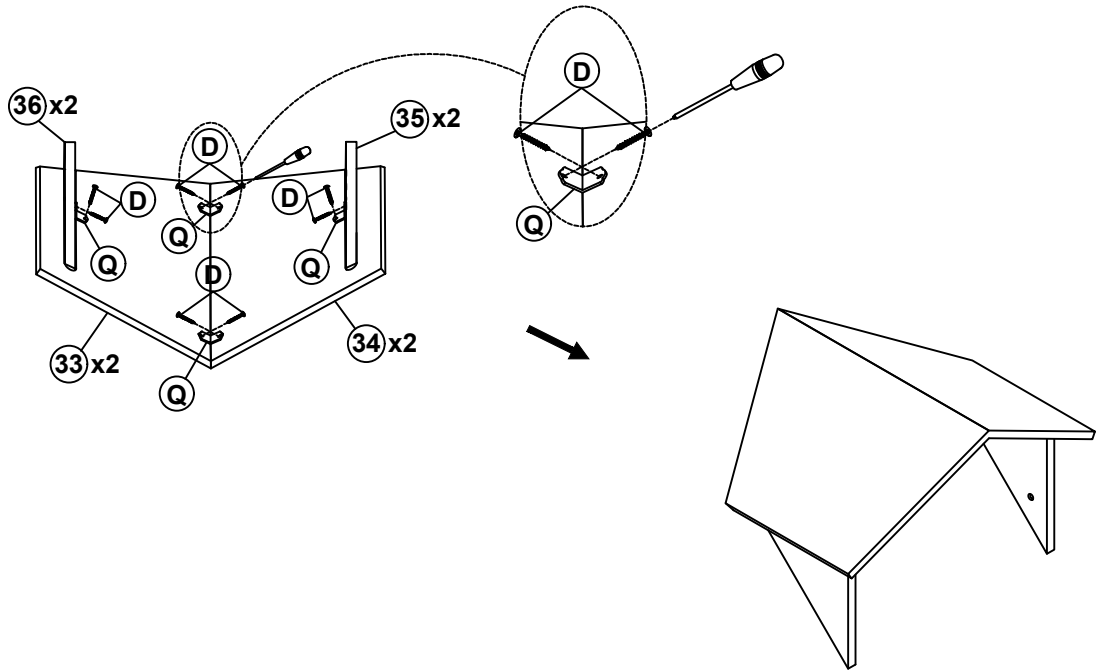
## Step 11



<b>D</b>	Ø3.5x12		16PCS	<b>Q</b>	15x15x2		8PCS
----------	---------	-----------------------------------------------------------------------------------	-------	----------	---------	-------------------------------------------------------------------------------------	------


## Step 12

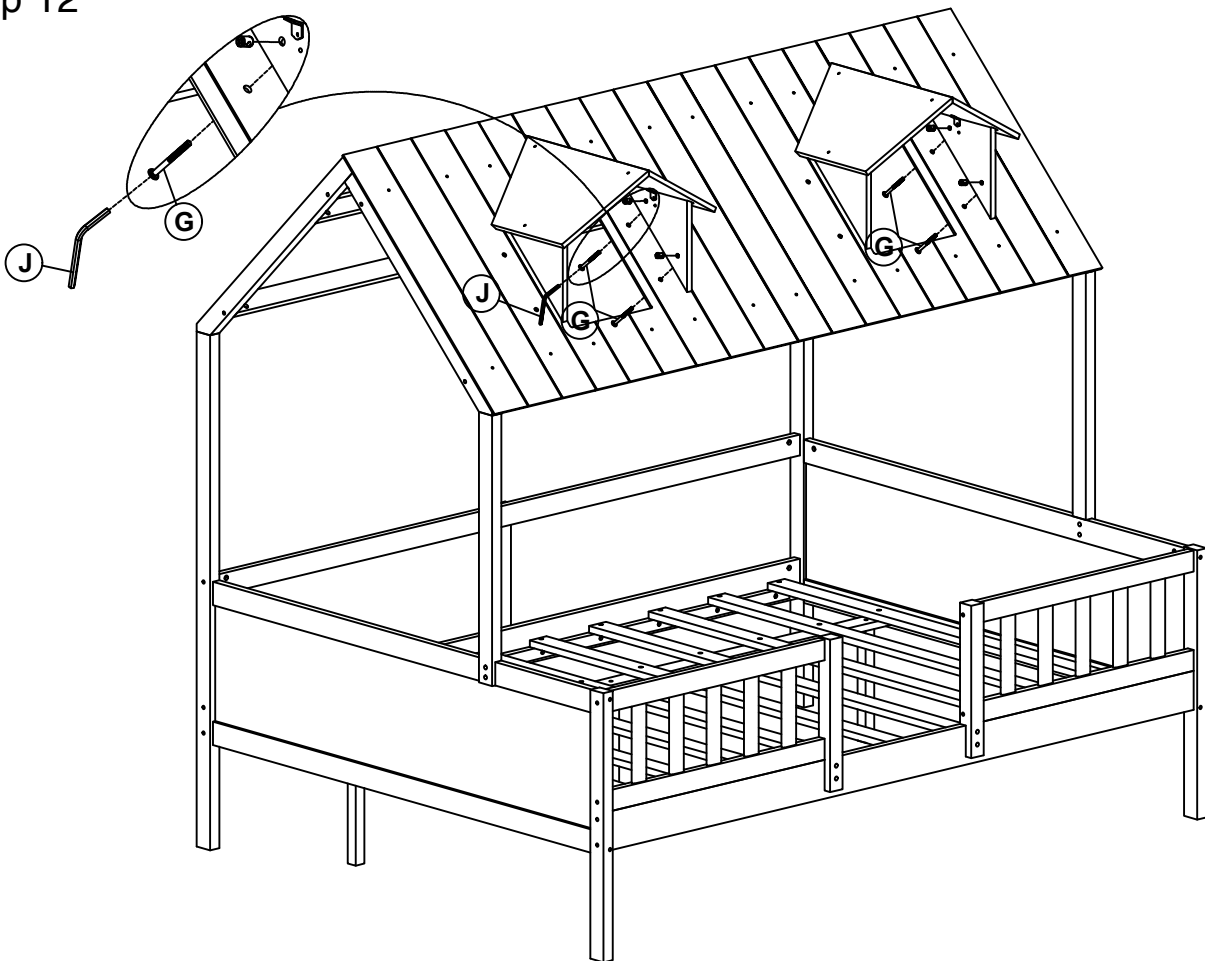



<b>G</b>	1/4x45		8PCS	<b>J</b>	4x58		1PC
----------	--------	-------------------------------------------------------------------------------------	------	----------	------	---------------------------------------------------------------------------------------	-----

# ASSEMBLY INSTRUCTIONS

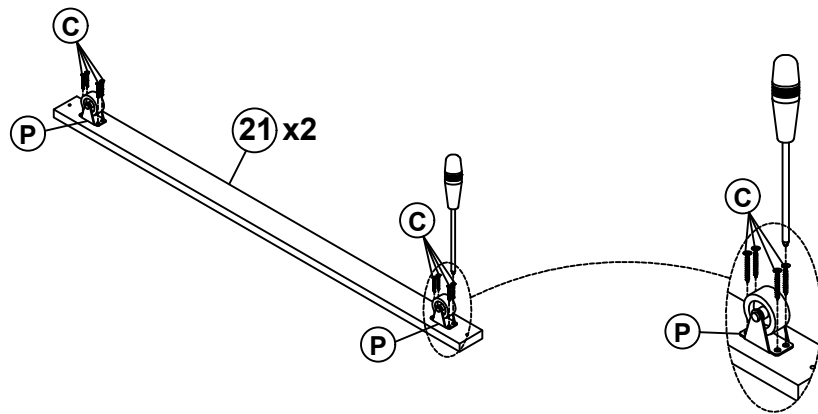
## Step 13



<b>C</b>	Ø4x15		16PCS	<b>P</b>	Ø38x46x38		4PCS
----------	-------	-----------------------------------------------------------------------------------	-------	----------	-----------	-------------------------------------------------------------------------------------	------

## Step 14


First attach 2pcs part 21 to the front and end of the frame, between side rails. Then attach the remaining part 21 equidistantly between side rails.

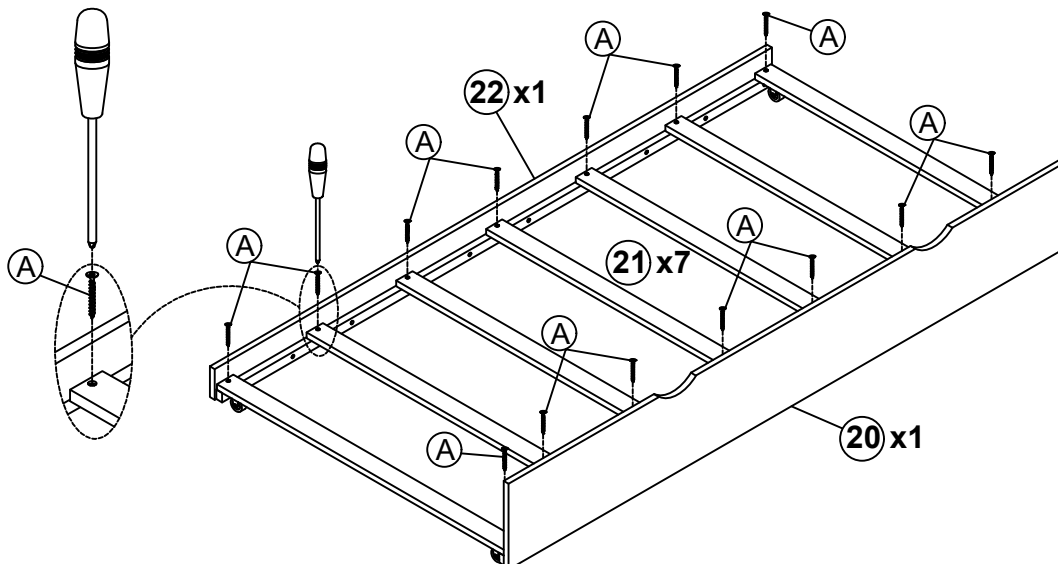




<b>A</b>	Ø4x30		14PCS
----------	-------	---------------------------------------------------------------------------------------	-------

# ASSEMBLY INSTRUCTIONS

## Step 15

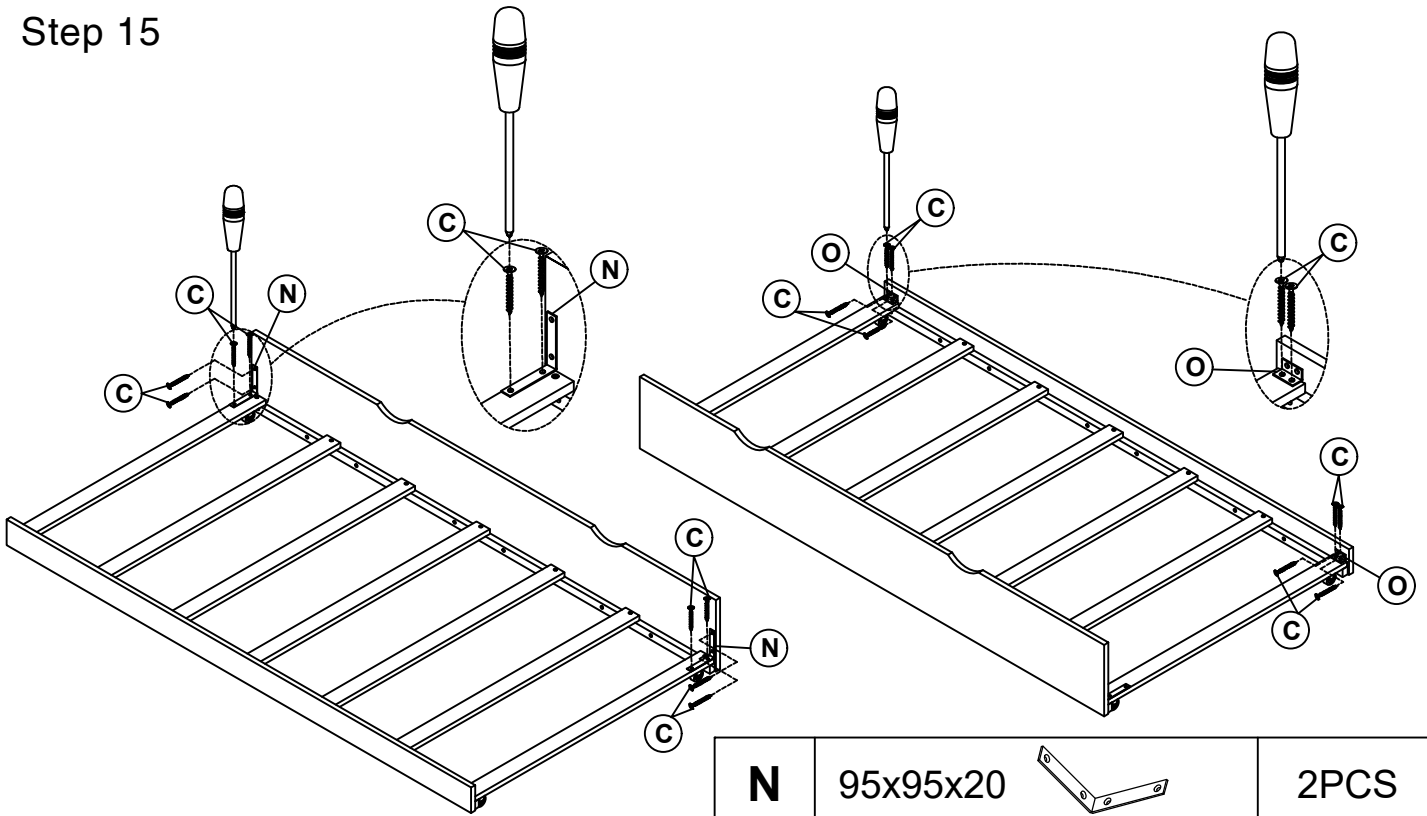

<b>N</b>	95x95x20		2PCS
<b>C</b>	Ø4x15		16PCS
<b>O</b>	40x20x20		2PCS

## Step 16

