


Uper Twin Bed


SKU CODE: WF286537-WF286538

This set is included 3 boxex if do not receive full 3 boxex please contact our customer service team

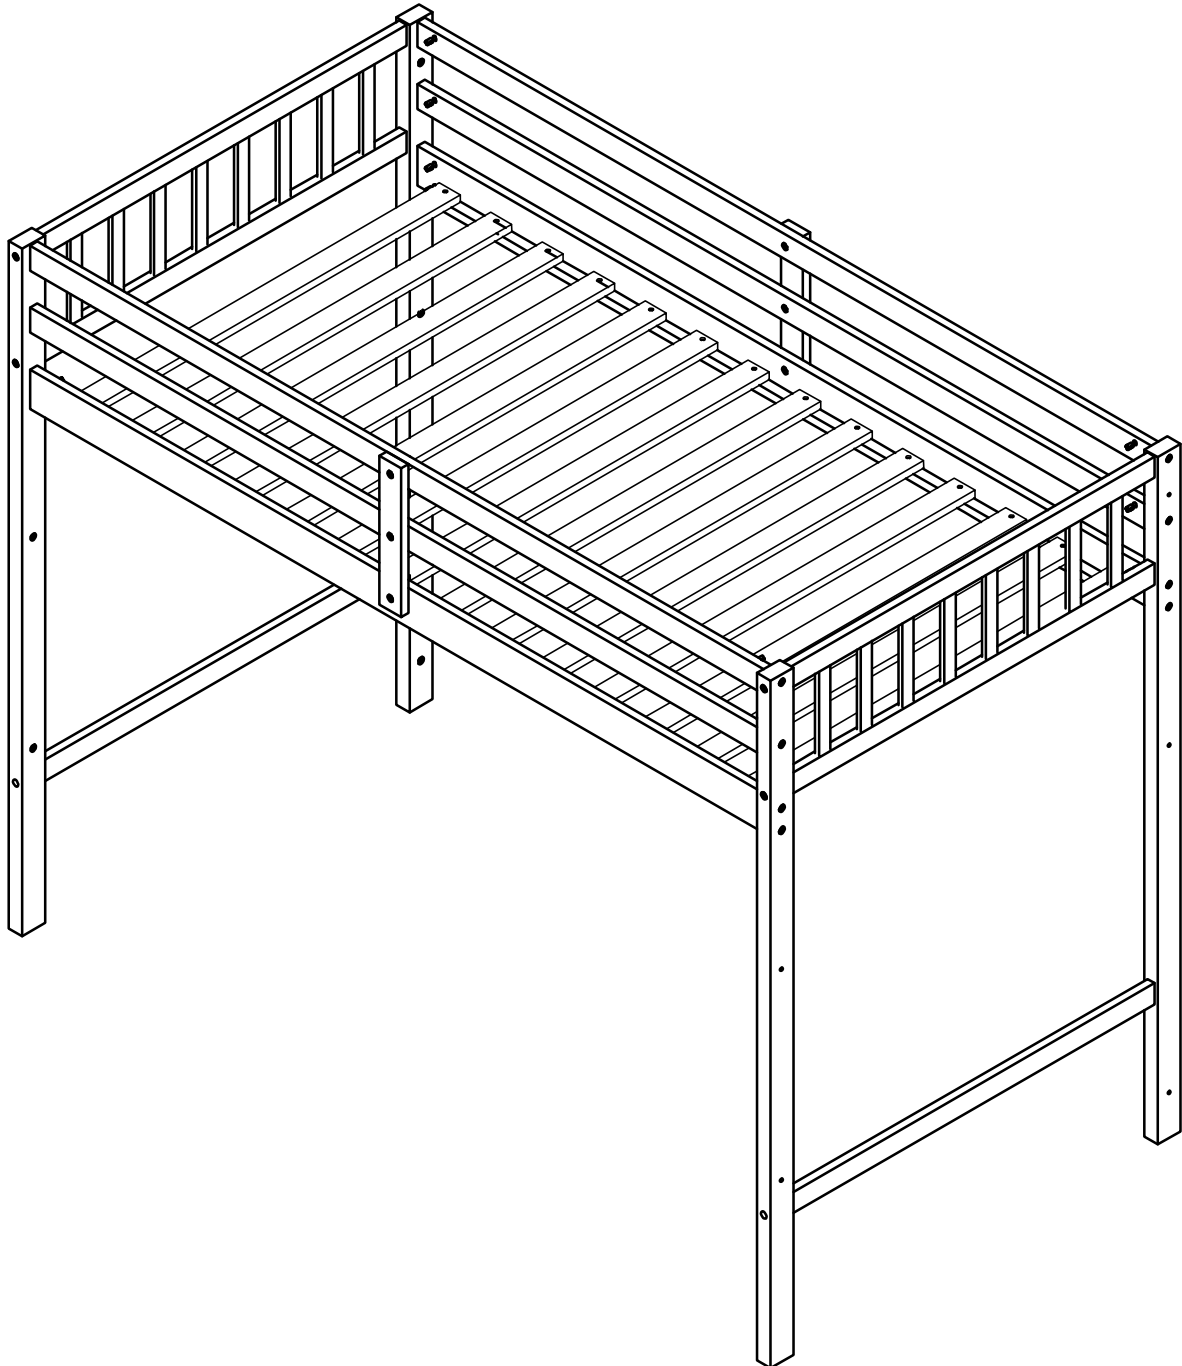


PART LIST-WF286537

1

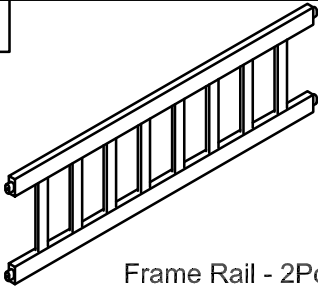




Frame Rail - 2Pcs

6




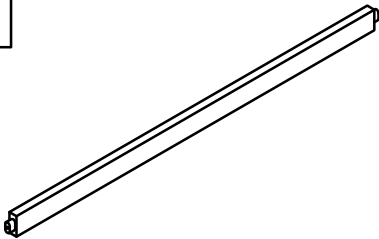



Support Rail (L&R) - 2pc

PART LIST-WF286538

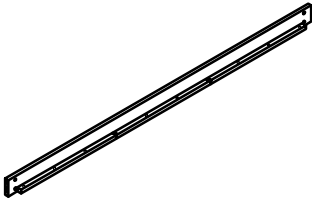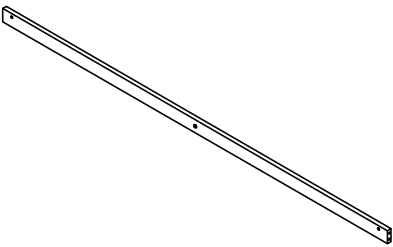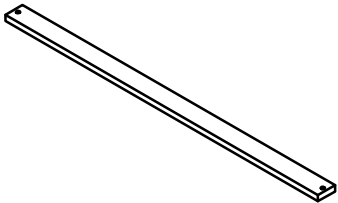2		3		4	
Legs headboard (L) - 1pc		Legs headboard (R) - 1pc		Legs footboard (L) - 1pc	
5		7		8	
Legs footboard (R) - 1pc		Side rails - 2Pcs		Vertical guardrail-2pcs	
9		10			
Long guardrail (Back)-4pcs		Slats-14pcs			


HARDWARE LIST

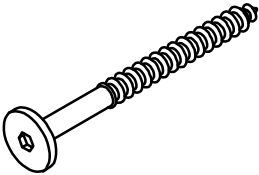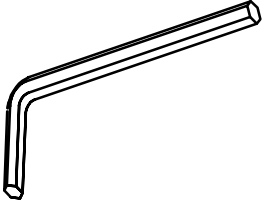A  M4x30 Wood screws-28pcs	B  Ø1/4 x 70 mm Hexagonal bolts catch Wood-12Pcs	C  Ø1/4 x 80 mm Hex-Head bolts - 16Pcs
D  Ø10 x 40mm Dowles - 12Pcs	E  Ø1/4 x 13mm Cross nuts - 16Pcs	F  Allen Key - 1Pc
G  Ø1/4" x 25 mm Hex-Head bolts - 6pcs	H  Ø1/4" x 15 mm Canopy head though - 6pcs	





Assembly Tools Required (Not Included)

**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS!**


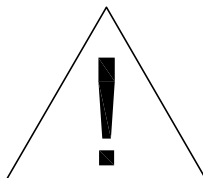


STEP 1

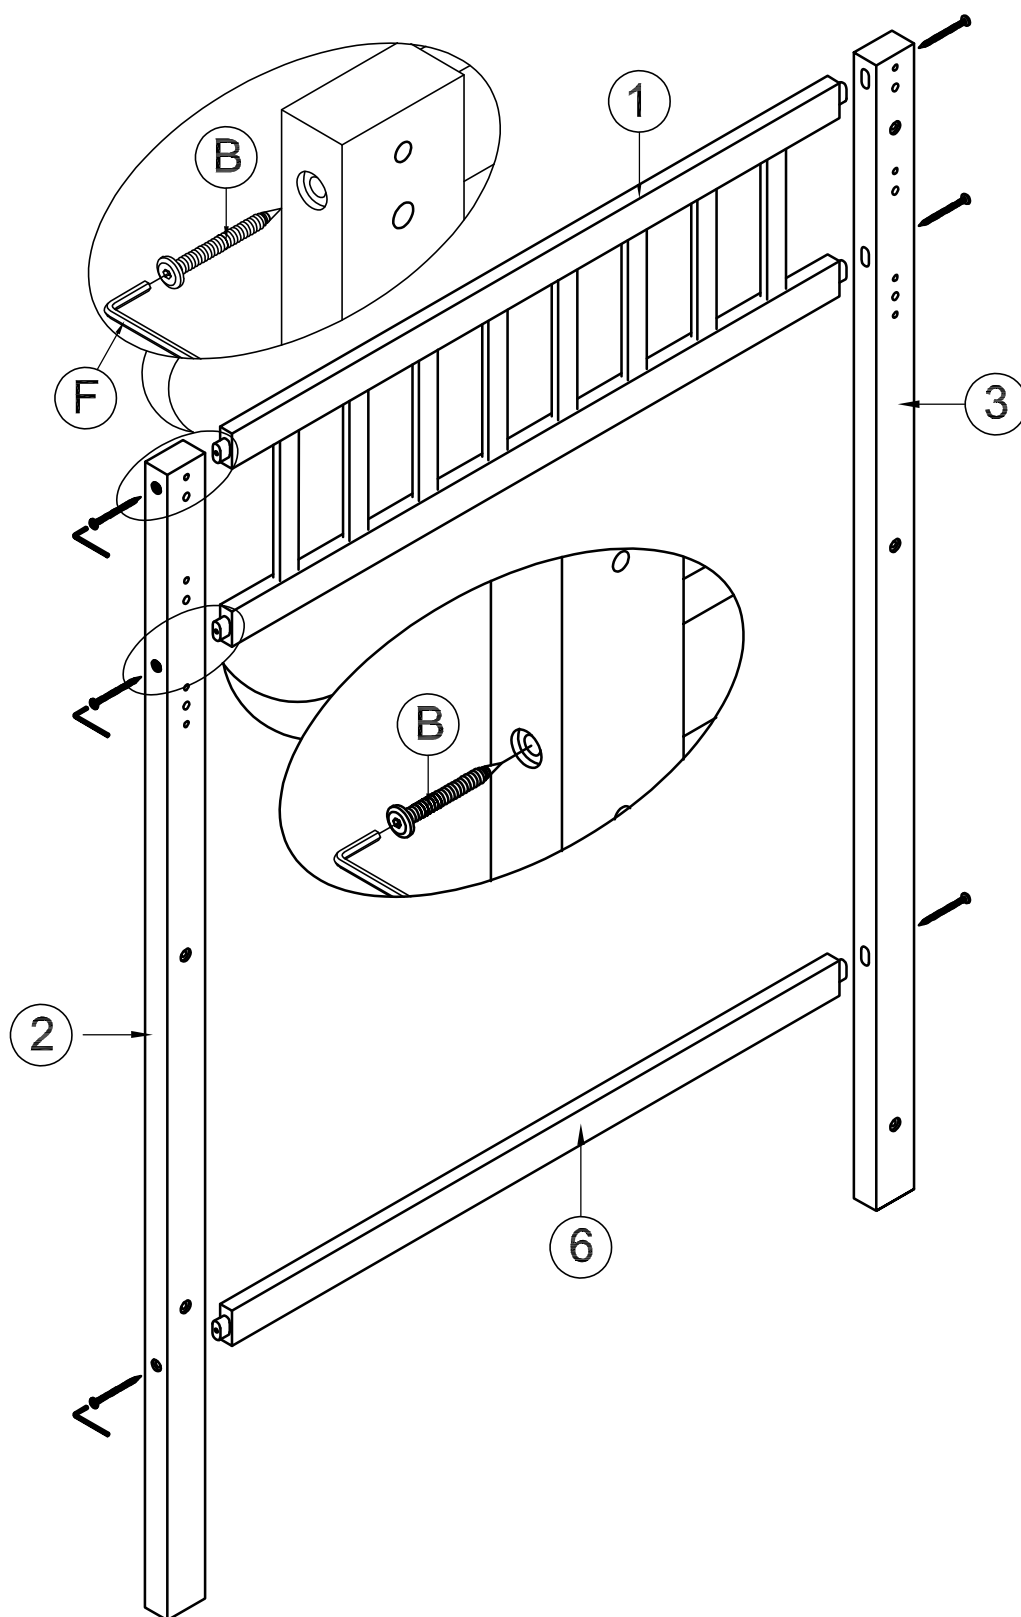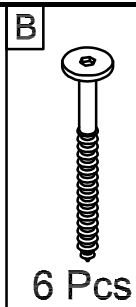


HEADBOARD

STEP 2

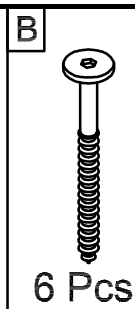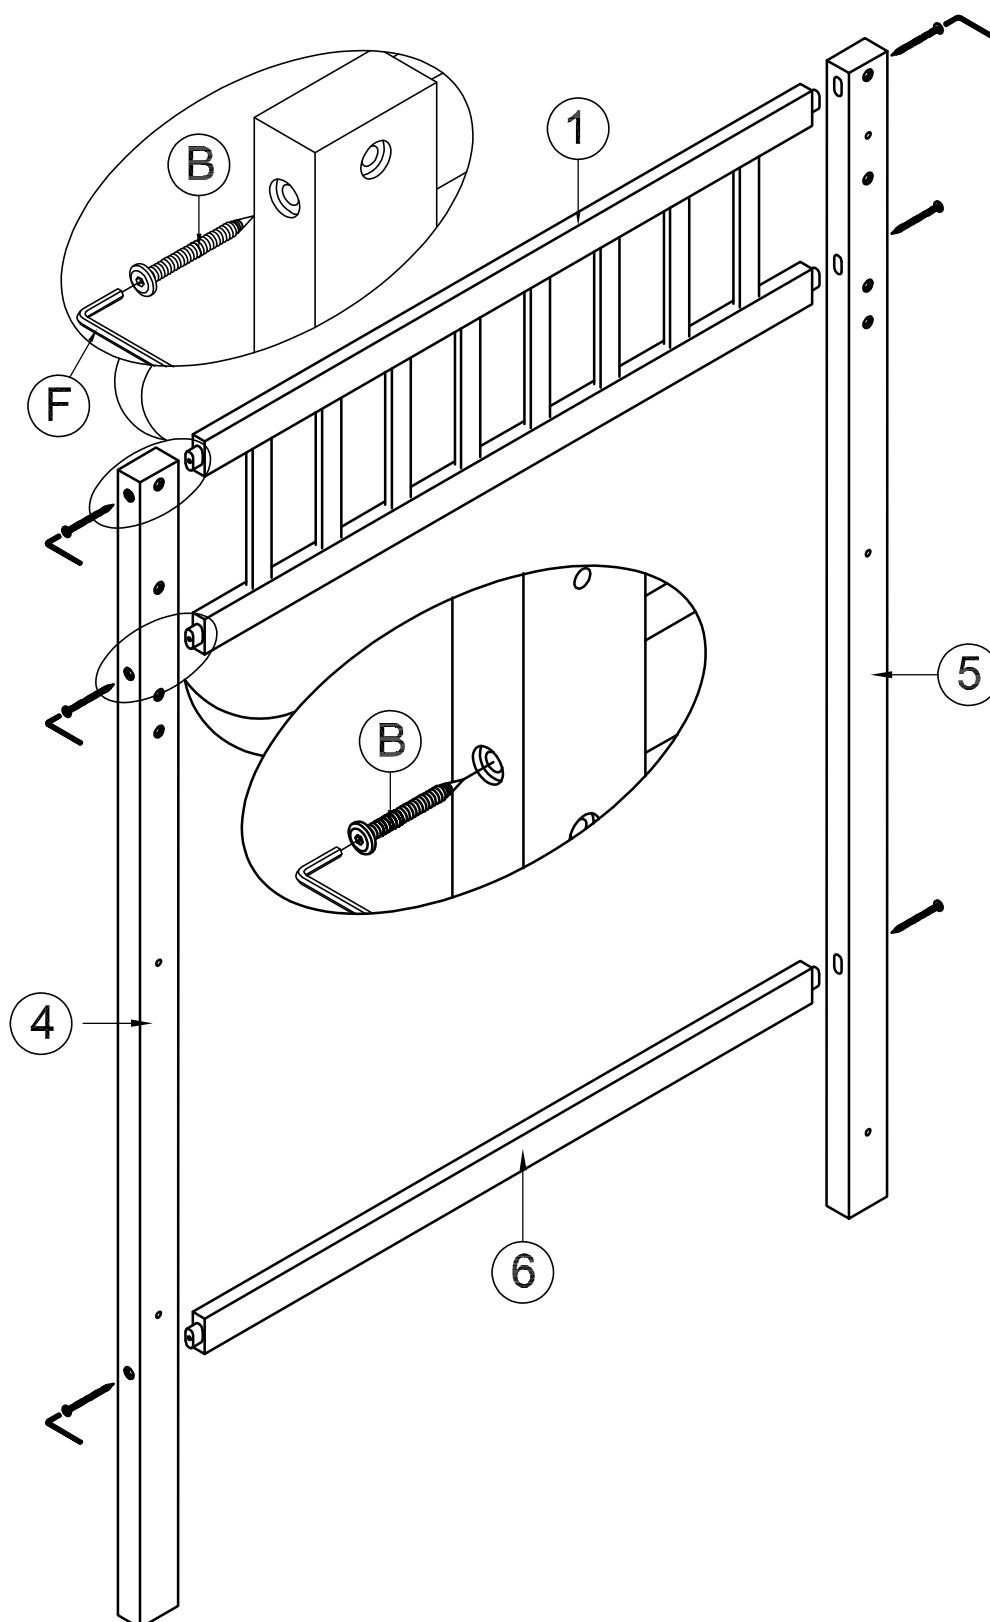


STEP 3

F  1pcs	C  16pcs	E  16pcs	D  12pcs
		G  6pcs	H  6pcs

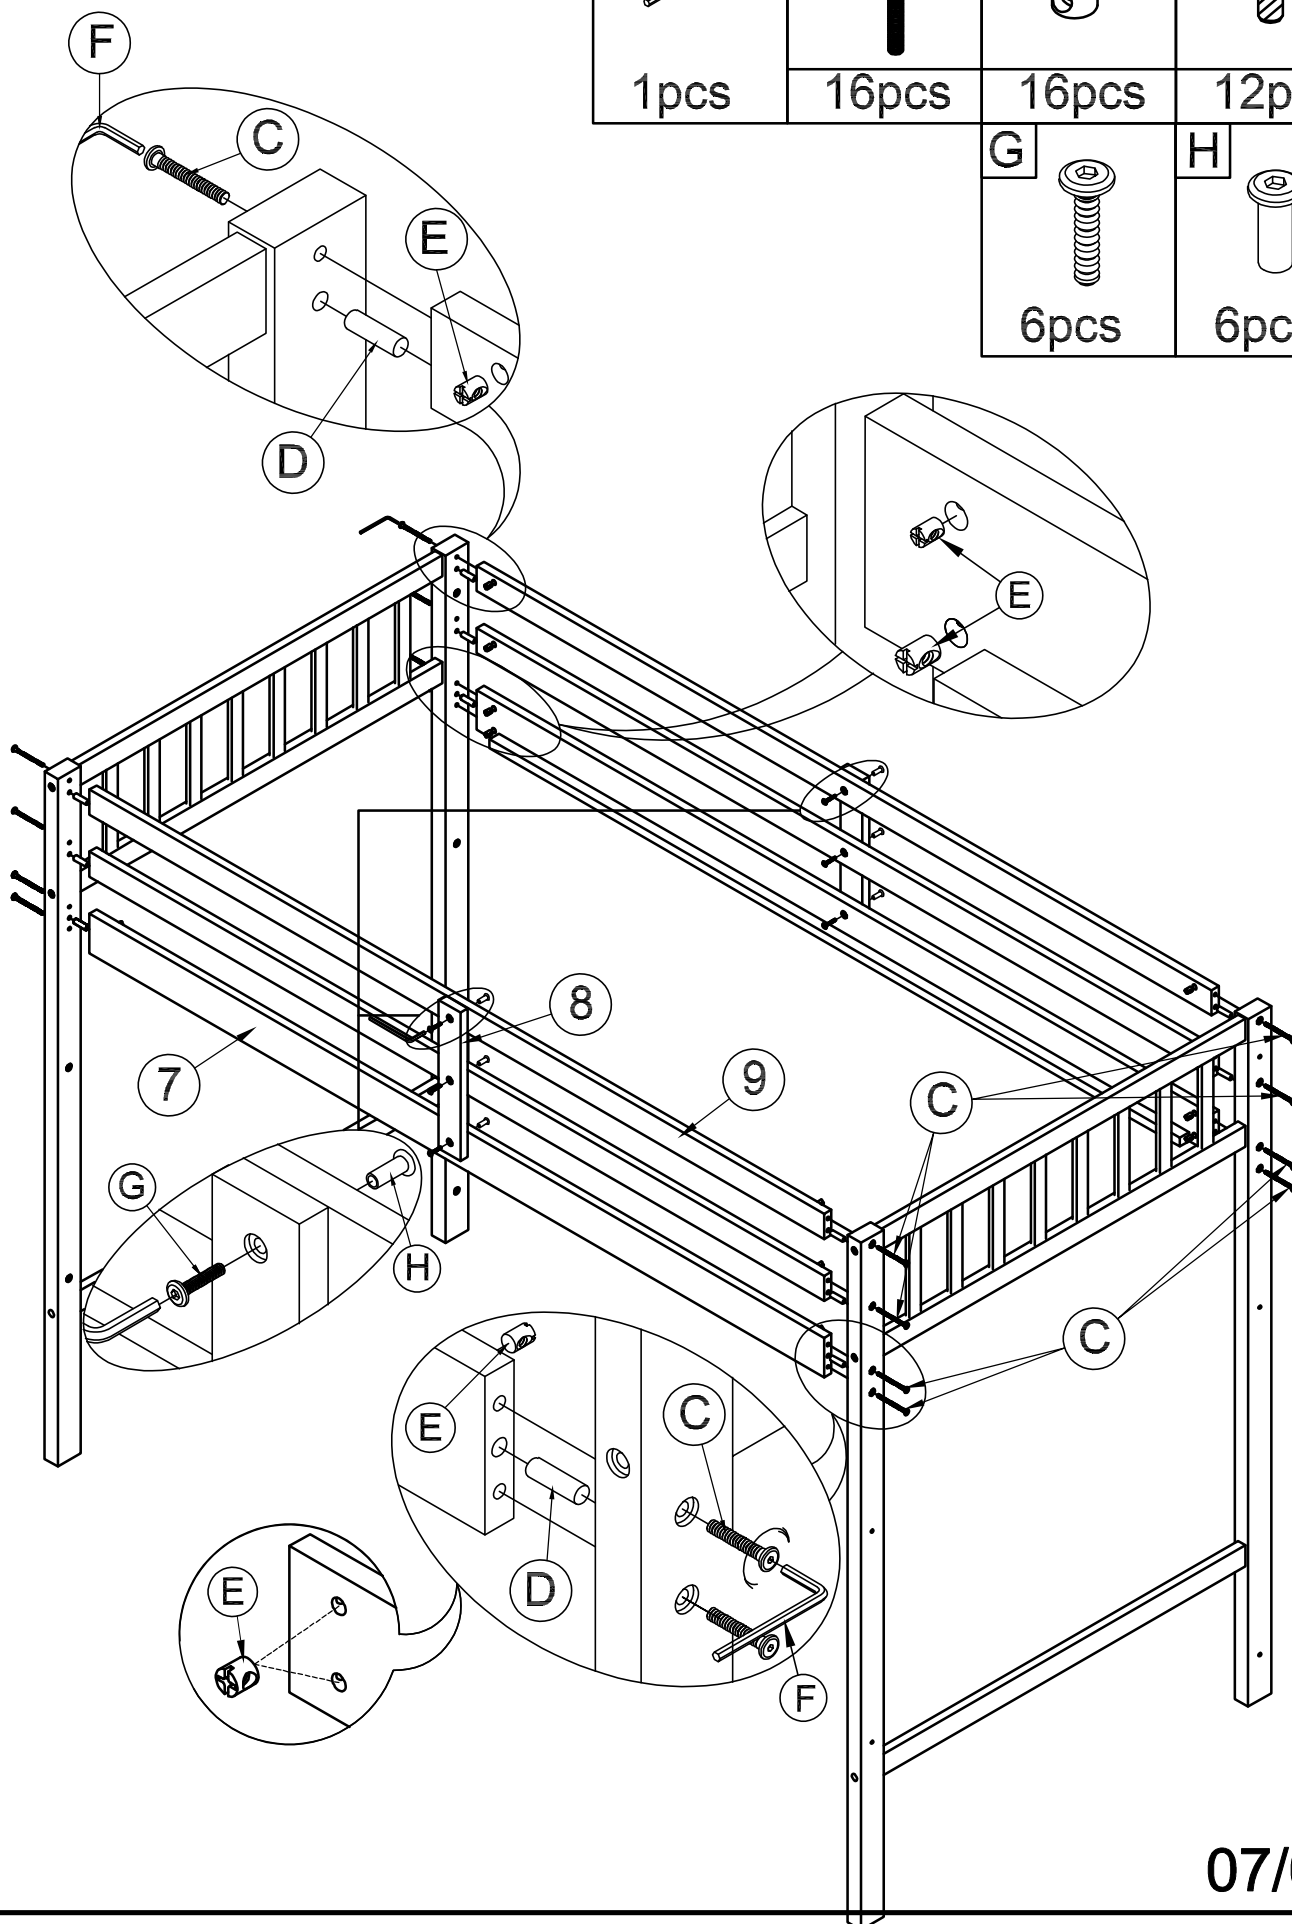


STEP 4

A



28 pcs

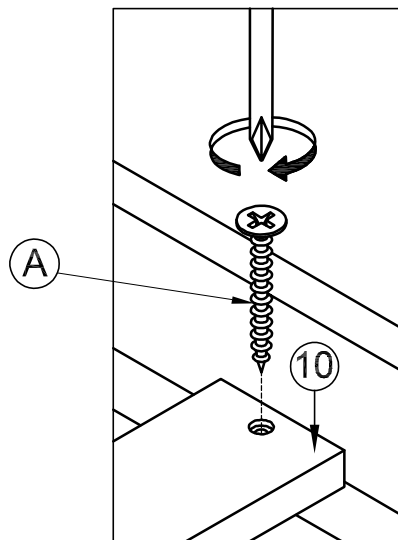

Please complete screw all slats to siderail
before out the mattress on and using

08/08