


**U-10348** Satin Nickel Finish  
Acabado de níquel satinado  
Finition nickel satiné

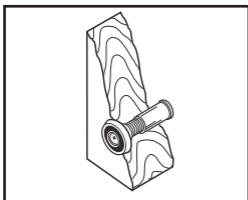

**TO INSTALL:** Locate on door at eye level. Pre-drill starter hole through door using 1/8" drill bit. Use 9/16" drill bit for finished size. **Note:** Drill this hole halfway through door from both sides to eliminate splintering. Disassemble viewer and reassemble into door. Fits 1-3/8" to 2-1/8" thick wood or metal doors.

**PARA INSTALAR:** Instale el mecanismo sobre la puerta, a la altura de sus ojos. Taladre un orificio piloto a través de la puerta, utilizando una broca de 3.2 mm. Utilice una broca de 14 mm, para hacer las dimensiones finales. **Nota:** Taladre una mitad del orificio a partir de cada lado de la puerta, para evitar que la madera se parta. Desarme el ojo mágico y vuelvalo a montar dentro de la puerta. Es conveniente para las puertas de madera o de metal, de 3.5 cm hasta 5.4 cm) de espesor.

**POUR INSTALLER:** Installez le mécanisme sur la porte, à la hauteur des yeux. Percez un orifice pilote à travers de la porte, en utilisant un foret de 3.2 mm. Utilisez un foret de 14 mm, pour obtenir la dimension finale de l'orifice. **Remarque:** Percez une moitié de l'orifice à partir de chacun des deux côtés de la porte, pour éliminer le fendillement. Démontez l'oeil magique et remontez-le dans la porte. Convient aux portes en bois ou métal, de 3.5 cm à 5.4 cm.