




Installation

1. Remove the old wall plate from the wall outlet box.
2. If necessary, trim the cable jacket back about 2 in., being careful not to nick any wires inside.
3. If necessary, strip about ½ in. of insulation off each wire.
4. For the Ethernet connections, attach each wire to the specific terminal listed in the chart below. Note that most residential networks use the T-568B Standard.
5. For the Coaxial connection, connect the coaxial cable to the “F” connector on the back of the new wall plate.
6. Attach the wall plate to the wall using the two screws located on the back of the wall plate.

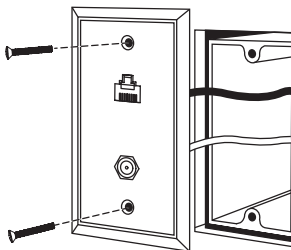

Pin	Wall Plate Color Terminal	T-568B Standard	T-568A Standard
1	Blue	White/Orange	White/Green
2	Orange	Orange	Green
3	Black	White/Green	White/Orange
4	Red	Blue	Blue
5	Green	White/Blue	White/Blue
6	Yellow	Green	Orange
7	Brown	White/Brown	White/Brown
8	White	Brown	Brown