




0248
06



FRAME KIT ASSEMBLY INSTRUCTIONS FOR 2x4 WALLS



INSTRUCCIONES DE MONTAJE DEL KIT PARA PAREDES 2x4

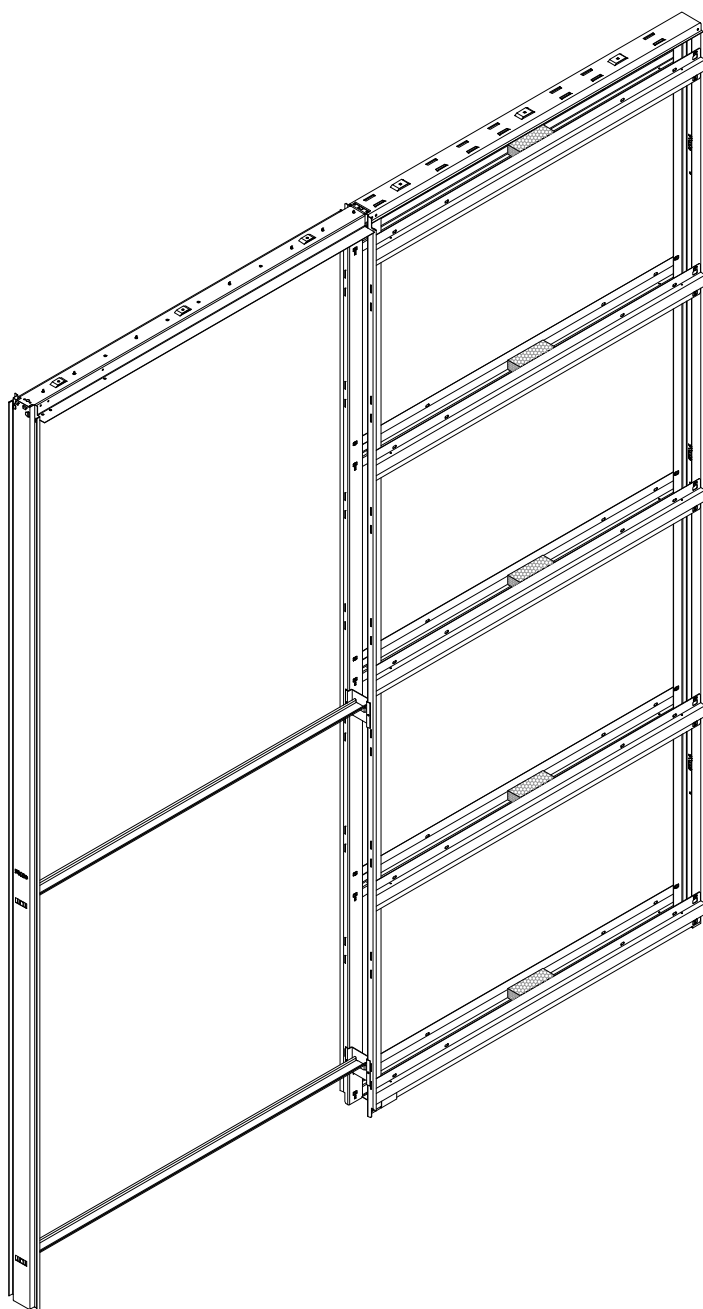

2x4



EN

If you follow carefully these instructions for the assembly and installation process your life will be easier!
A pair of tressles are very useful when assembling the frames.
Some parts may have sharp edges so use gloves and be careful when handling the parts.


All Eclipse products are fully inspected and tested before they leave the factory.

ES

*Seguir las instrucciones con atención.
Para un montaje correcto, utilizar las herramientas indicadas, y para una correcta funcionalidad, ensamblar en los soportes adecuados.
Algunas partes del producto pueden contener superficies punzantes y/o cortantes.
Se necesita utilizar dispositivos de protección adecuados y proteger los espacios de trabajo.
"Eclipse SRL" no asume responsabilidad alguna por los daños derivados en la utilización no conforme a estas instrucciones.*

Todos los componentes del contramarco están testados y controlados en "ECLISSE SRL".


TOOLS REQUIRED HERRAMIENTAS PARA EL MONTAJE

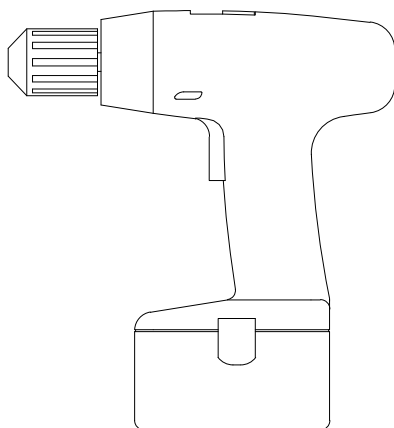


DRILL
TALADRO




PH2 PZ2

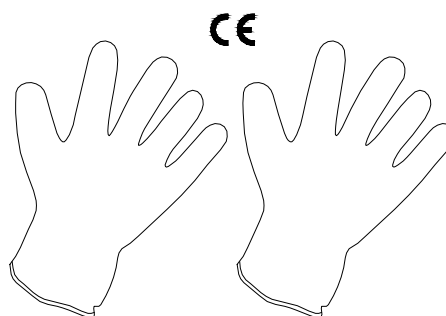


GLOVES
GUANTES

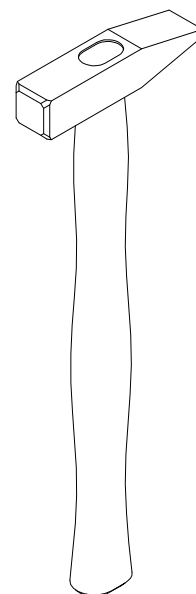


HAMMER
MARTILLO

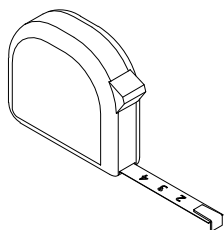

TAPE MEASURE
METRO

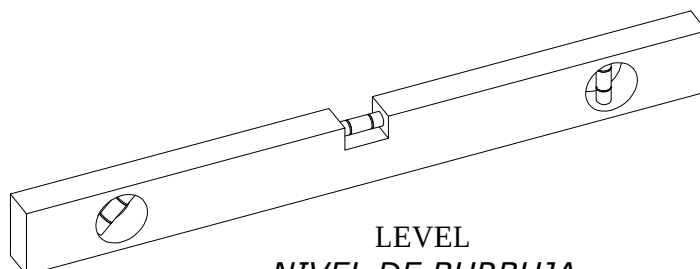


LEVEL
NIVEL DE BURBUJA

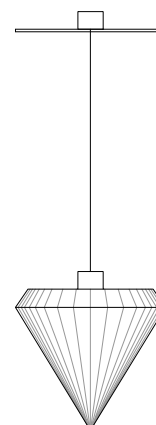

PLUMB LINE
PLOMADA

(a) 1 x




CENTRAL VERTICAL / MONTANTES VERTICALES DELANTERO

(b) 8-10 x



POCKET HORIZONTALS (8 PCS FOR H = 80" - 84" / 10 PCS FOR H = 96")
REFUERZOS HORIZONTALES (N° 8 PARA H = 80" - 84" / N° 10 PARA H = 96")

(c) 1 x




REAR VERTICAL / MONTANTE VERTICALE TRASERO

(d) 1 x




POCKET HEADER / SUBREPUERTA

(e) 1 x




TOP BEAM WITH TRACK / GUIA COMPLETA DE RIEL

(f) 1 x



METAL DOOR POST / MONTANTE DE TOPE DE METAL

(g) 2 x




BRACERS (FOR ASSEMBLY PURPOSES ONLY)
DISTANCIADORES (SOLO PARA INSTALACION)

(h) 4-5 x




STYROFOAM SPACERS (4 PCS FOR H = 80" - 84" / 5 PCS FOR H = 96")
POLIESTIRENO (N° 4 PARA H = 80" - 84" / N° 5 PARA H = 96")

(i) 1 x

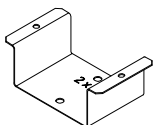


BRACKET / SOPORTE

(l) 1 x

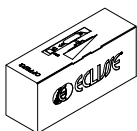

RUNNER KIT / HERRAMIENTAS

(m) 1 x



9 x ST FH # 8 x 3/8" (4,2x9,5 mm) ZNB



2 x ST FH # 6 x 3/8" (3,5x9,5 mm) ZNB




72 x ST FH # 7 x 3/4" (3,9x19 mm)



72 x ST FT # 7 x 1" (3,9x25 mm)

STEP


1

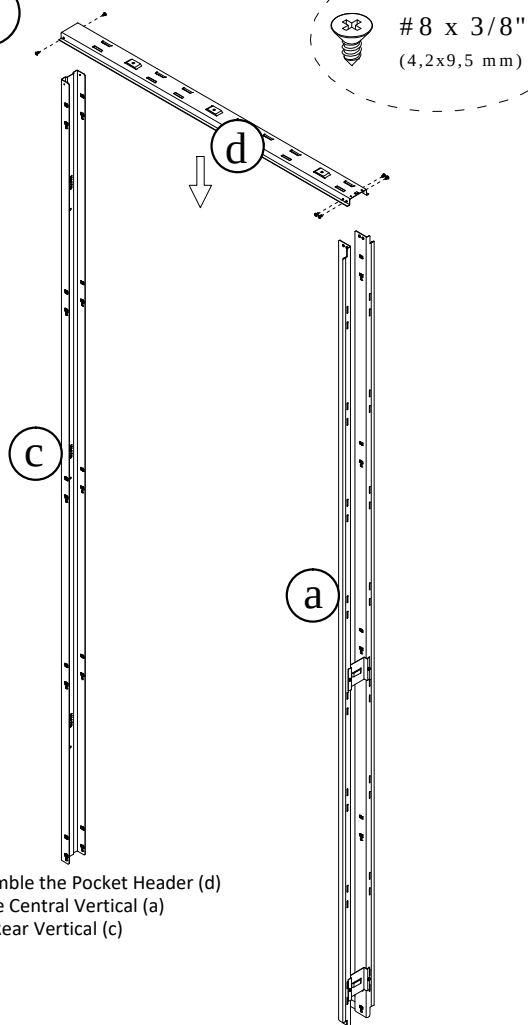

Assemble the Pocket Header (d) to the Central Vertical (a) and Rear Vertical (c)

STEP


2

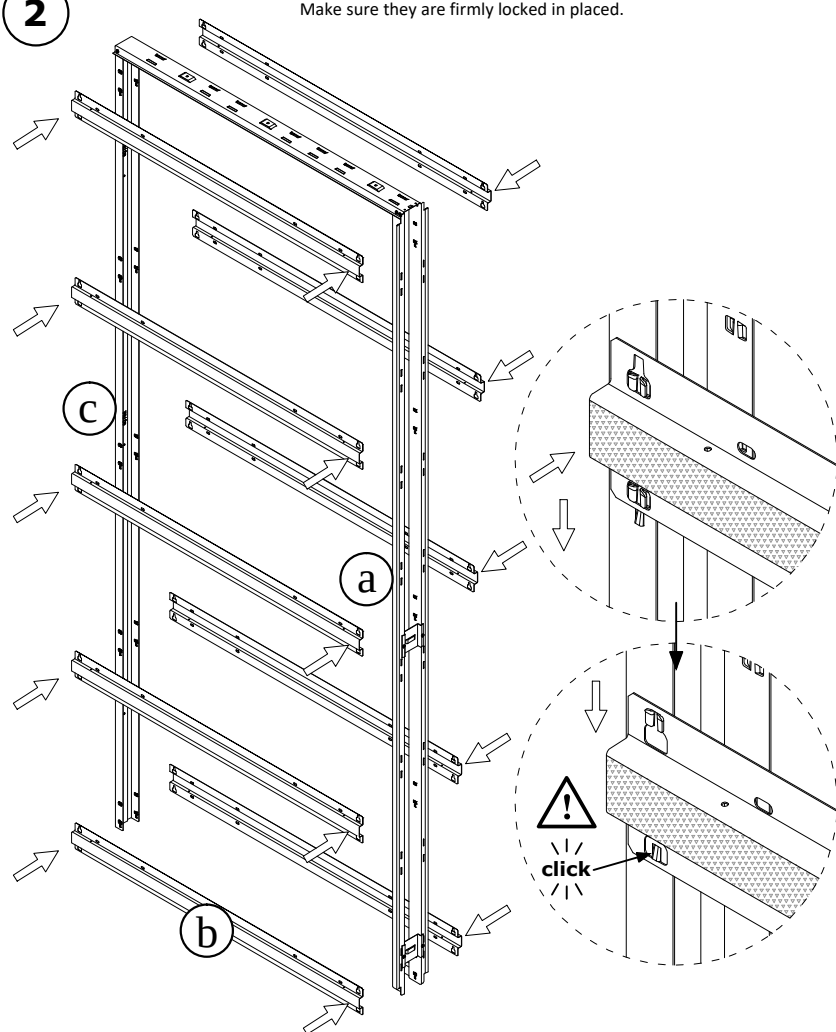

Assemble the Pocket Horizontals (b) securely on Central Verticals (a) and Rear Verticals (c) at the predetermined positions. Make sure they are firmly locked in placed.

STEP


3

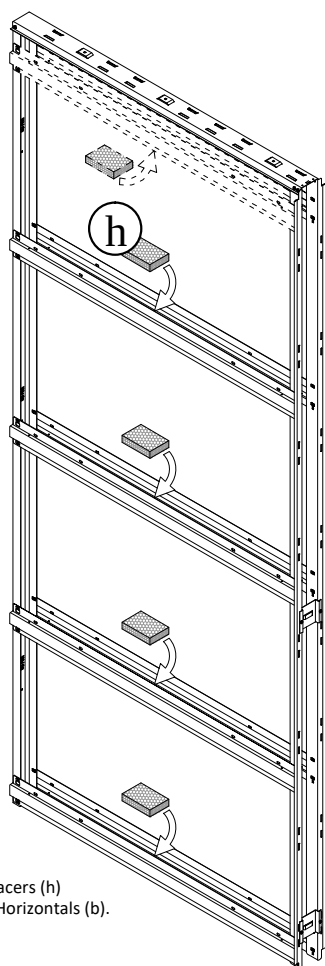

Insert the styrofoam spacers (h) in between the Pocket Horizontals (b).

STEP

4

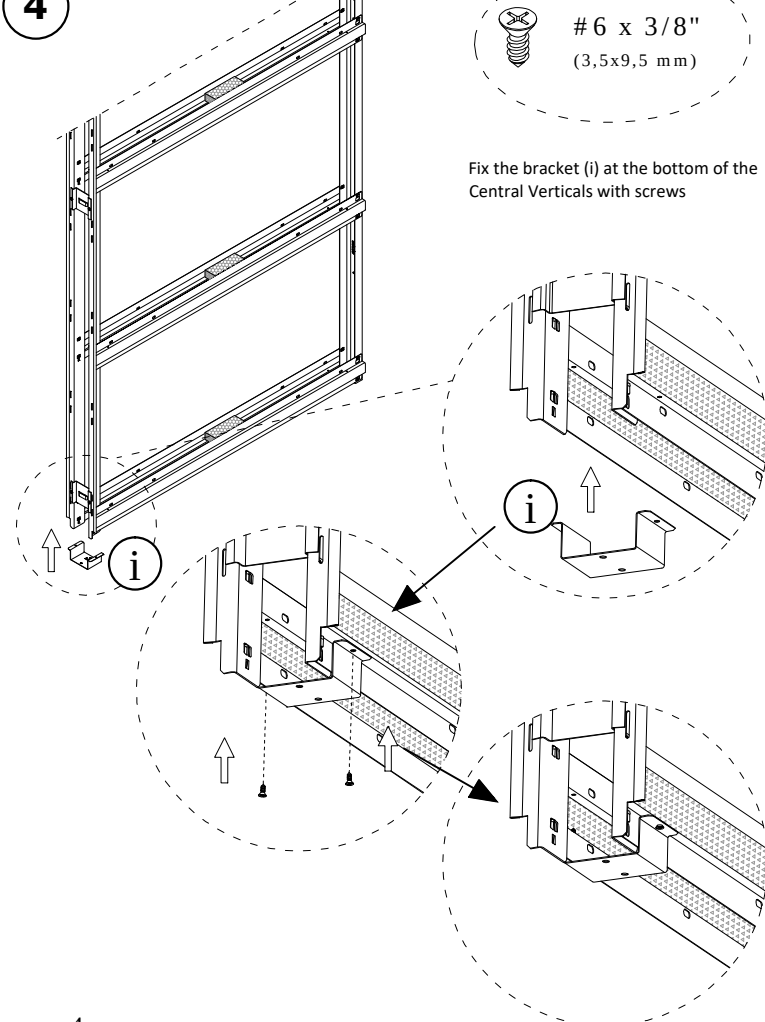


Fix the bracket (i) at the bottom of the Central Verticals with screws

STEP

5



Insert the Top Beam with Track (e) into the Pocket Header (d) until it clicks into place

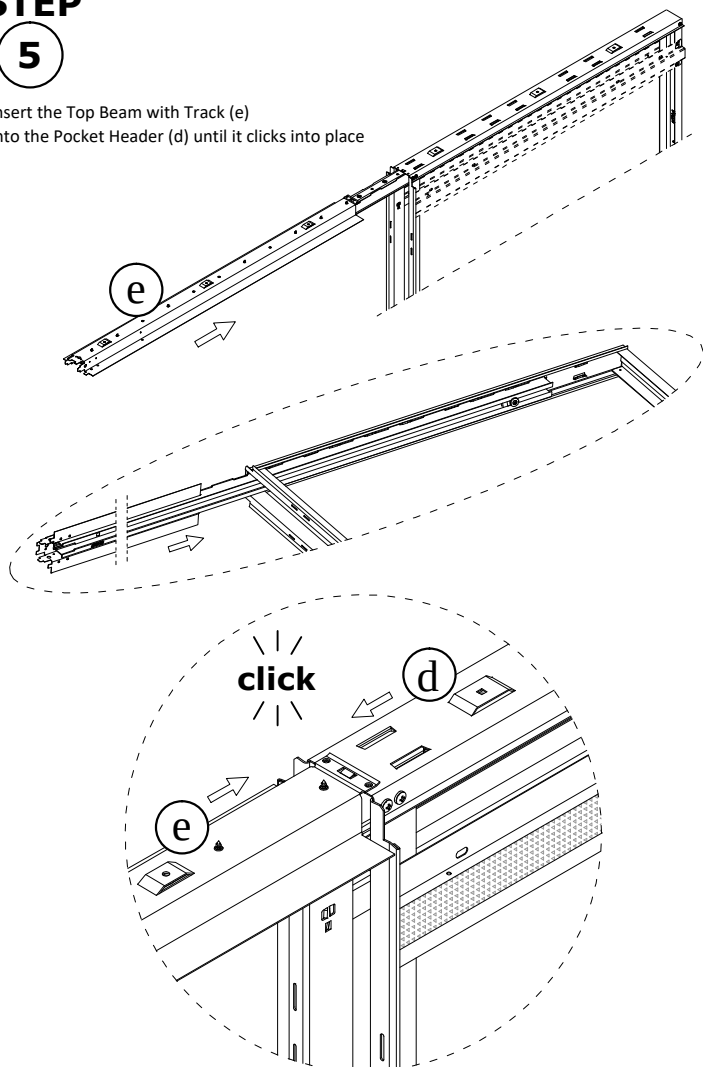

STEP

6



Fix the Top Beam with Track (e) to the Pocket Header (d) using the screws

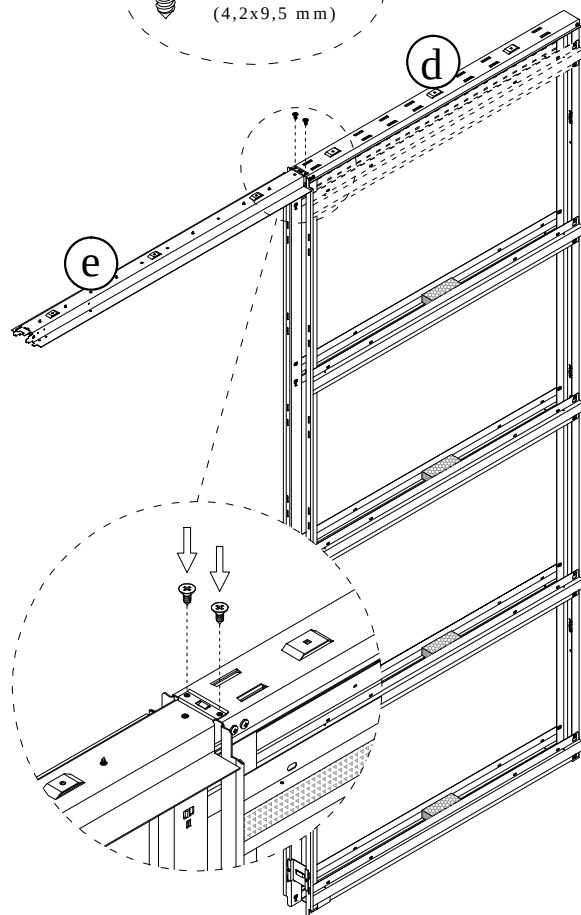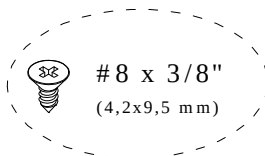

STEP


7

Insert the metal tongues at the Top Beam with Track (e) into the slots at the top of the Metal Door Post (f).

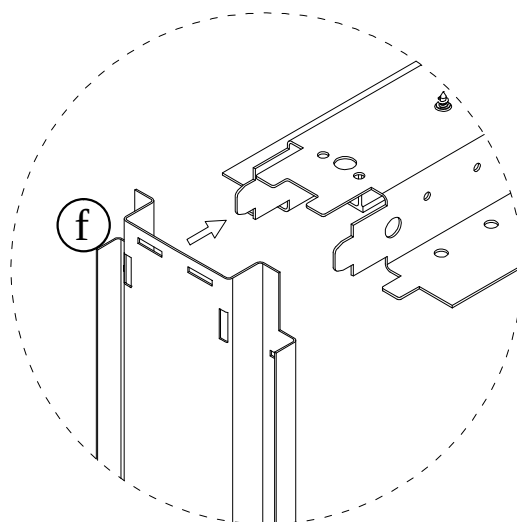
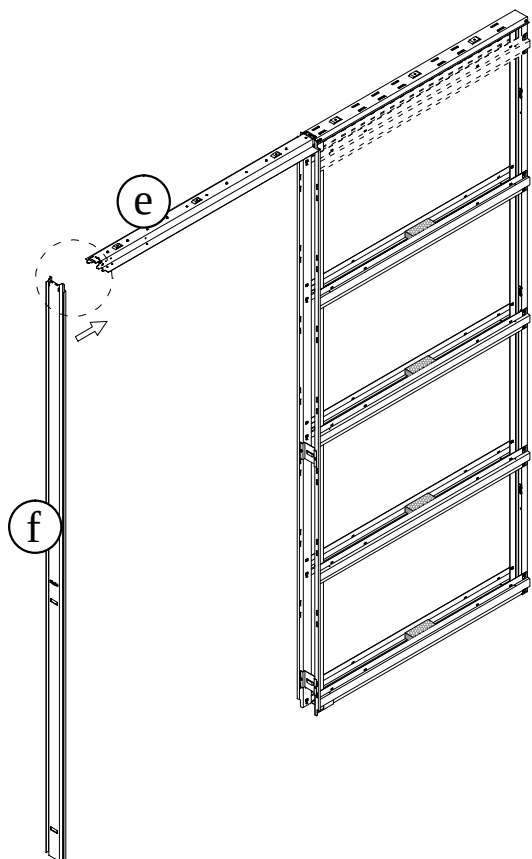


STEP

8

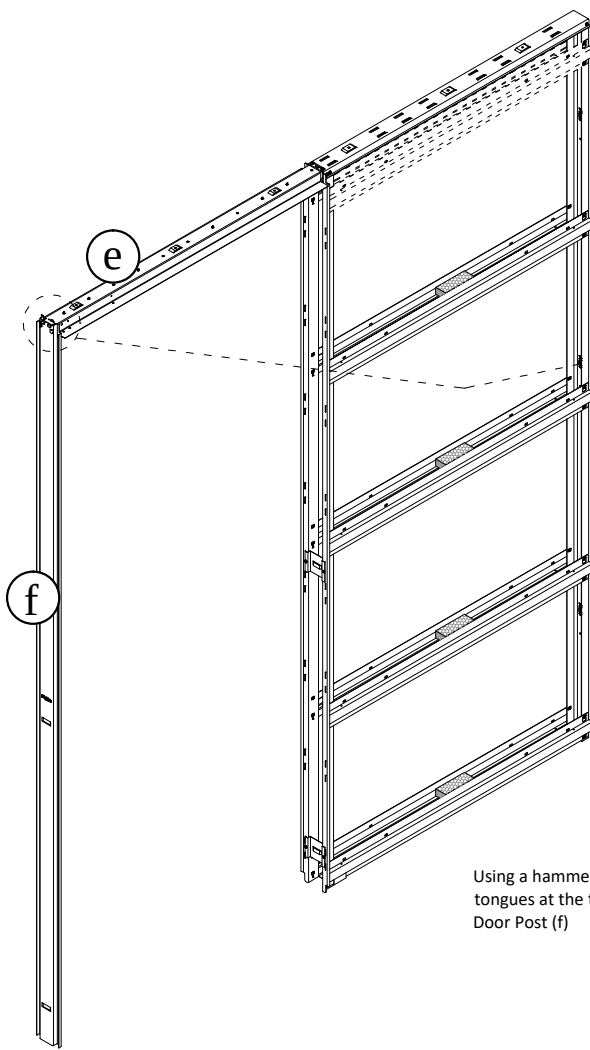


Using a hammer bend the metal tongues at the top of the Metal Door Post (f)

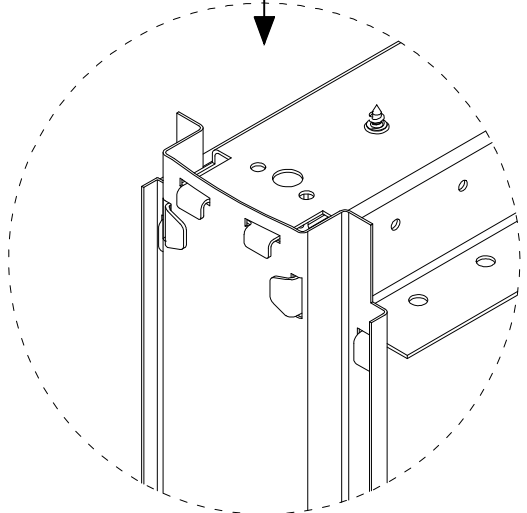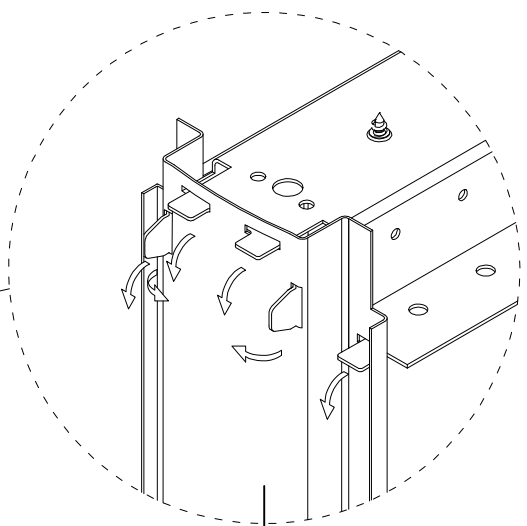


STEP


9

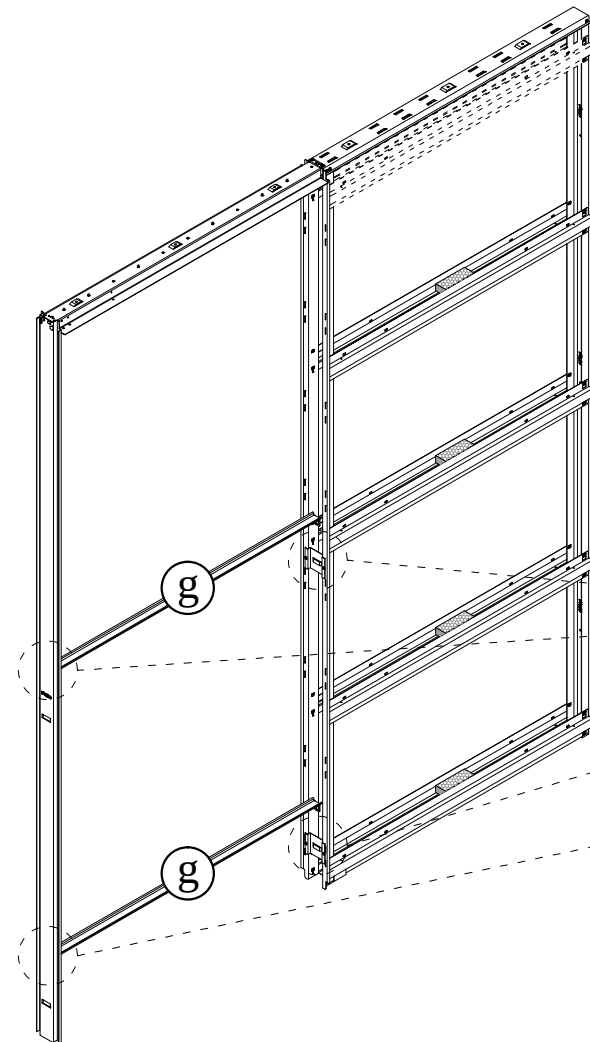

Bend the ends of the Bracers (g) backwards through 90 degrees and locate in the positions on Central Vertical (a) and Metal Door Post (f)



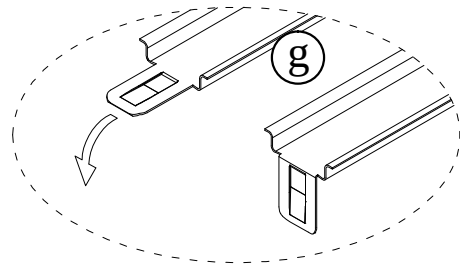


*For assembly purposes only. Remove prior installation

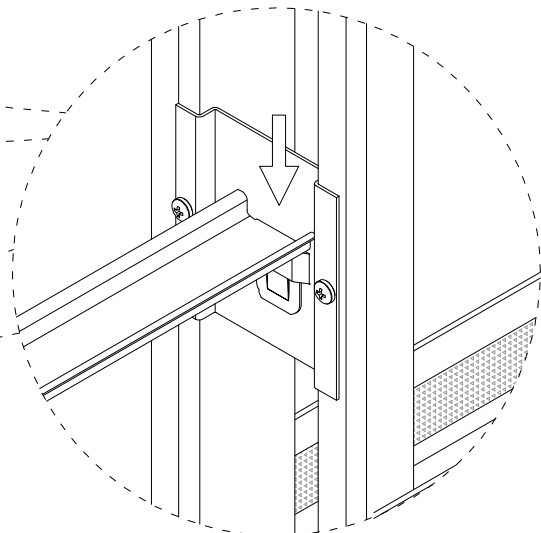


STEP


10

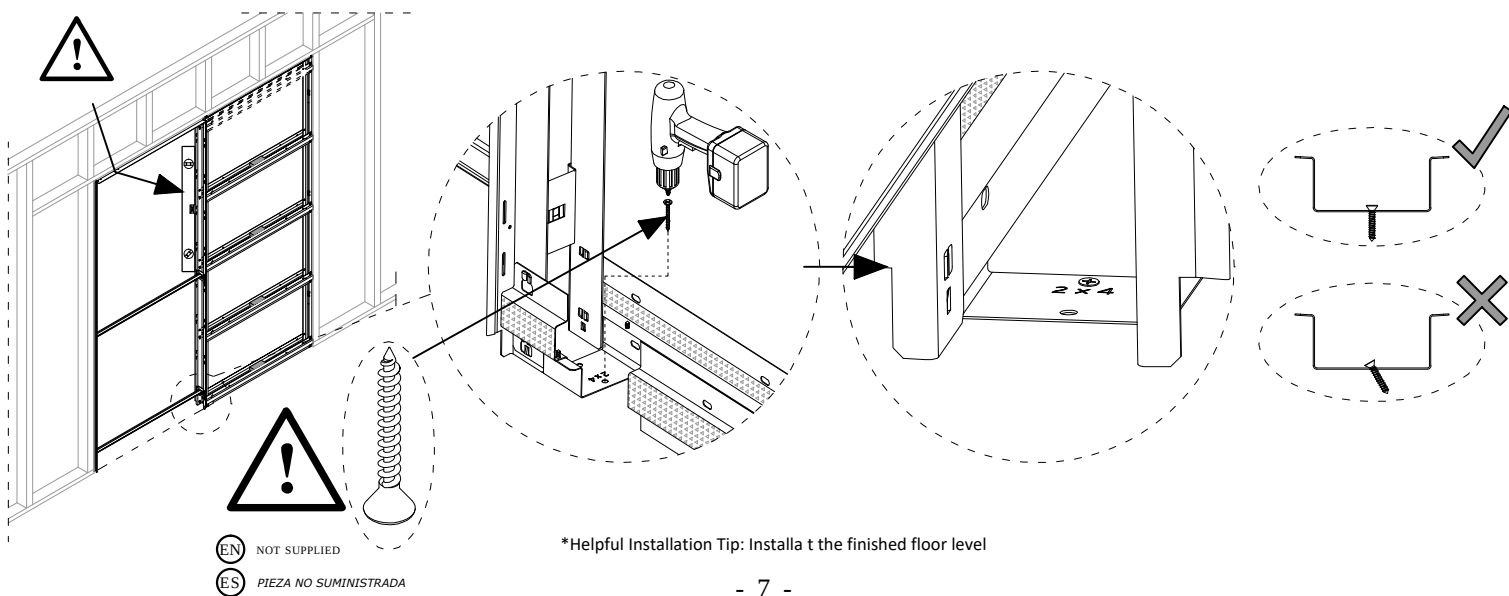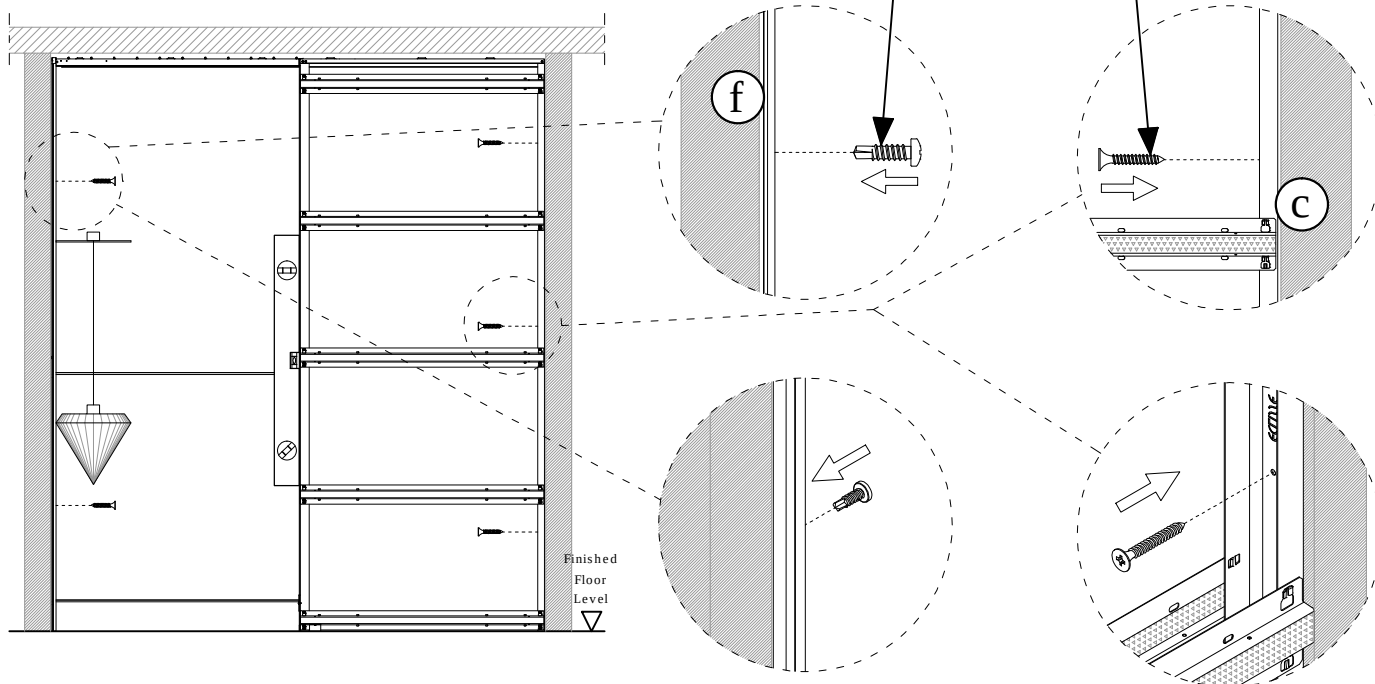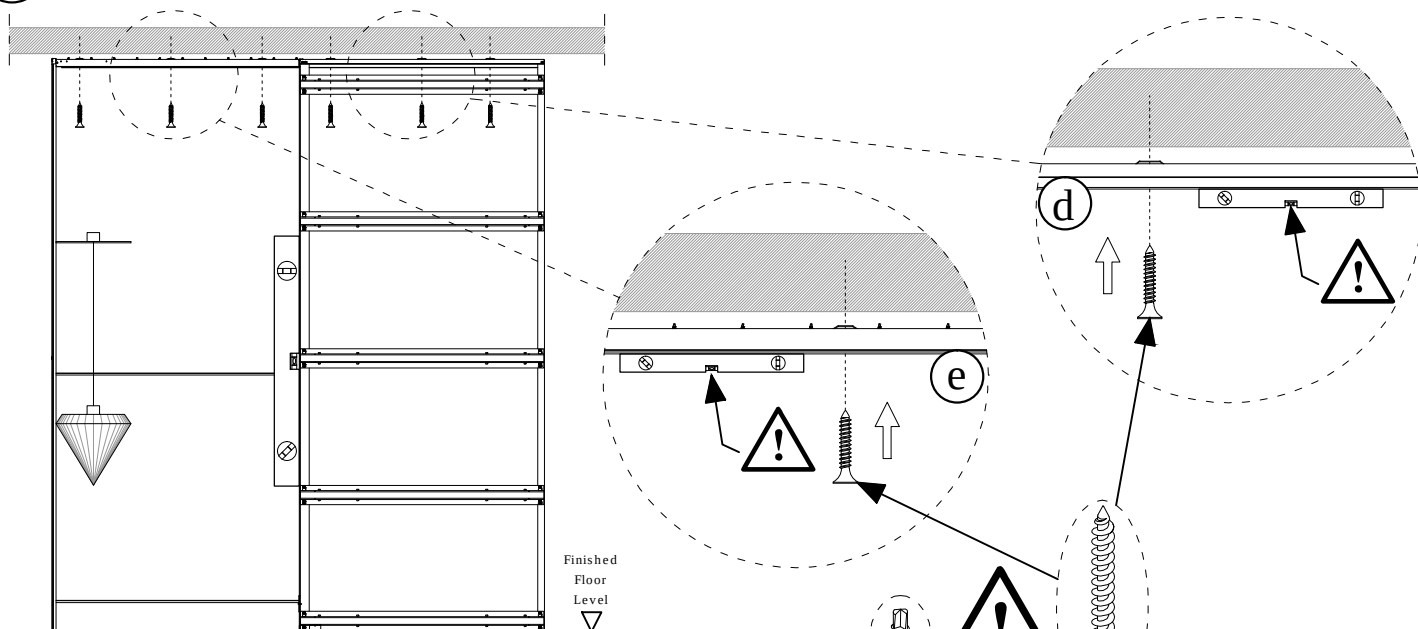

12

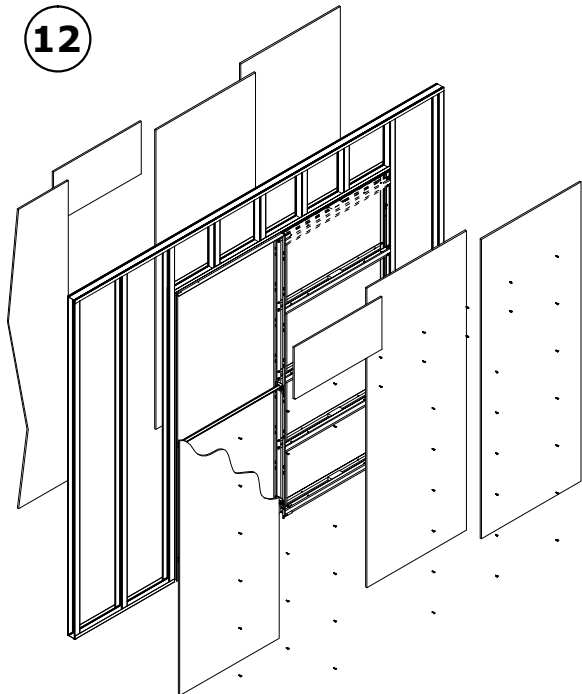

DRYWALL LAYERS:
PLACAS DE CARTON YESO:



1/2"
(12,7 mm)





#7 x 3/4"
(3,9x19 mm)





5/8"
(15,9 mm)



#7 x 1"
(3,9x25 mm)

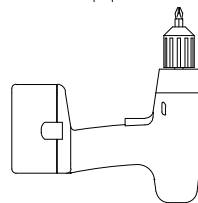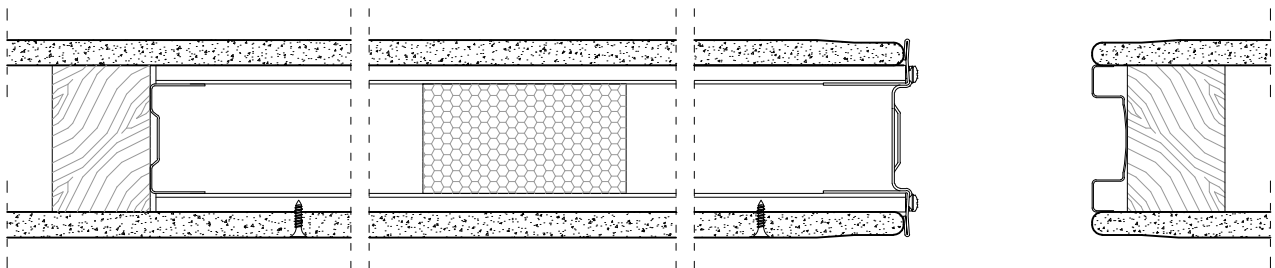

603024806

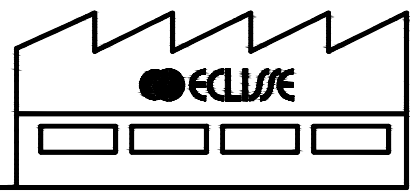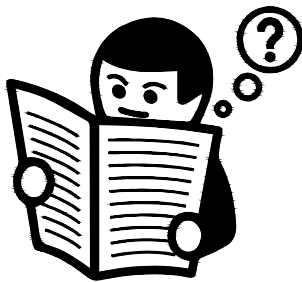

EURO ARCHITECTURAL, LCC - Tel.: 001 800 614 1474 - info@euro-arch.com - www.eclisse.us

www.eclisse.us

