
TIPS TO INSTALL YOUR DOOR

1. CHECK YOUR DIMENSIONS

1- Measure all components:


Measurement of the header should equal the measurement of the *threshold*. *Strike jamb* should equal the measurement of the *hinge jamb*. (*H*=*T*, *HJ*=*SJ*)

2- Is the floor level?
3- Is the threshold and header level?
4- Are the jamb legs level and vertical?

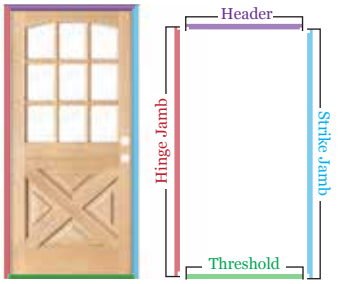


2. LEVEL THE OPENING


Check to make sure rough opening is square and level. If the floor is not level you will need to shim, or place opening, to create a level surface to install door on.

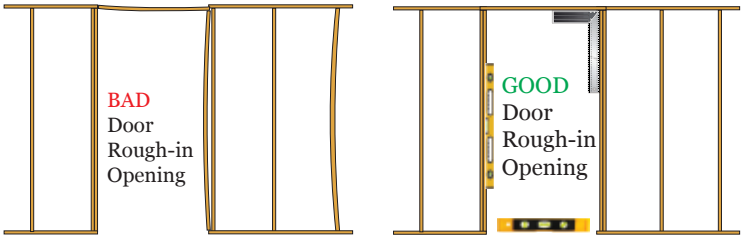

If the floor is NOT level, your door will not be square!


Solution: Add shims to create a square fit using levels and accurate measurements. Be sure shims are not too tight or loose fitting. If needed, you can also use shims to make the floor level. *1/8 Reveal(gap) exists all round the door, when adding shims, be aware they will take or add to this gap/reveal. Losing the existing 1/8 gap will make the door difficult to open and close.

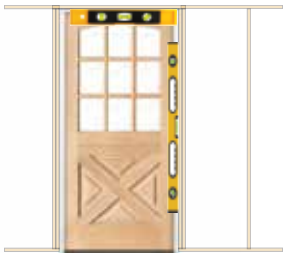

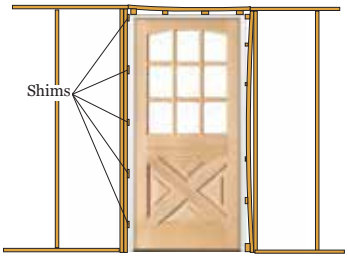

3. CHECK FOR PLUMB

Check: Is the installed door's vertical plane straight and level (plumb)?

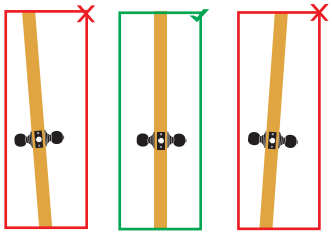

4. CHECK FOR SQUARE

Check: Is the installed door and jamb square in all corners?



5. CHECK FOR TRUE

Check: Do a dry fit before installing to check all elements are fit. Once installed, double check all elements of the installed door are perfectly level, plumb and square to make a TRUE-ly perfect fit.

