

## **Measuring Tips:**

- 1. Use a steel tape measure for more accuracy.
- 2. Round each measurement to the nearest  $\frac{1}{2}$ ".
- 3. Record width (Left to Right) first and then height (Top to Bottom) example, 20W x 64H
- 4. For Inside Mounting: Deduct ½" from the overall width for mounting hardware and to allow the blinds/shade to raise and lower freely.
- 5. For Outside Mounting: The blind/shade covers more than just the window frame; add an overlap of 1" to 2" on each side for additional privacy and light blocking.
- **6.** Contact customer service at 844 318 6168 or email at <u>customerservices@allstrongusa.com</u> for additional help.

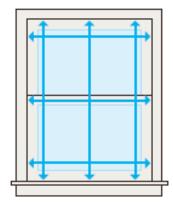

## **How to Measure for an Inside Mount:**

- o Width:
  - Measure inside the window frame
  - Measure across in three parts (top, middle, bottom)
  - Select the smallest width, this will allow the blind or shade to raise or lower freely
- Height:
  - Measure inside the window frame
  - Measure top to bottom in three parts (left, middle, right)
  - Select the longest length to make sure the blind or shade cover window opening completely.
- o Depth:
  - Make sure the window frame is deep enough to fit your product.
  - Measure the depth from the wall to the window glass or metal frame.
  - o Find the product depth in "Product Specifications".

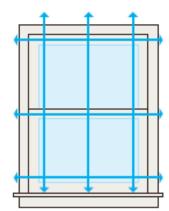

## **How to Measure for an Outside Mount:**

- o Width:
  - Measure outside the window frame
  - o Measure across in three parts (top, middle, bottom)
  - Select the larger width, this will allow the blind or shade to cover the opening window opening
- Height:
  - Measure outside the window frame
  - Measure top to bottom in three parts (left, middle, right)
  - Select the longest length to make sure the blind or shade cover window opening completely.