



Aluminium Mirror




READ THE INSTRUCTIONS CAREFULLY, familiarize yourself with all the parts as shown in the exploded view. The exploded view will also provide a helpful reference when relating to the location of the various parts and how they are mounted.

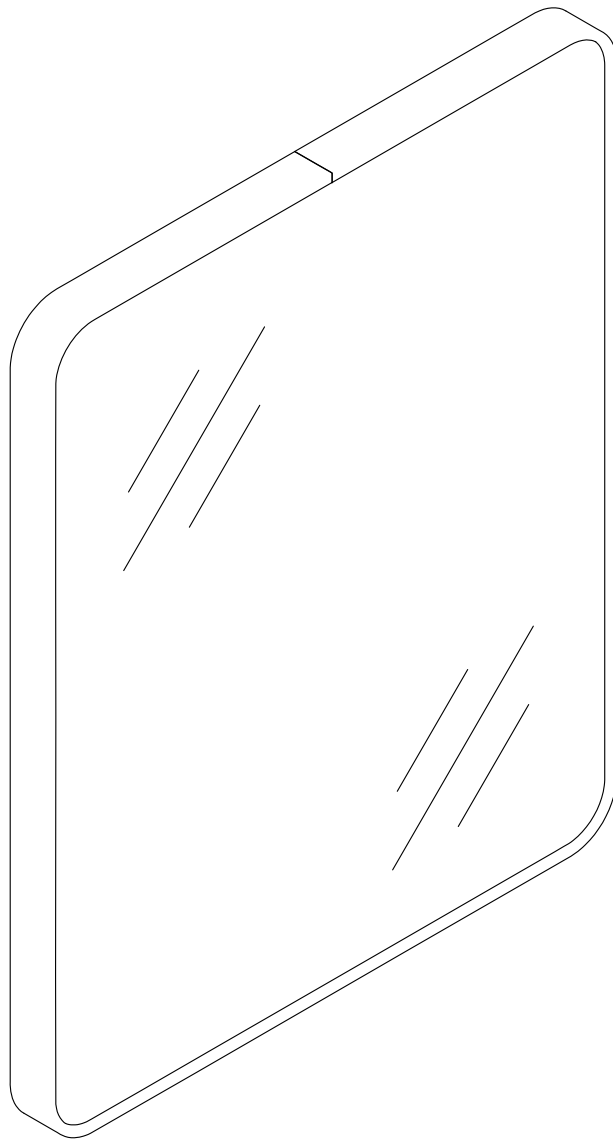

② SCREW 1 1/2"







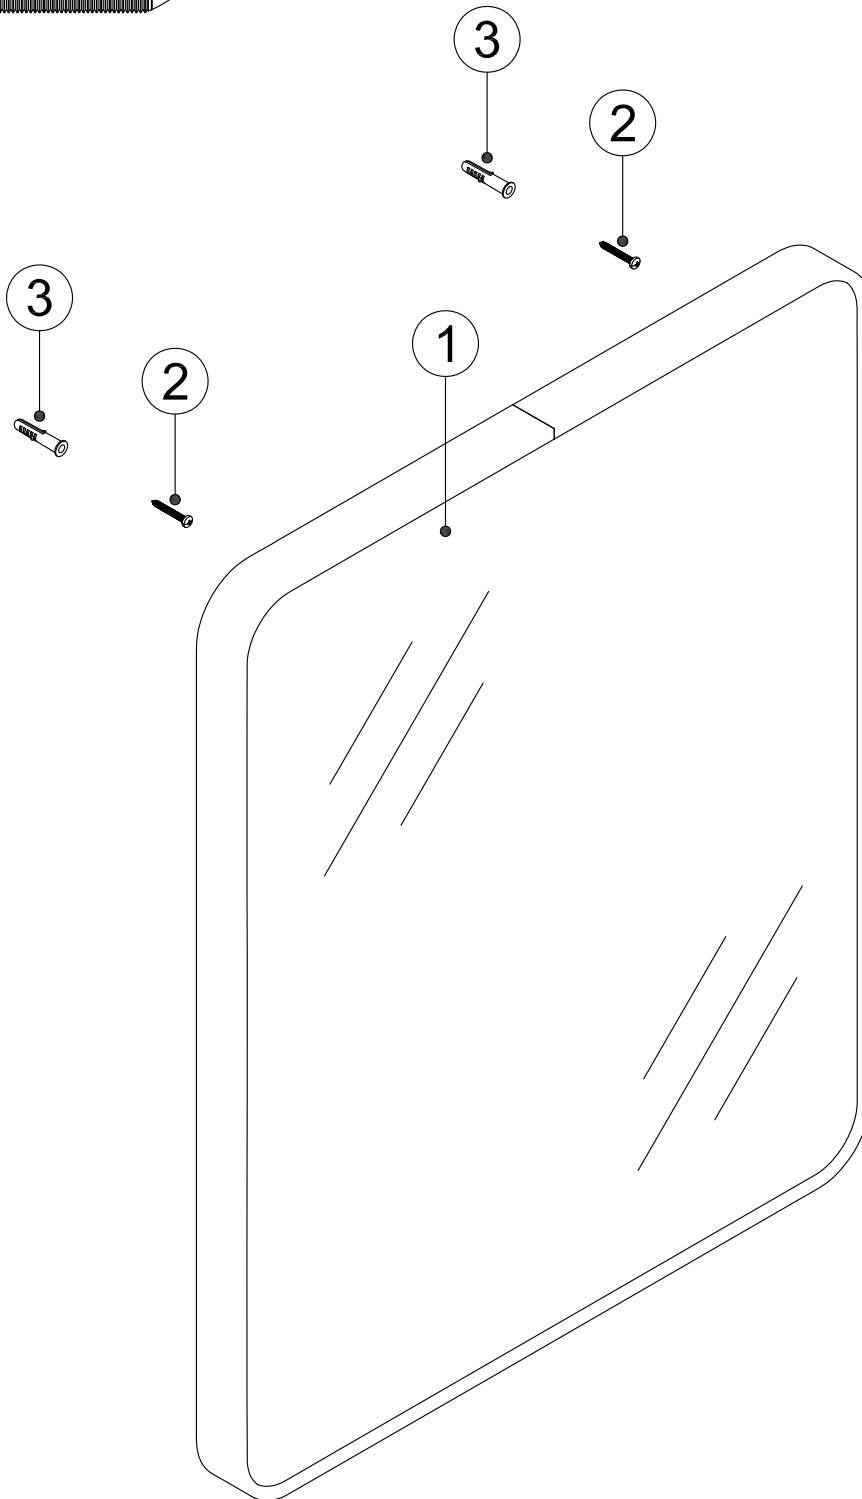


PARTS LIST.

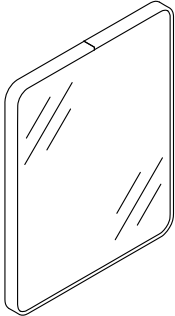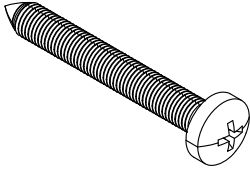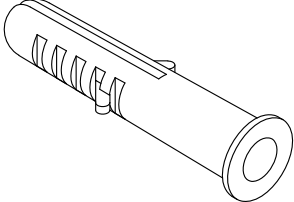① 	② 	③ 
MIRROR(1 PCS)	1 1/2" SCREW(2 PCS)	WALL PLUG(2 PCS)


WARNING: Safety glasses should always be worn when working with drill.

RECOMMENDED TOOLS

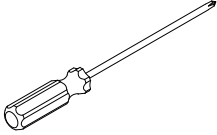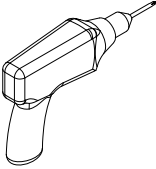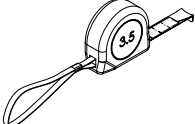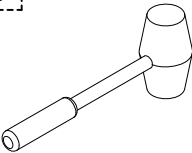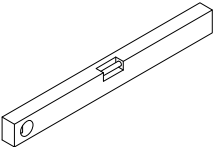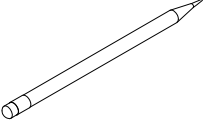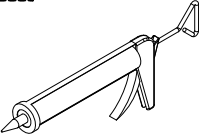
① 	② 	③ 	④ 	⑤  5/16"
SCREW DRIVERS	DRILL	MEASURE TAPE	RUBBER Mallet	DRILL BITS
⑥ 	⑦ 	⑧ 	⑨ 	
LEVEL	PENCIL	SAFETY GLASSES	SILICONE	

**Choose the Mirror direction - vertical or horizontal.
Follow the appropriate diagram below .**

Vertical Assembly


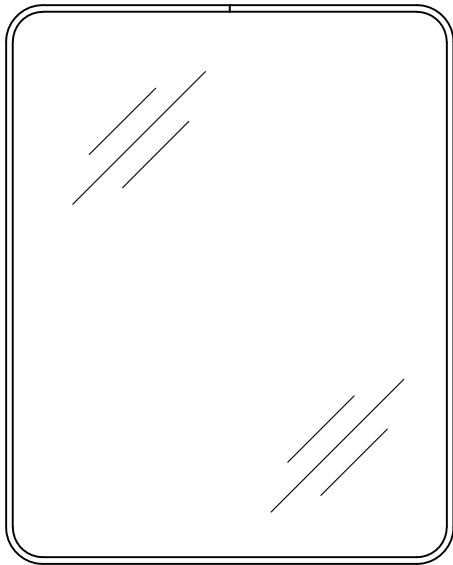


Horizontal Assembly

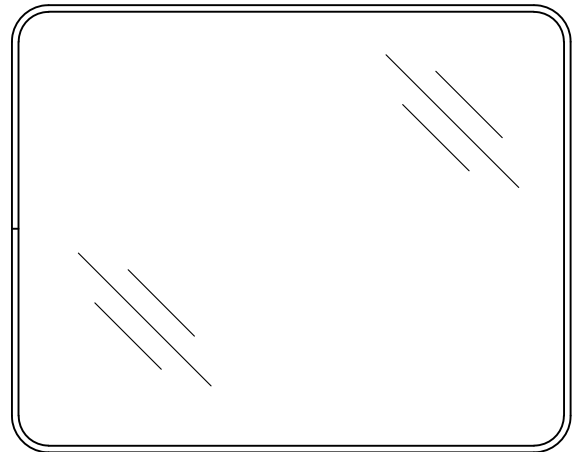

STEP 1


Select the desired position of the mirror. Level and mark the location.

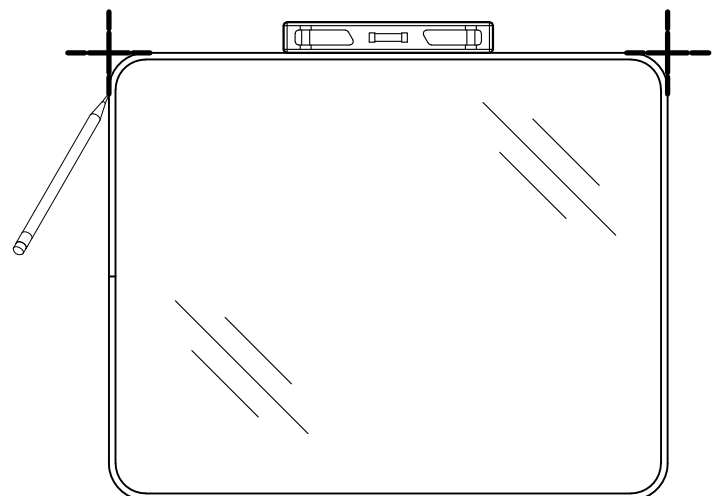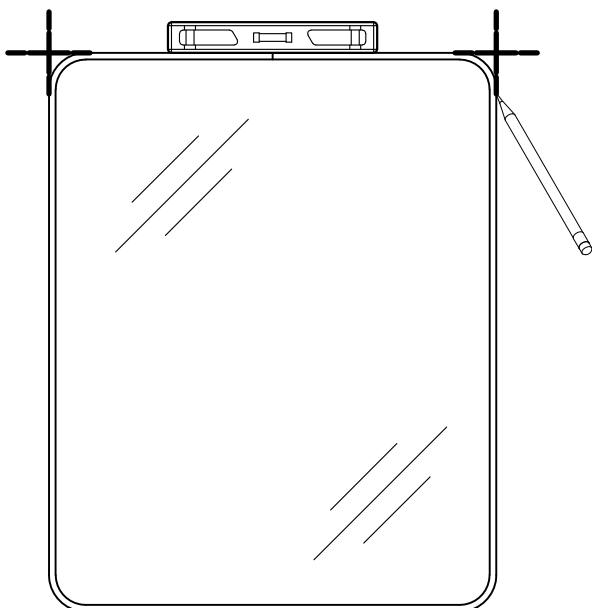

STEP 2

Mark the drilling locations and ensure marking are leveled, based on vertical or horizontal mounting. See chart below.



Model No.	Vertical Assembly (A)	Horizontal Assembly (A)
2436	4"	7"
3036	4"	7"
4836	4"	7"
3059	4"	7"
3071	4"	7"

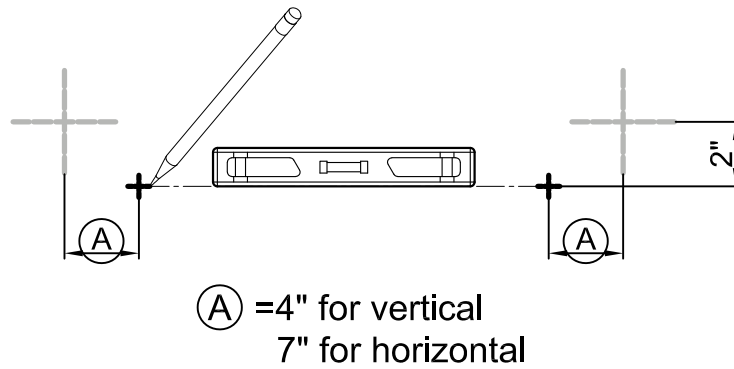

STEP 3


3.1 Drill holes about 1 1/2" deep at each of the marked locations.

3.2 Insert wall plugs (3) .

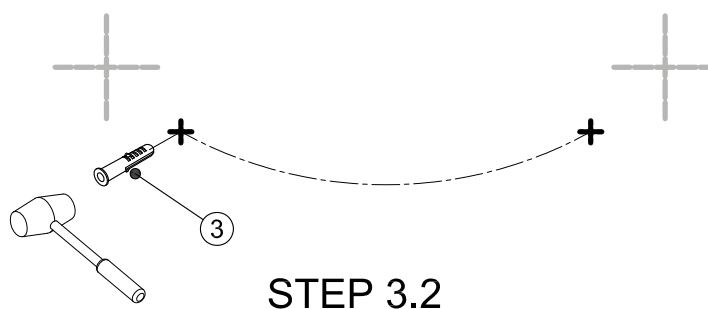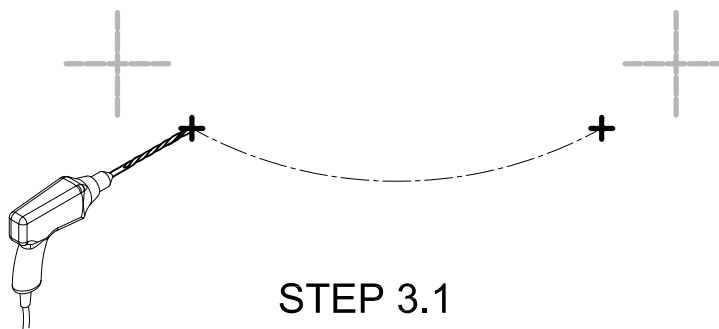

STEP 4

Install Screw ② . Leave a gap of 1/8" between the head of the screw and the wall.

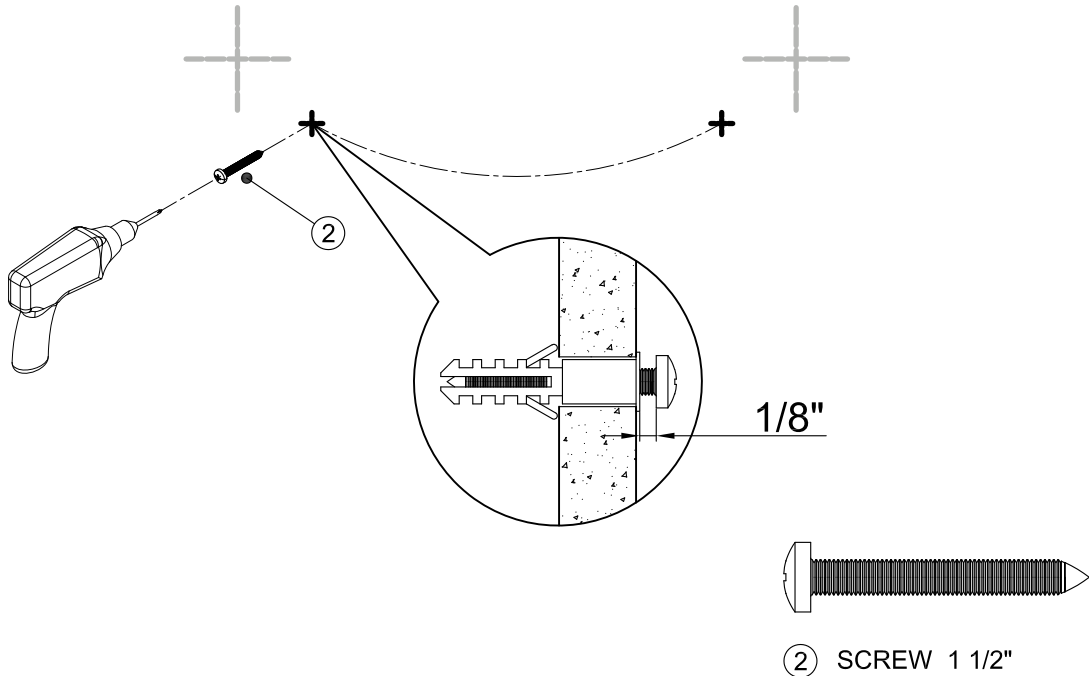

STEP 5

Tear off the double-sided tape film from Pad, place the mirror against the wall and slide it down, as shown in Figure 2.

