


STYLE NO:

6037-7037-WHT | 36-Pair Over the Door Shoe Rack

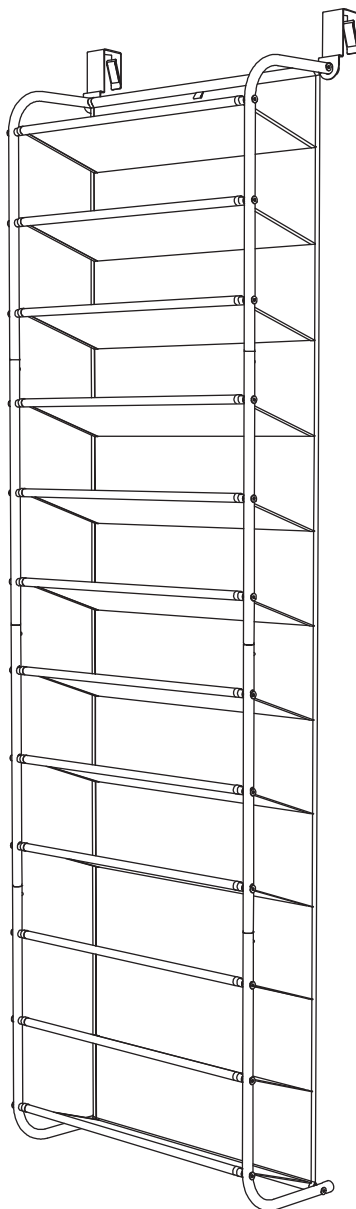

Part Reference

Part	Reference
A	F11673
B	F11674
C	F11675
D	F11676
E	F11677
F	F11678
G	F11679
H	F11523
I	F11680
J	F11681


No additional tools required if hanging over the door.
Hex wrench provided.
Phillips screwdriver and drill needed if wall-mounting.



A 14 ea
Horizontal Poles



B 4 ea
Middle Vertical Frames

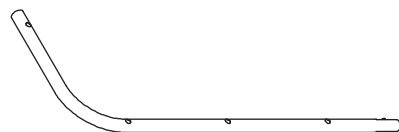

C 2 ea
Top Vertical Frames with Push Tab




D 2 ea
Bottom Vertical Frames




E 28 ea
Hex Screws



F 2 ea
Over the Door Brackets

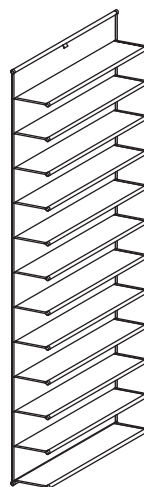

G 1 ea
Mesh Shelves



H 1 ea
Hex Wrench

NOTE: Part (J & K) is for optional mounting of frame.




I 4 ea
Wall Screws




J 4 ea
Wall Anchor

STEP 1:

- ☐ Place one of each frame sections (**C,D**) and two of middle frame section (**B**) on a flat hard surface and clip together with the push tabs.
- ☐ Attach thirteen horizontal poles (**A**) to frame sections using thirteen hex screws (**E**).
- ☐ Tighten with hex wrench (**H**).
- ☐ Install over the door bracket (**F**) by sliding onto the top vertical frame pole (**C**) past the first hole.

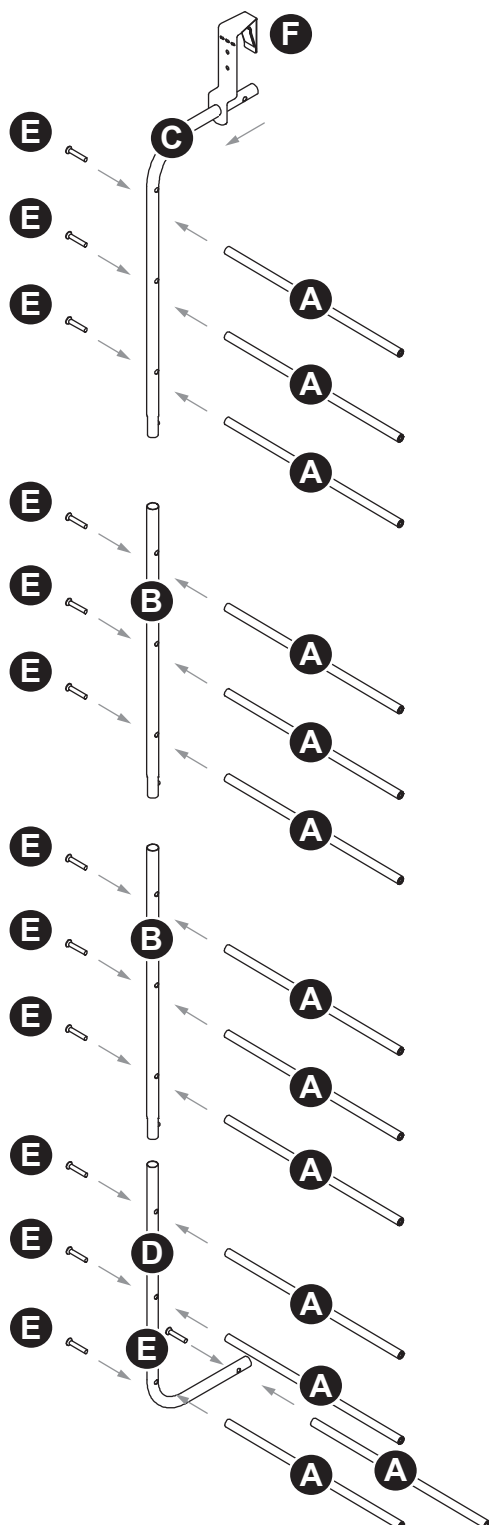
**STEP 2:**

- ☐ Attach remaining horizontal pole (**A**) and hex screw (**E**) behind the bracket (**F**).
- ☐ Tighten with hex wrench (**H**).
- ☐ Unfold the mesh shelves (**G**) and install onto horizontal poles.

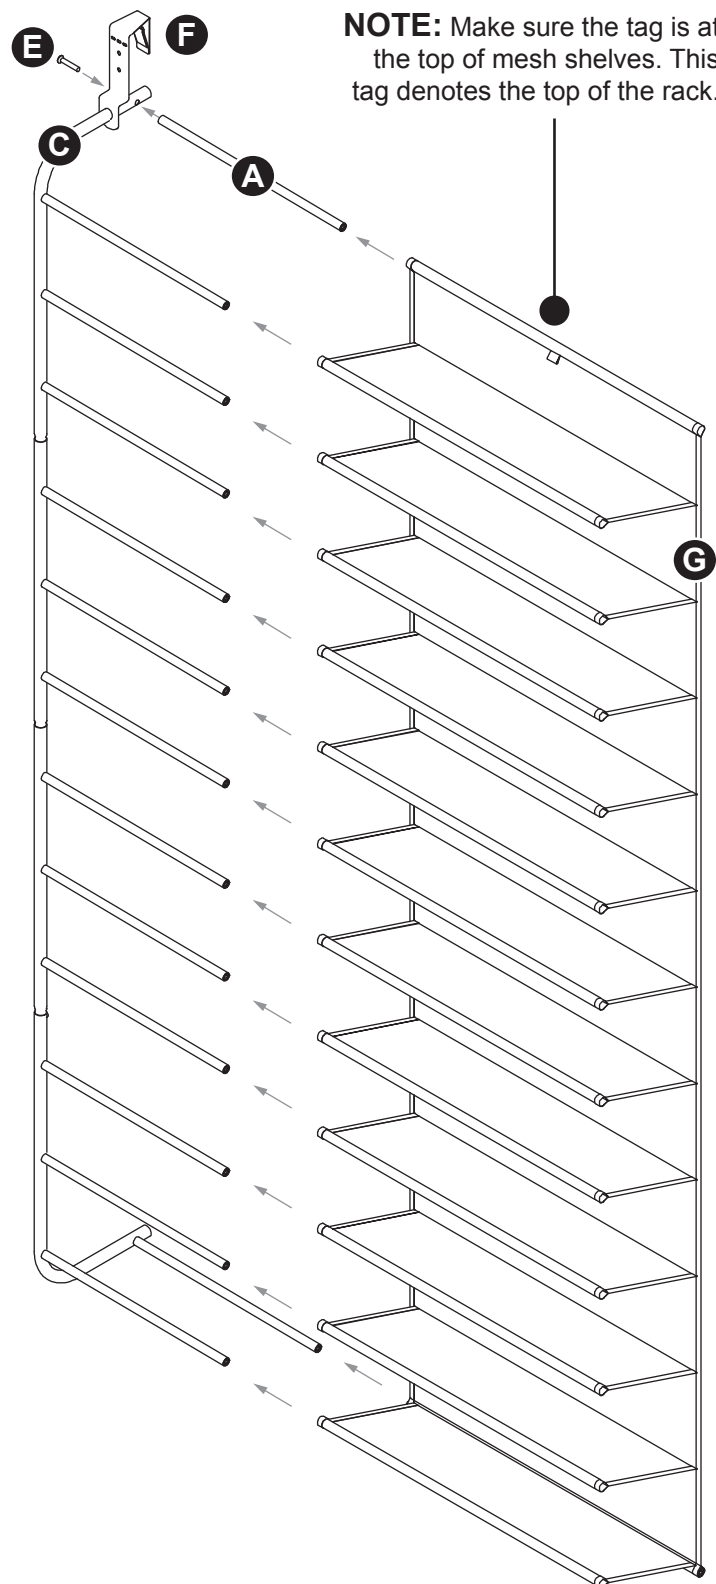


STEP 3:

- ☐ Clip together remaining frame sections (B,C,D) with the push tabs.
- ☐ Install over the door bracket (F) by sliding onto the top vertical frame pole (C) past the first hole.

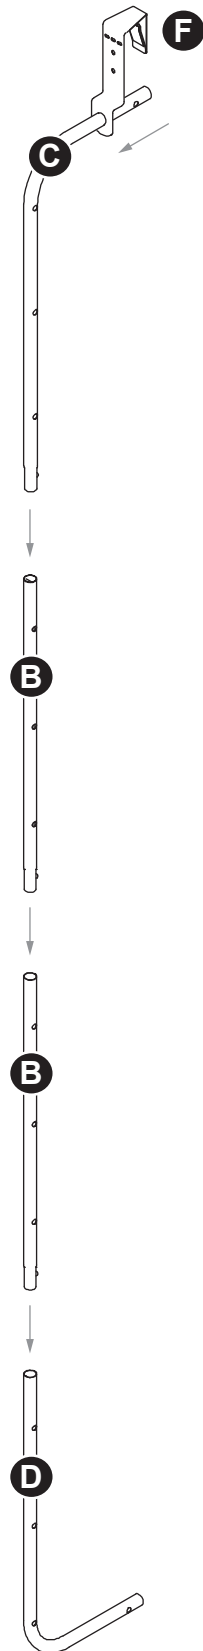
**STEP 4:**

- ☐ Align assembled side frame section with horizontal poles (A) and attach using hex screws (E).
- ☐ Tighten with hex wrench (H).



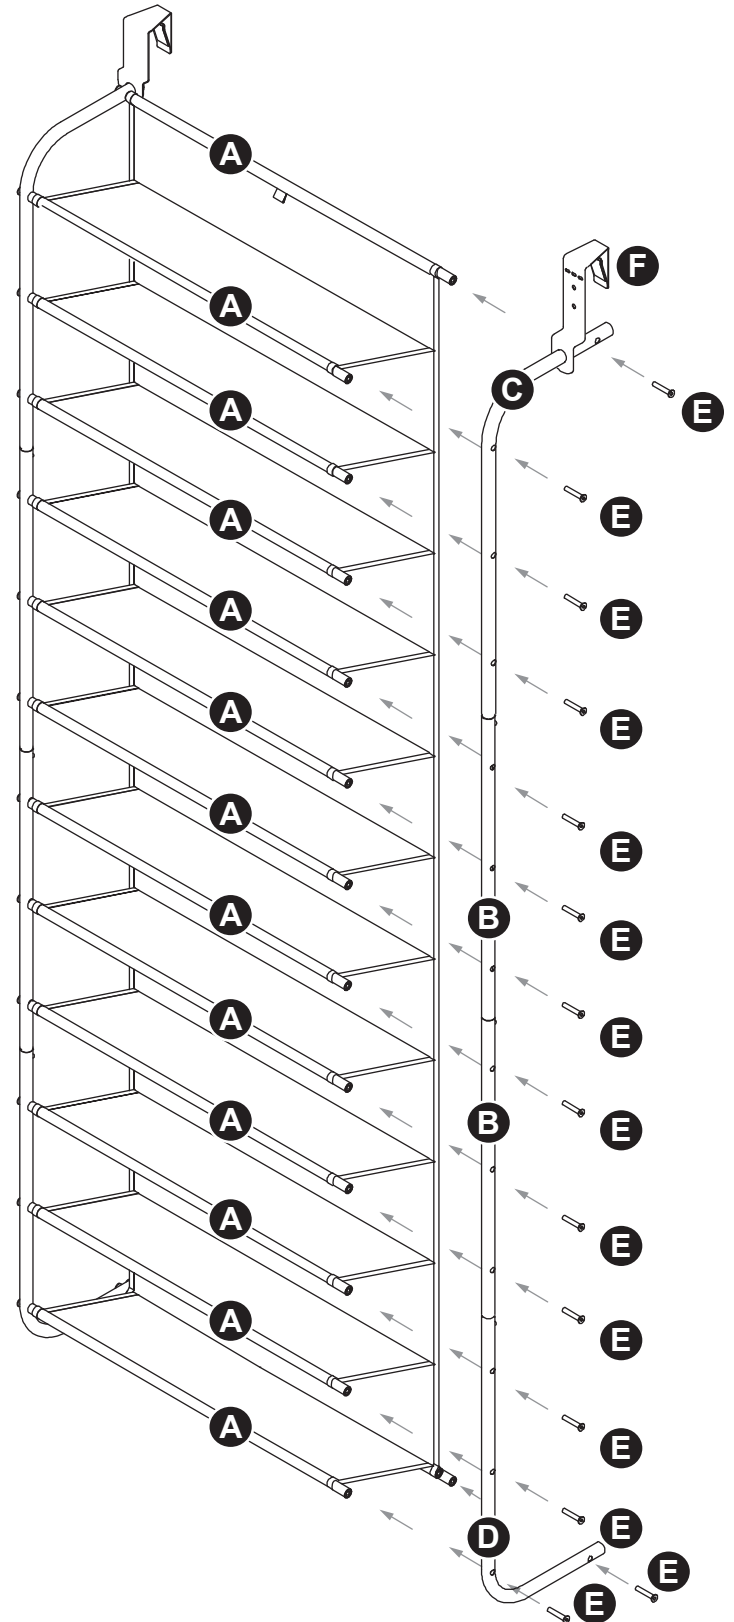


STEP 4:

☐ Lift the assembled shoe rack and place over an interior door.

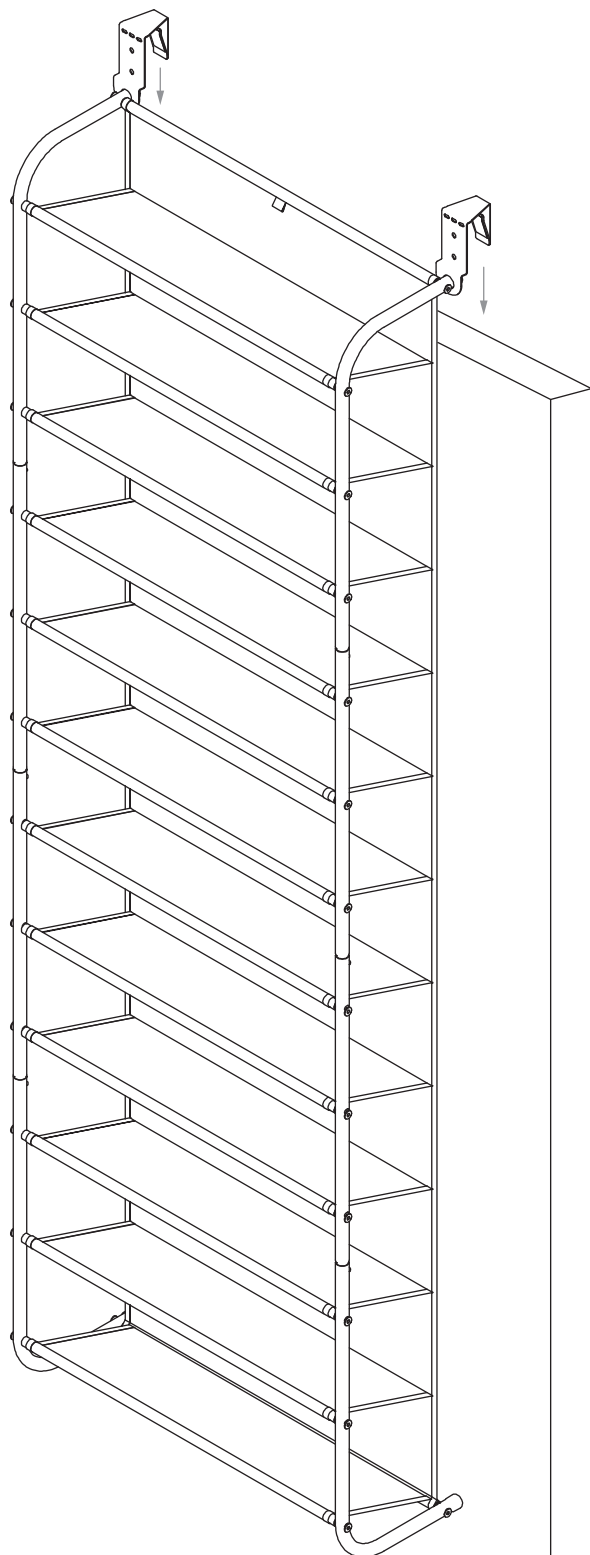**INSTRUCTIONS FOR WALL-MOUNTING:**

- ☐ Calculate and measure where the shoe rack will be placed on the wall.
- ☐ Insert wall anchors (**J**).
- ☐ To use the over the door brackets (**F**) break off at perforation.
- ☐ Use a Phillips screwdriver to tighten screws (**I**) into wall.

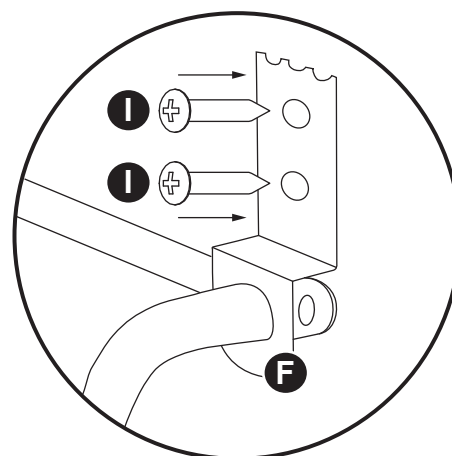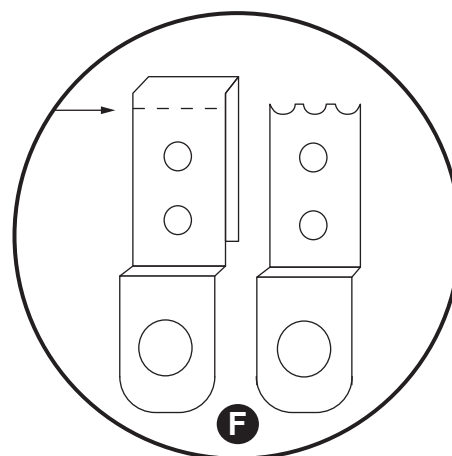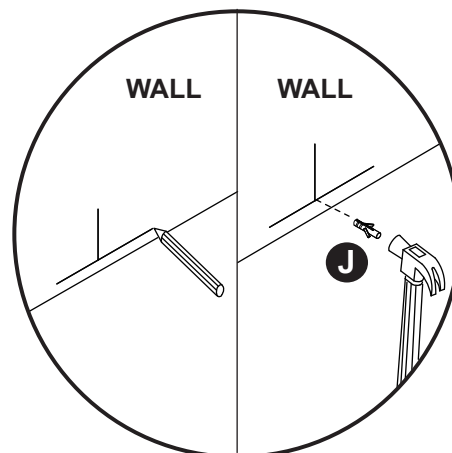

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday, or email: help@whitmor.com. Visit us online at www.whitmor.com