



# Cotton Colors<sup>®</sup>


## 3D WINDOW FILM

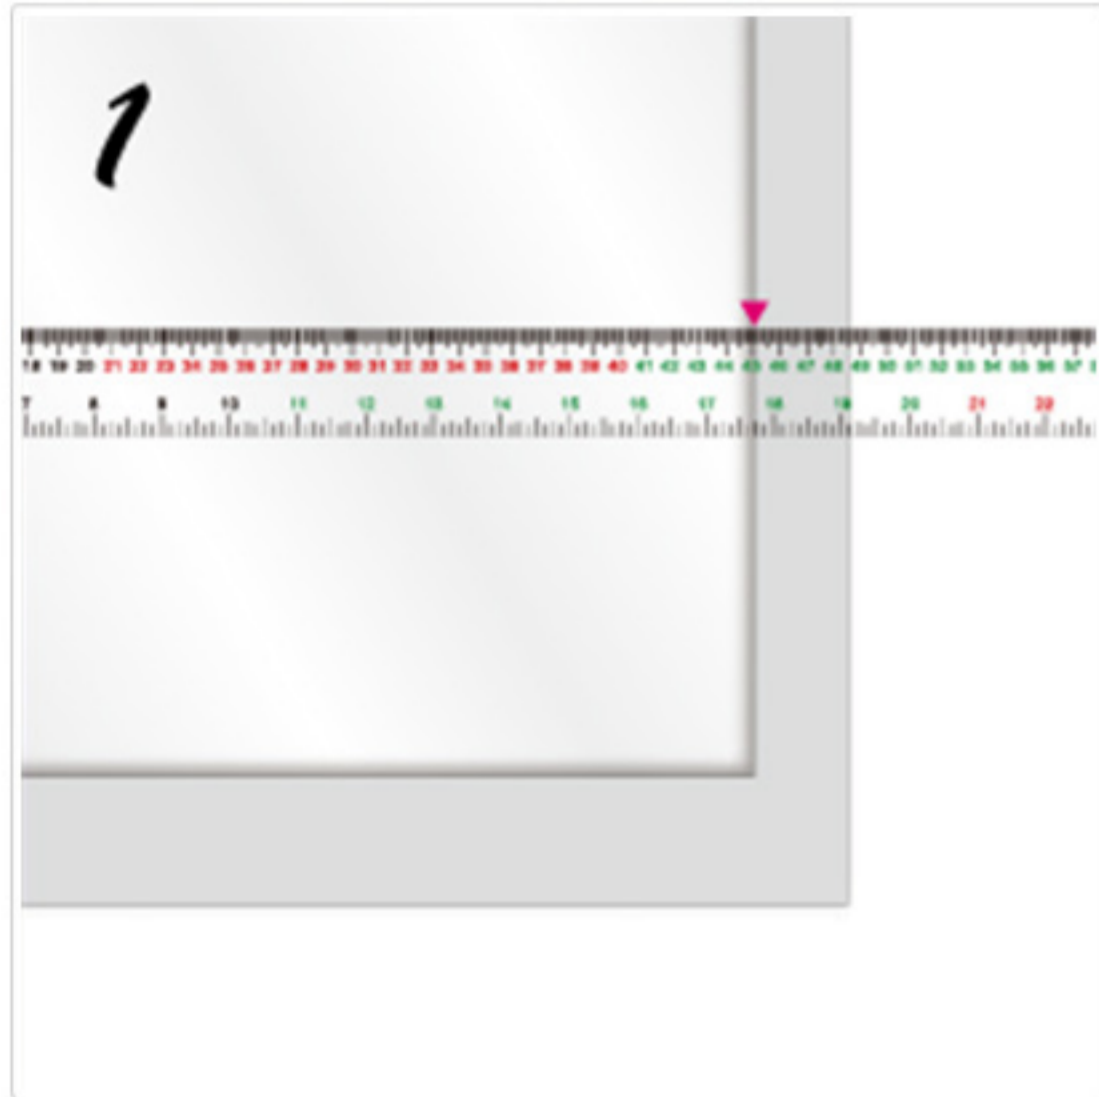

1. Measure windows & trim film.

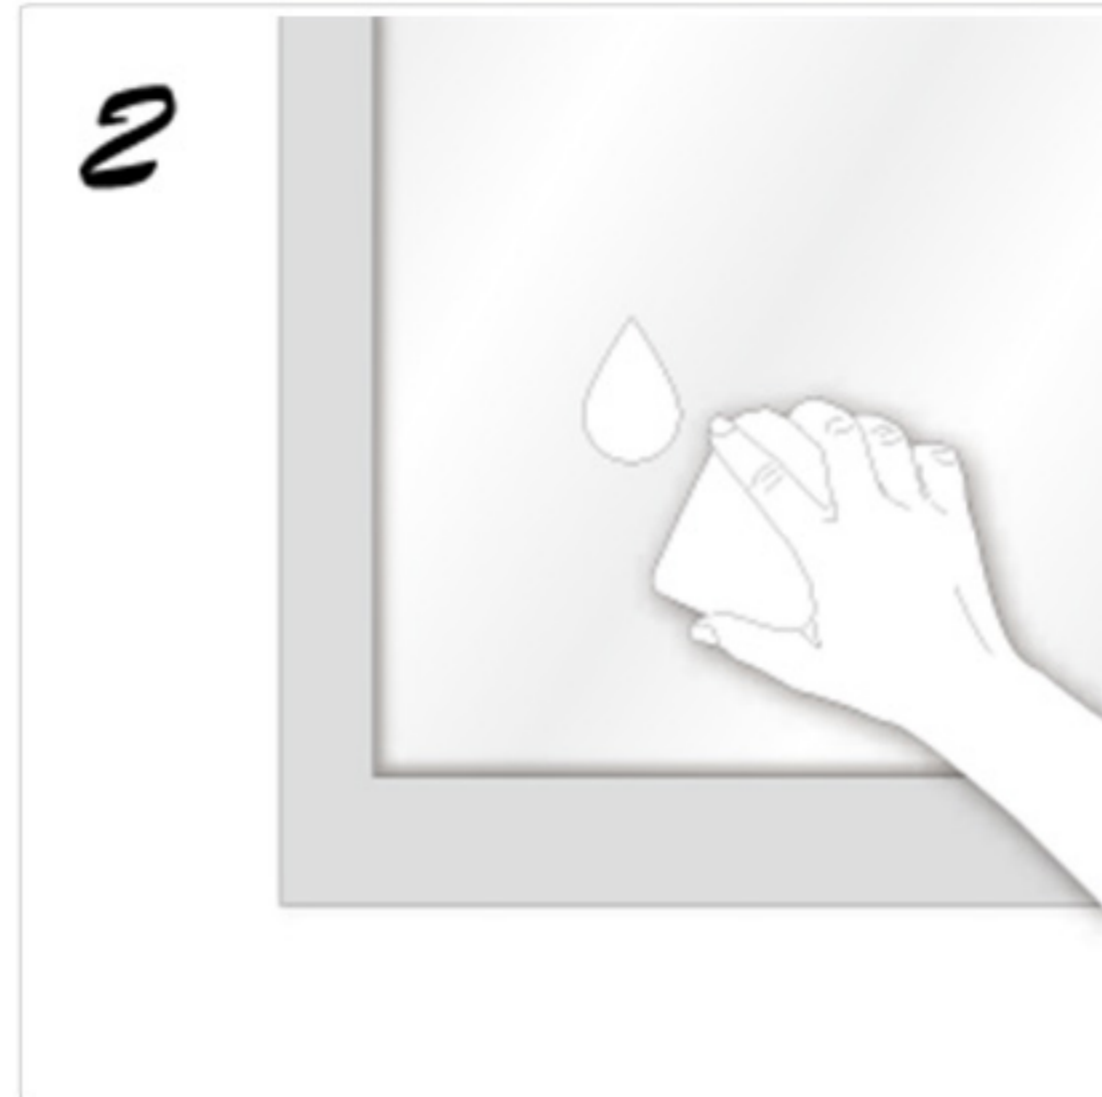


2. Clean windows glass.

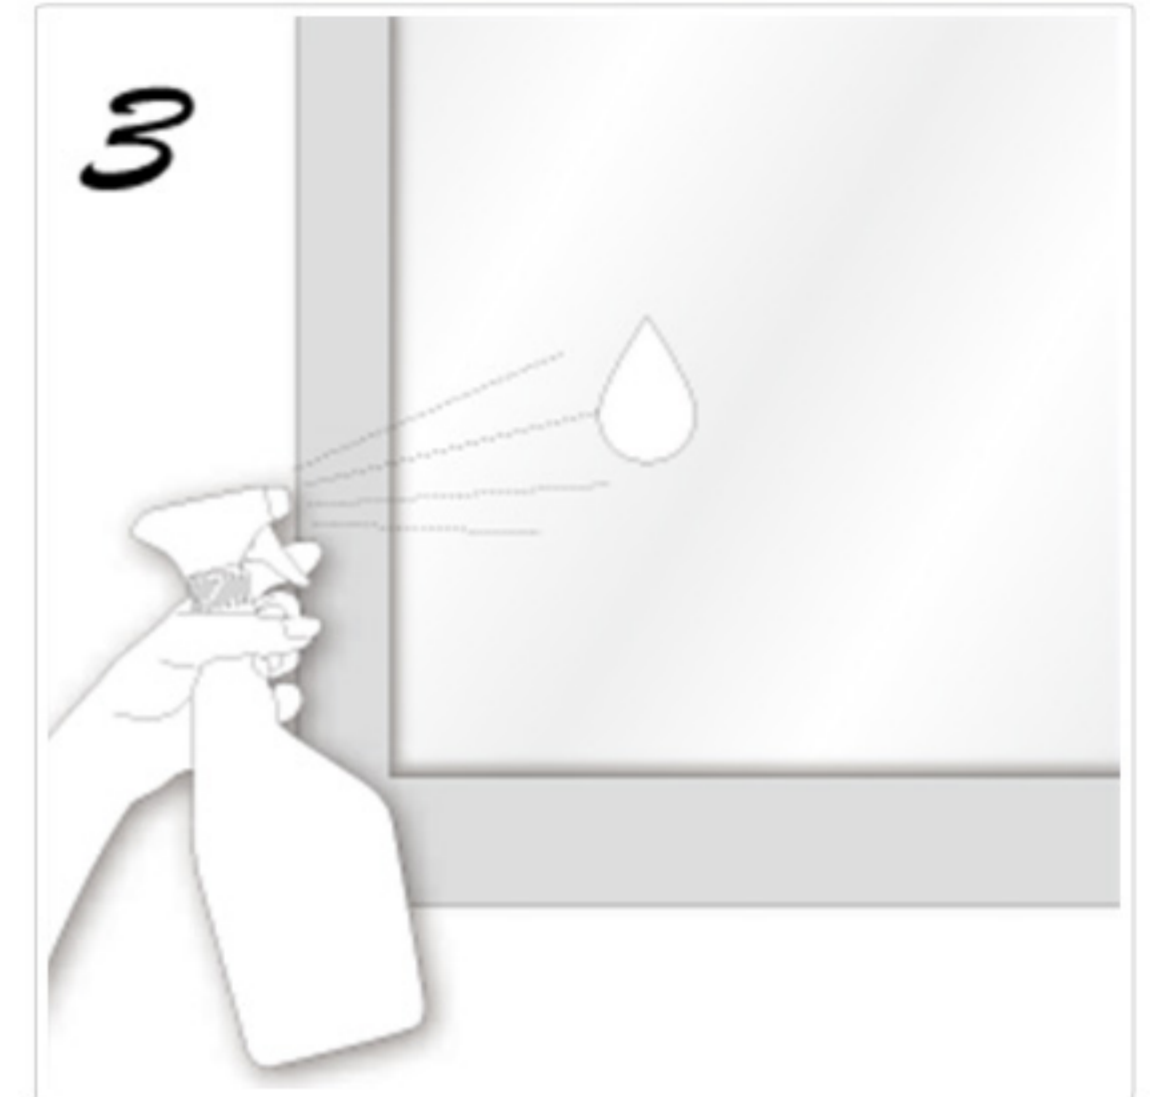


3. Wet the window glass with soapy water.



4. Remove the films' back cover.  
**VERY IMPORTANT.**

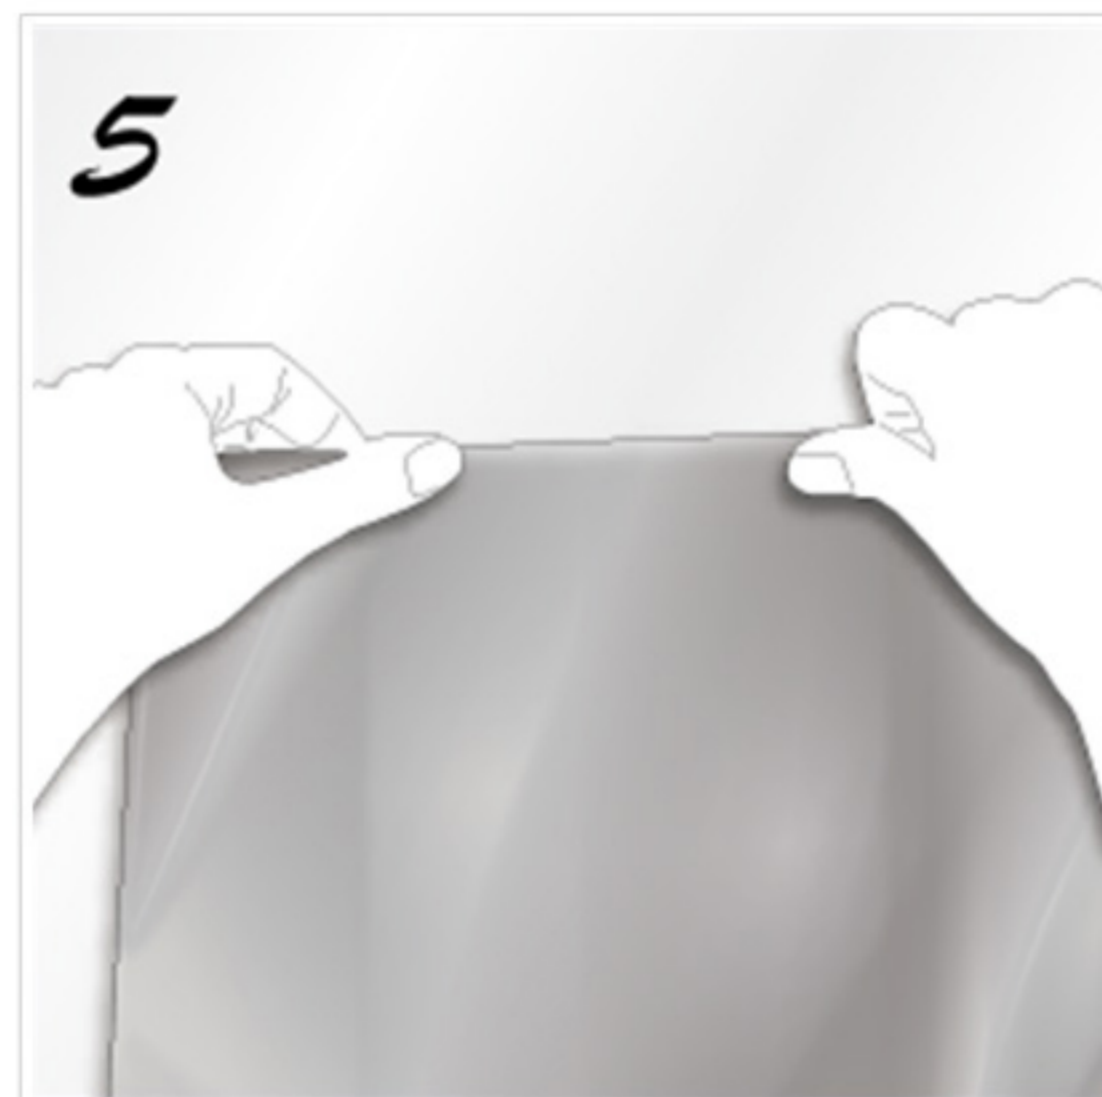

5. Install the films to glass.

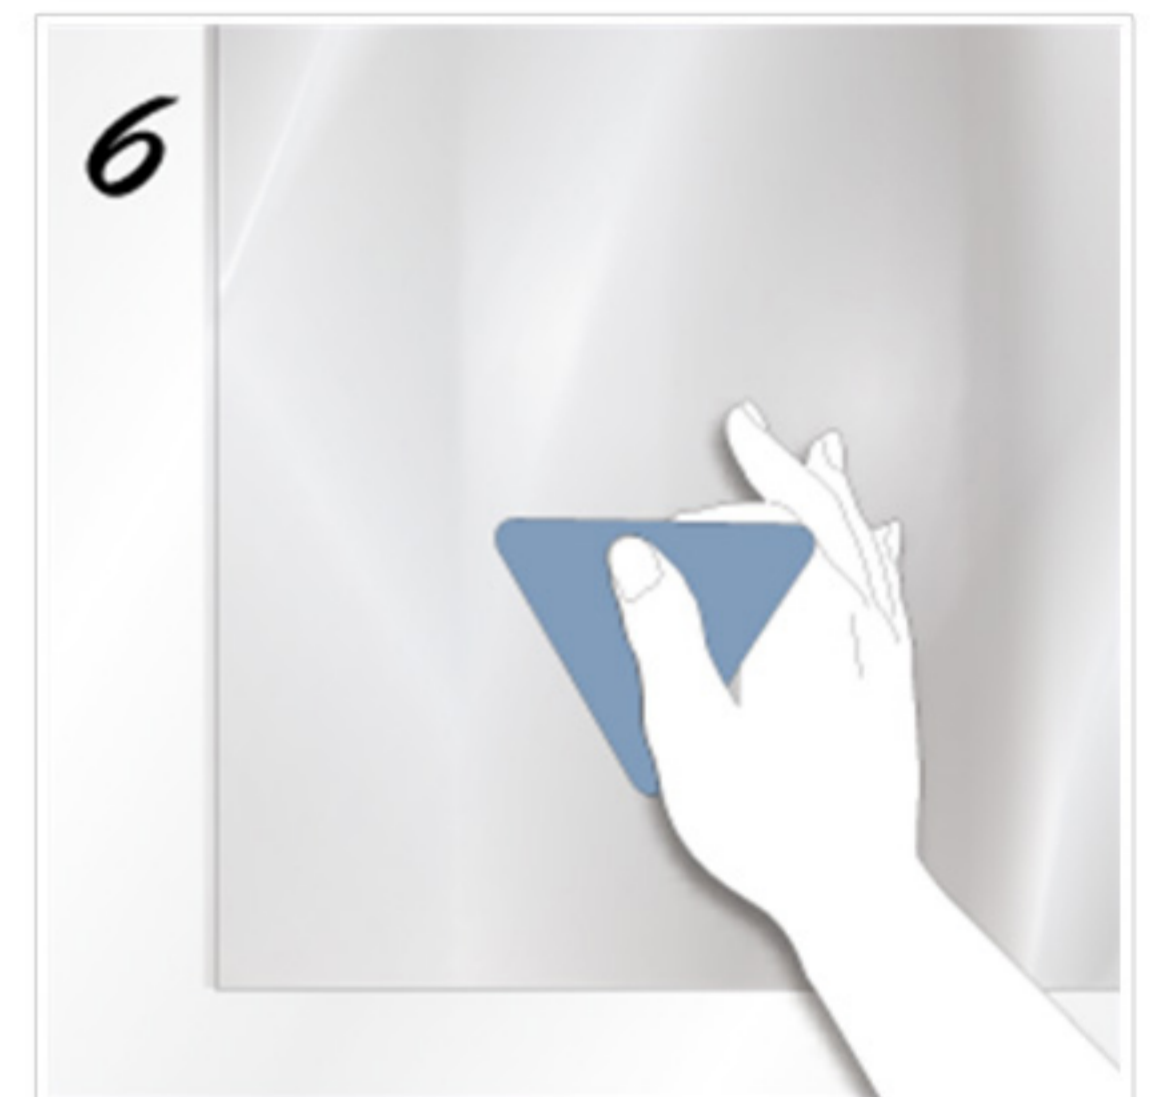

6. Squeeze out water and air bubbles with a smooth tool, such as credit card.