


10" x 34" KICK PLATE

REQUIRED TOOLS:
Pencil, Ruler, Drill, 5/64" Drill Bit, #2 Phillips Screwdriver

NOTE: Kick plate width should be approximately 2" less than the door width.

- INSTALLATION INSTRUCTIONS:**
1. If a protective cover is present, do not remove it until installation is complete.
 2. Center the plate horizontally on the door with the bottom edge about 1" from the bottom of the door.
 3. Use a pencil to mark the pilot holes. Remove the plate and drill 5/64" holes about 3/4" deep.
 4. Attach the plate using the supplied screws. Remove protective cover and wipe the plate with a soft cloth.

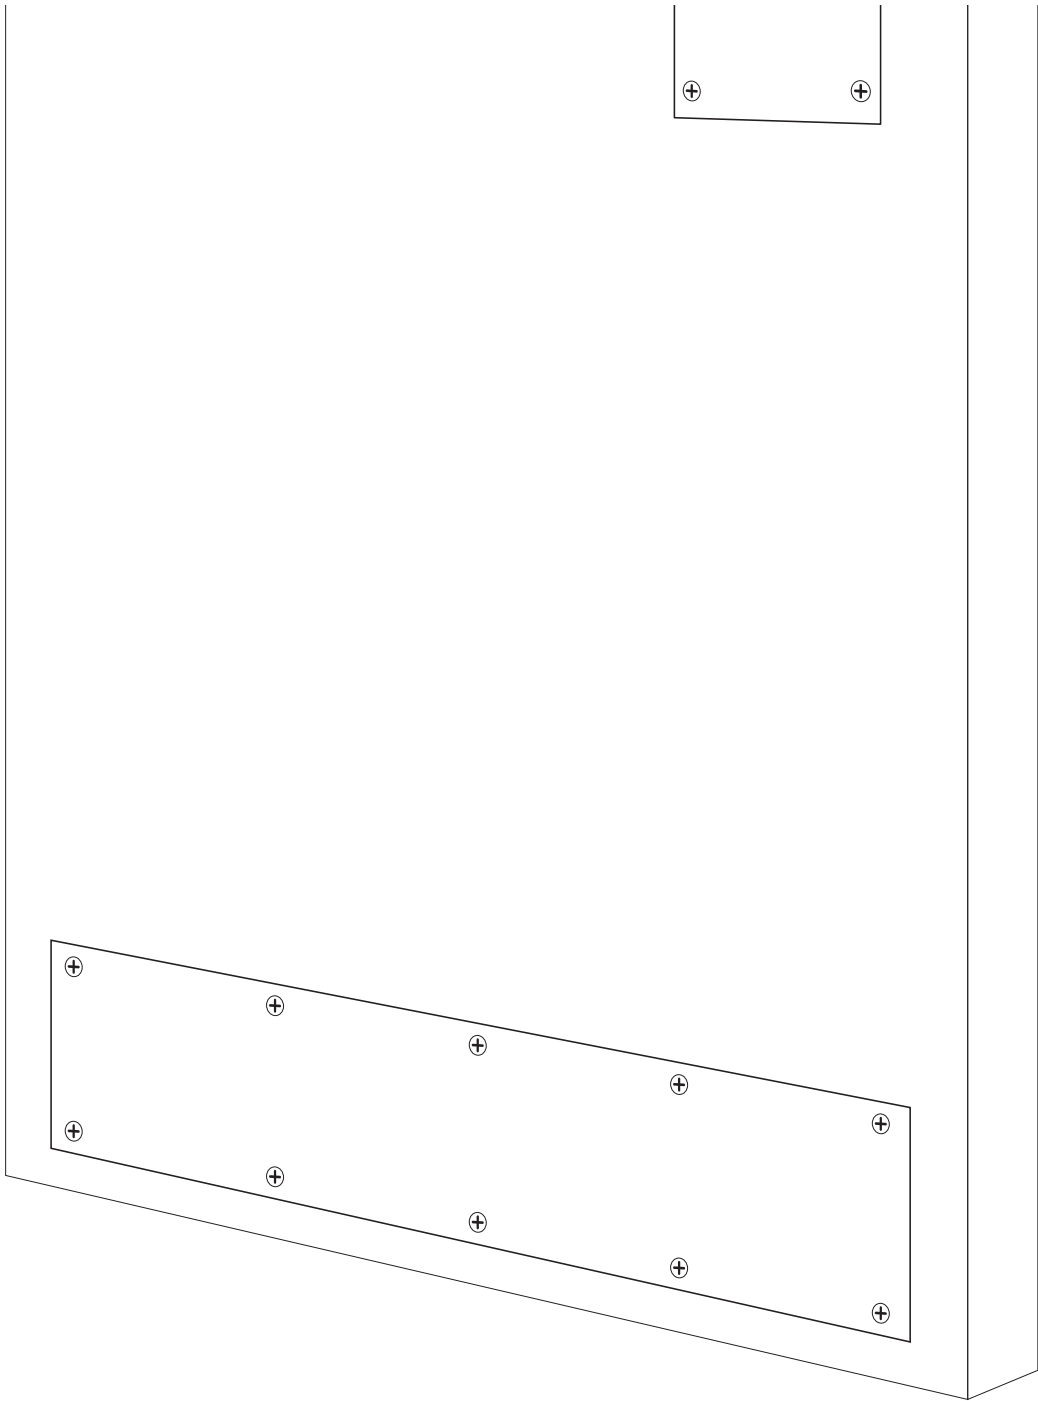

Surface may appear dull until clear protective film cover has been removed.