



Assembly Instruction

WF314704 / WF314705
WF314698 / WF314699








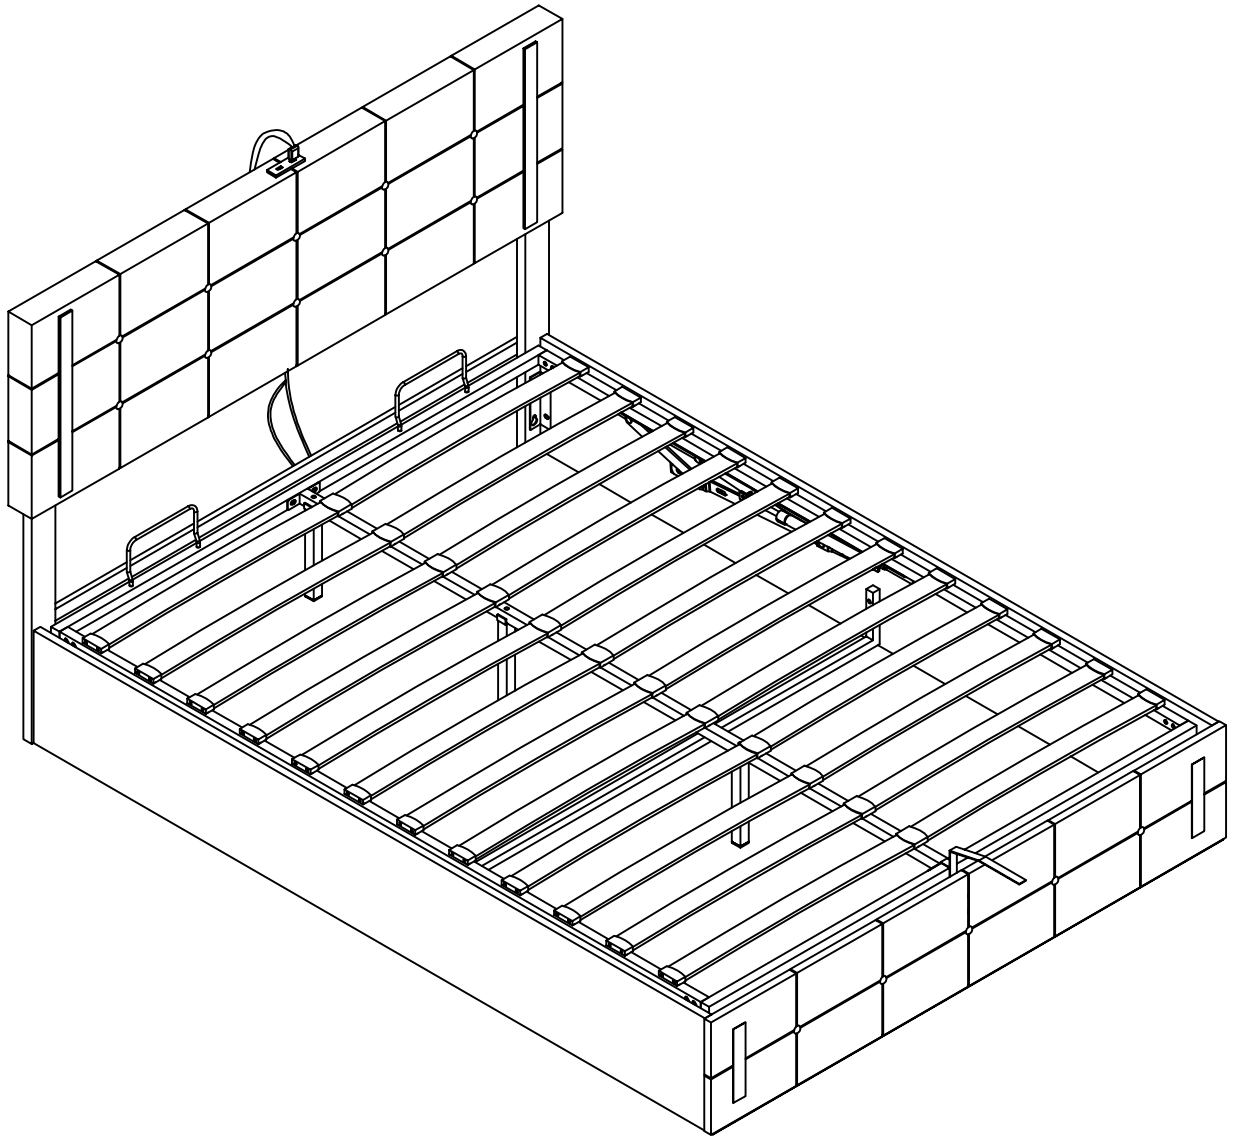


TIPS














1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish

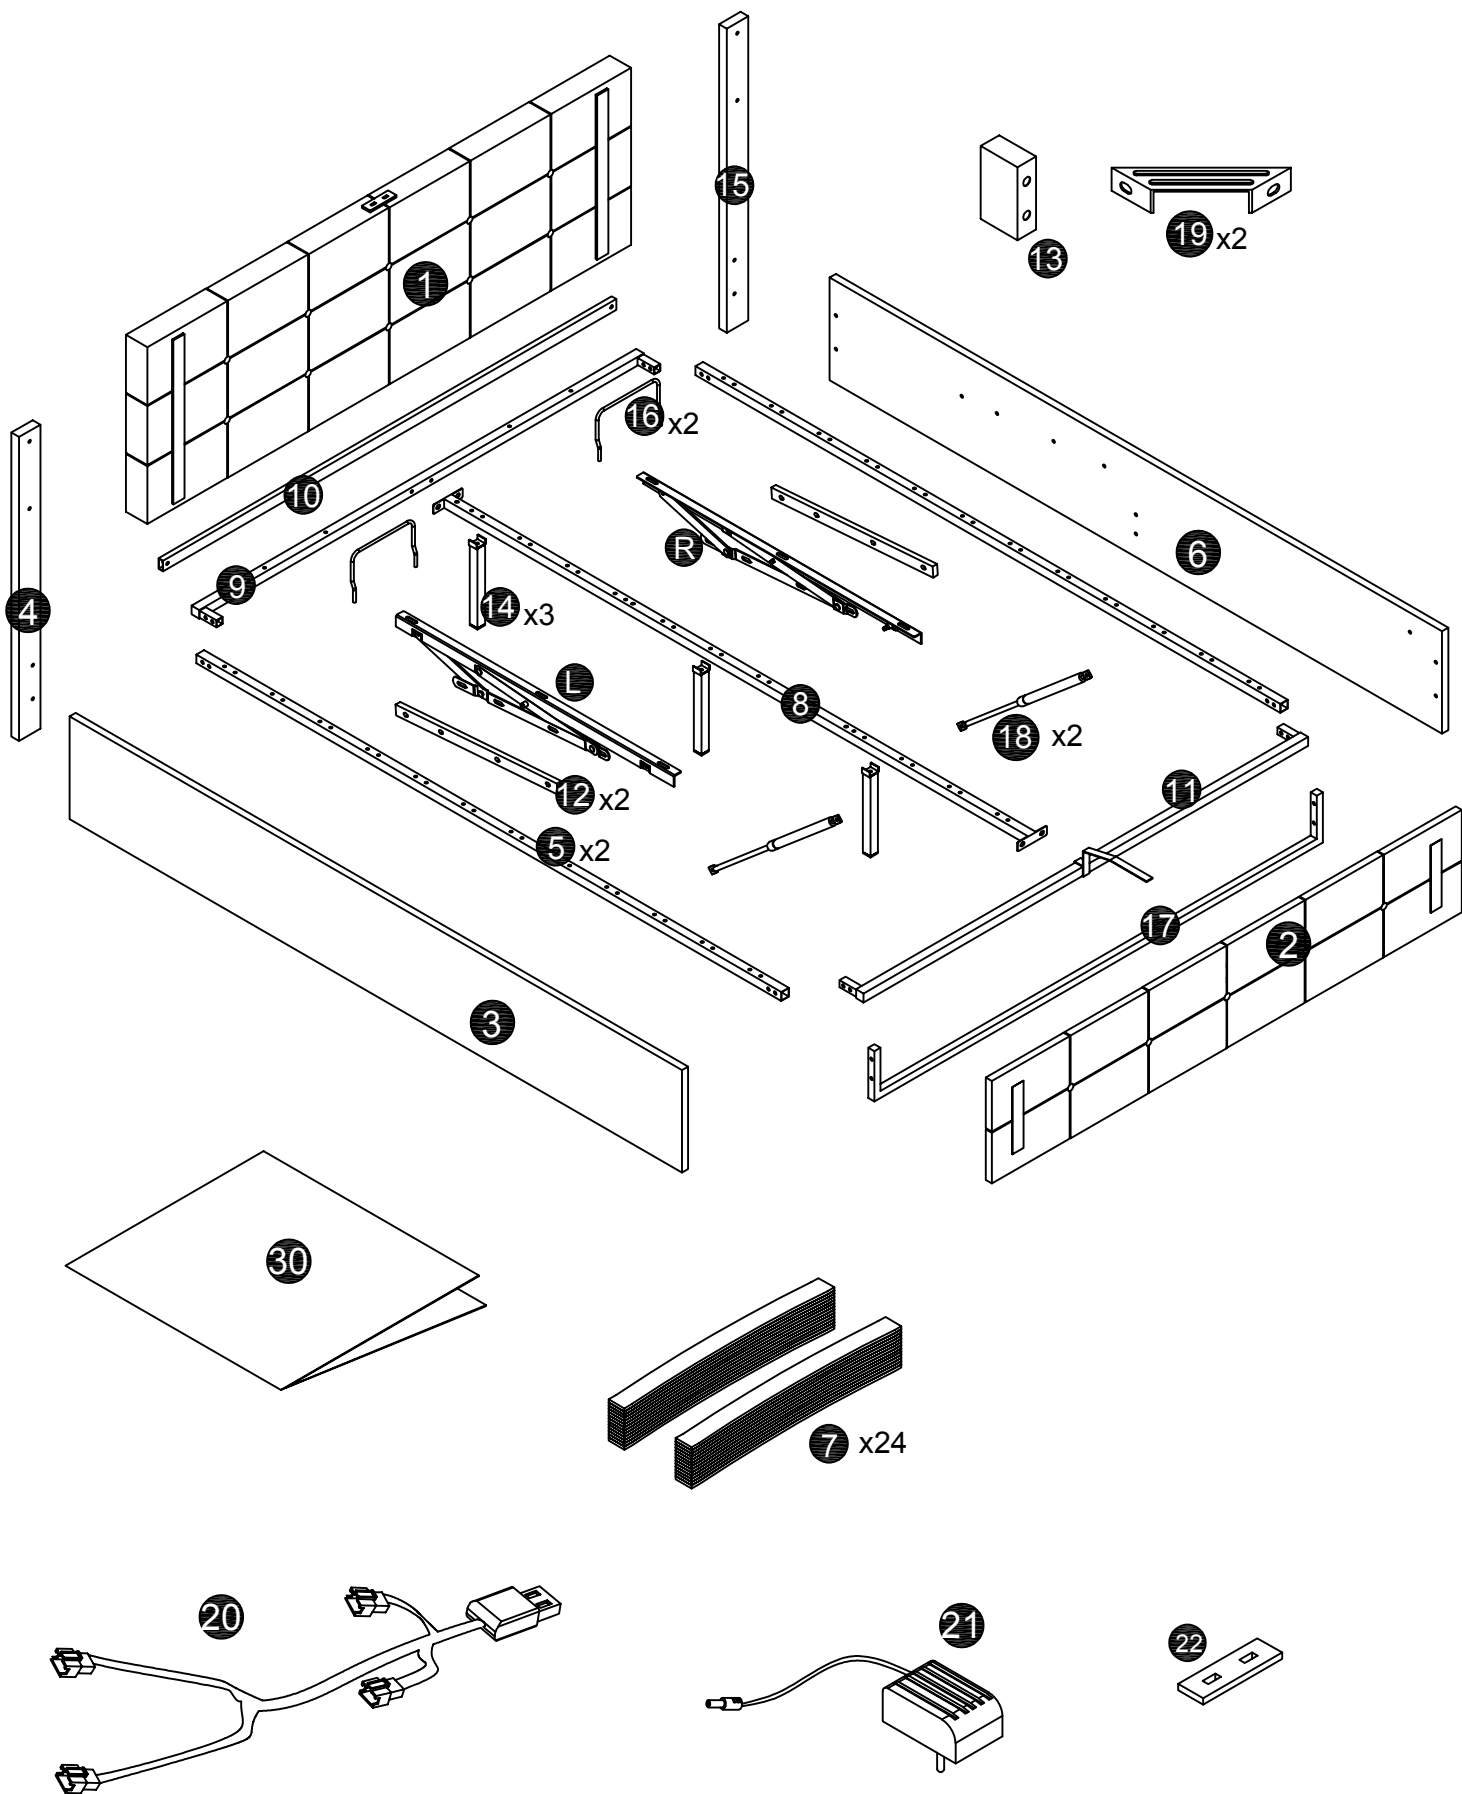









Part List WF314704AAB / AAK
WF314698AAB / AAK

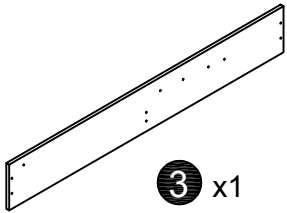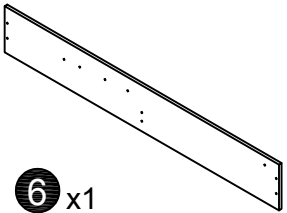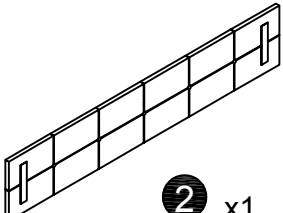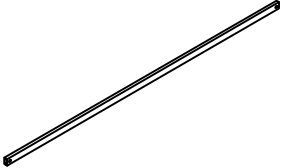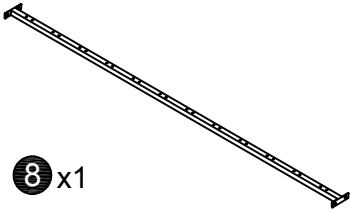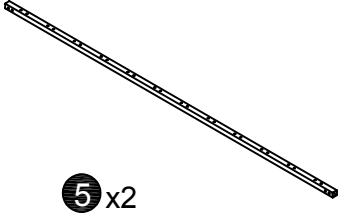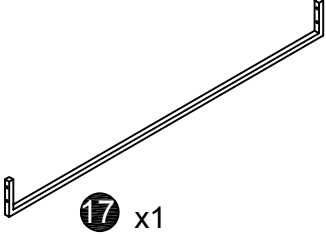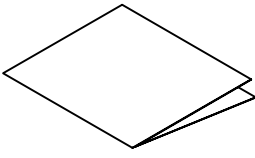
 3 x1	 6 x1	 2 x1	 10 x1
 8 x1	 5 x2	 17 x1	 30 x1

Part List WF314705AAB / AAK WF314699AAB / AAK

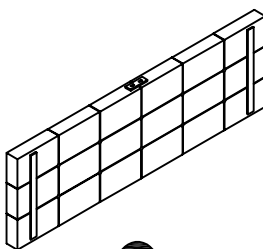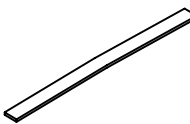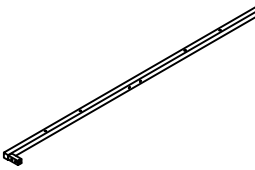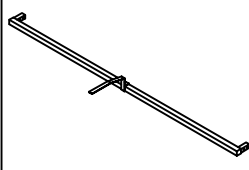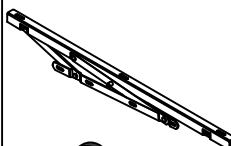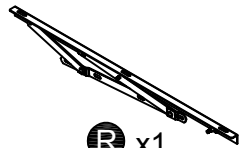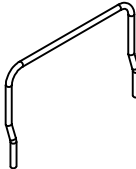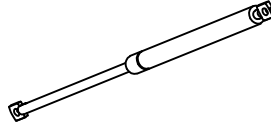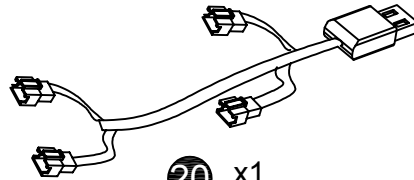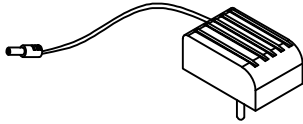
 1 x1	 4 x1	 7 x24	 9 x1	 11 x1	 12 x2	
 13 x1	 L x1	 R x1	 14 x3	 15 x1	 16 x2	 18 x2
 19 x2	 20 x1		 21 x1		 22 x1	

Hardware List WF314705AAB / AAK WF314699AAB / AAK

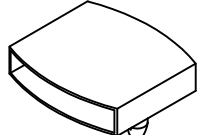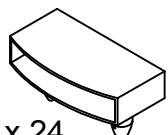 18mm M8 Bolt x 34	 35mm M6 Bolt x 4	 45mm M8 Bolt x 7	 32mm M8 Bolt x 10	 20mm M6 Bolt x 4	 Flat washer x 4
 65mm M6 Bolt x 2	 NUT M8 x 4	 x 1	 M8 x 1	 M6 x 1	
 Unplug the battery separator of the remote control before use			 x 6		
 x 12	 x 24	 x 2	 x 2		

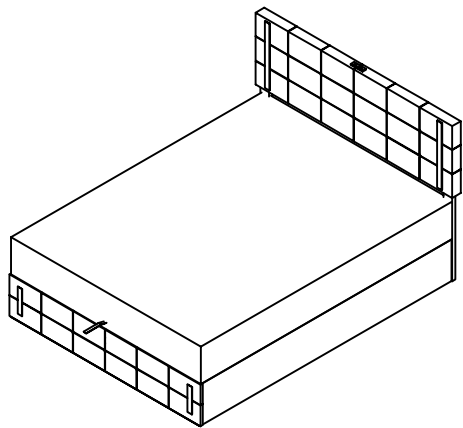

This product is not suitable for mattress recessed type.

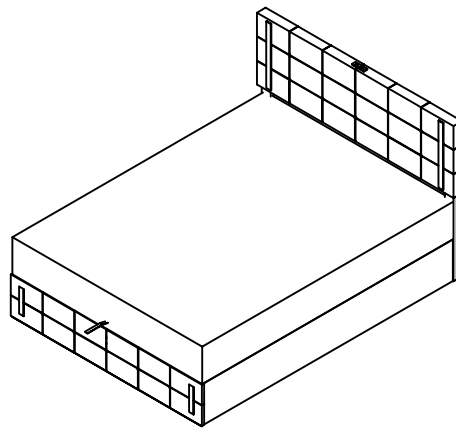

This product is suitable for placing mattresses on the top.

IMPORTANT NOTICE OTTOMAN OPERATING INSTRUCTIONS

Once your bed frame is completely assembled, the slat unit will not operate correctly unless a mattress is placed on the slat frame. Position the mattress on the slat frame whilst it is in the closed position.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman. This is a design feature of the product so that it does not fall shut-the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, it will close completely under its own weight.



When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the side rails. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the foot end of the bed slightly to the left or right whilst leaving the headend stationary.


PISTONS

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when taken off the ottoman. All pistons are tested for correct pressure and operation before being attached to the slat unit. Initially it might appear that the pistons are very stiff when opening and closing the ottoman.

THIS IS PERFECTLY NORMAL

When fully assembled and the mattress is in position, please raise and lower the ottoman 4/5 times to ensure the gas piston are fully lubricated.

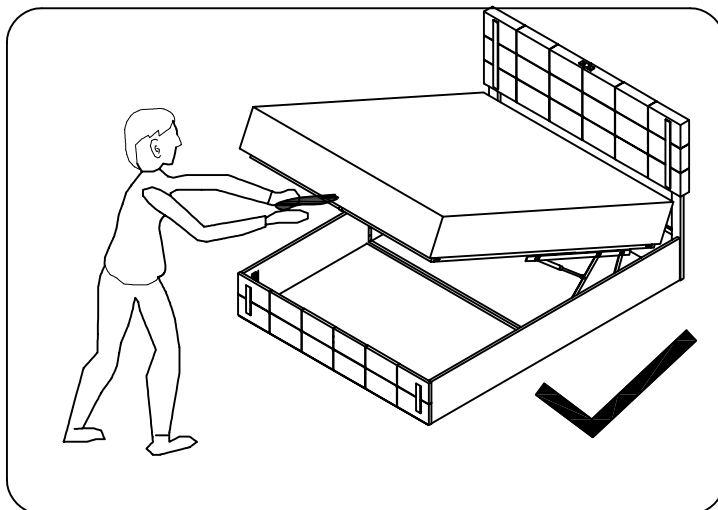
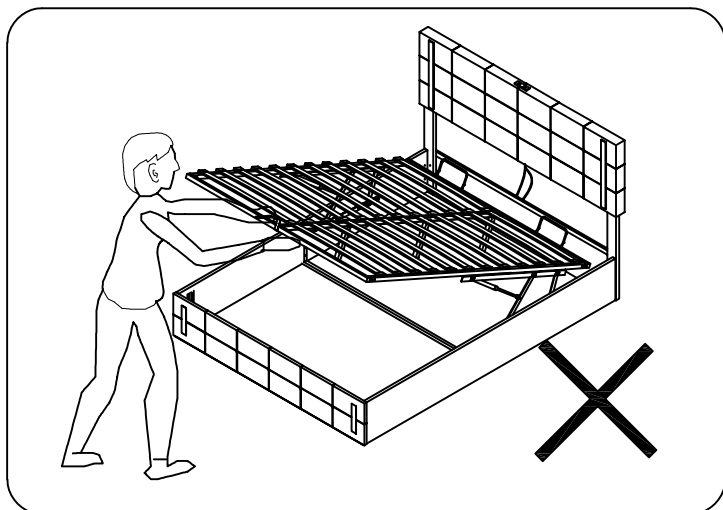





45mm M8 Bolt x 4




Flat washer x 4

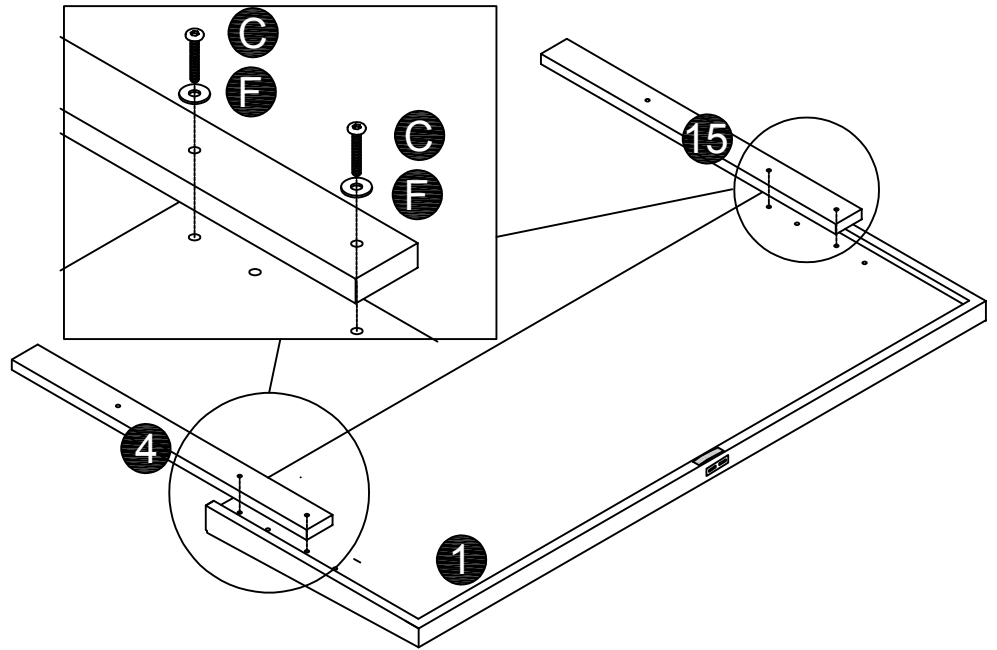

32mm M8 Bolt x 2

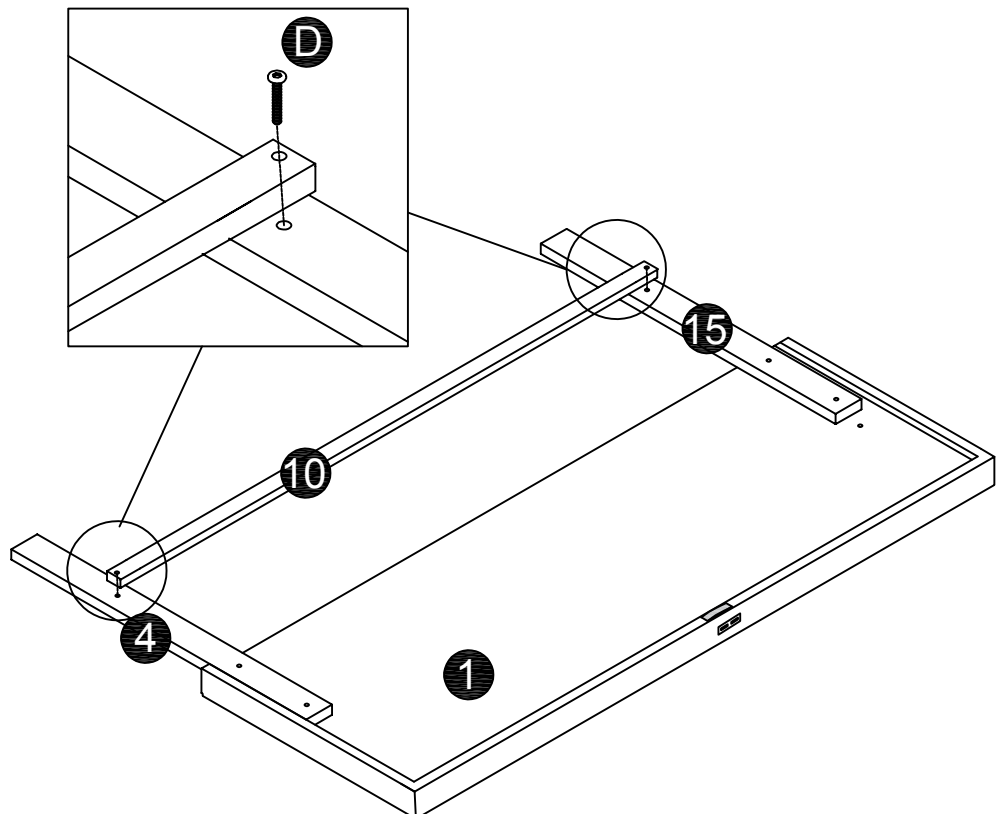



A





18mm M8 Bolt x 6

Installation position diagram

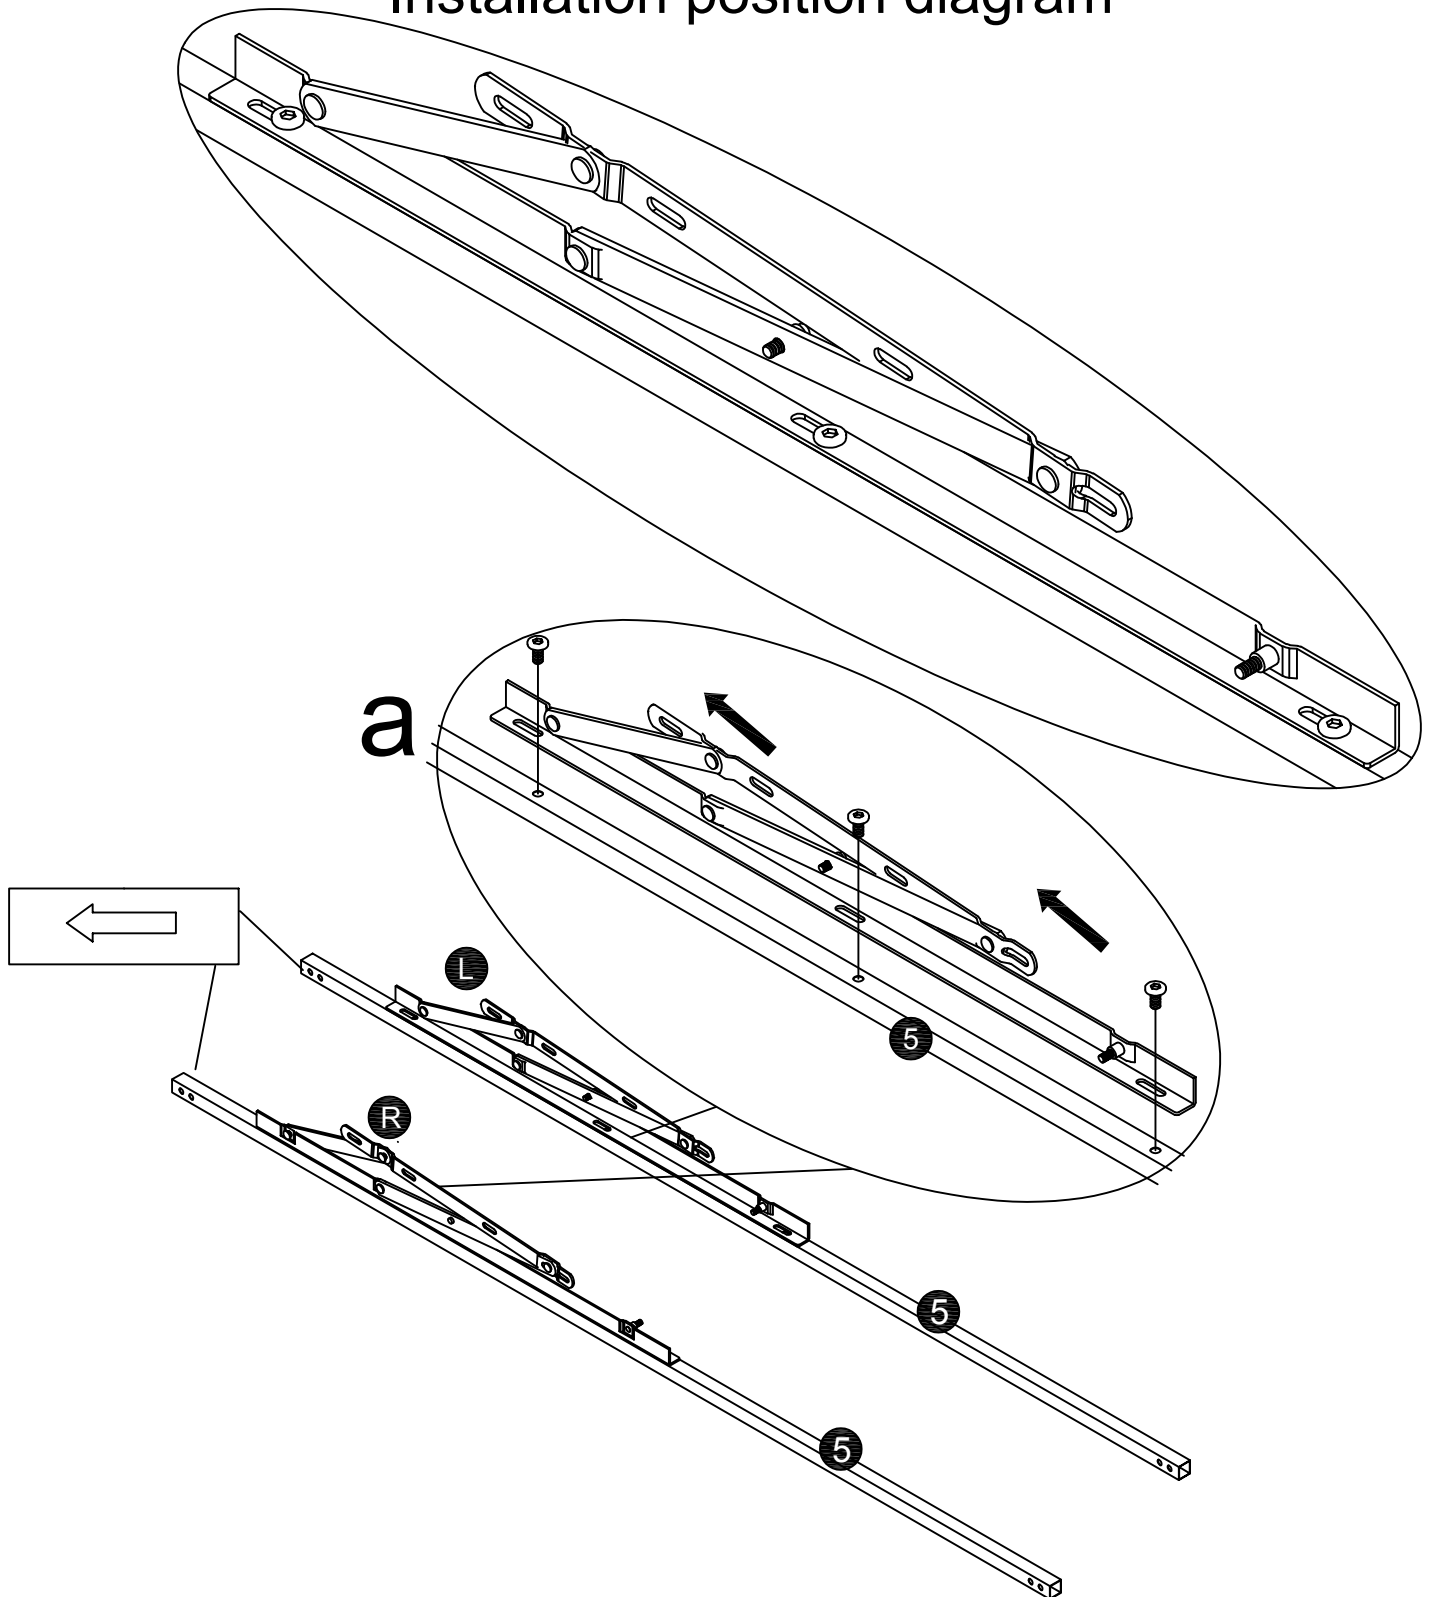




45mm M8 Bolt x 3

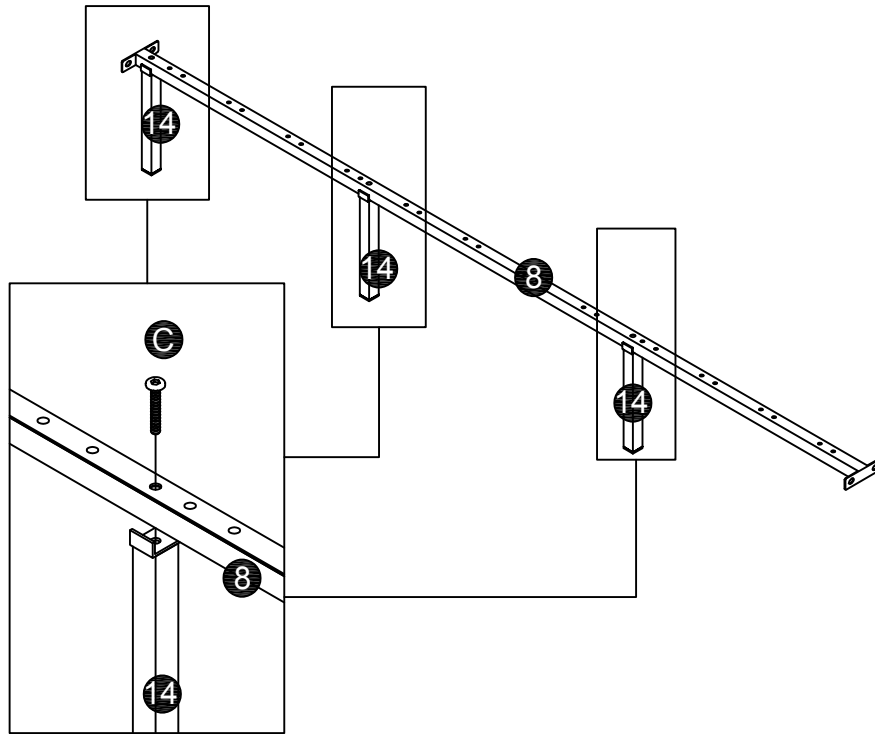


18mm M8 Bolt x 8

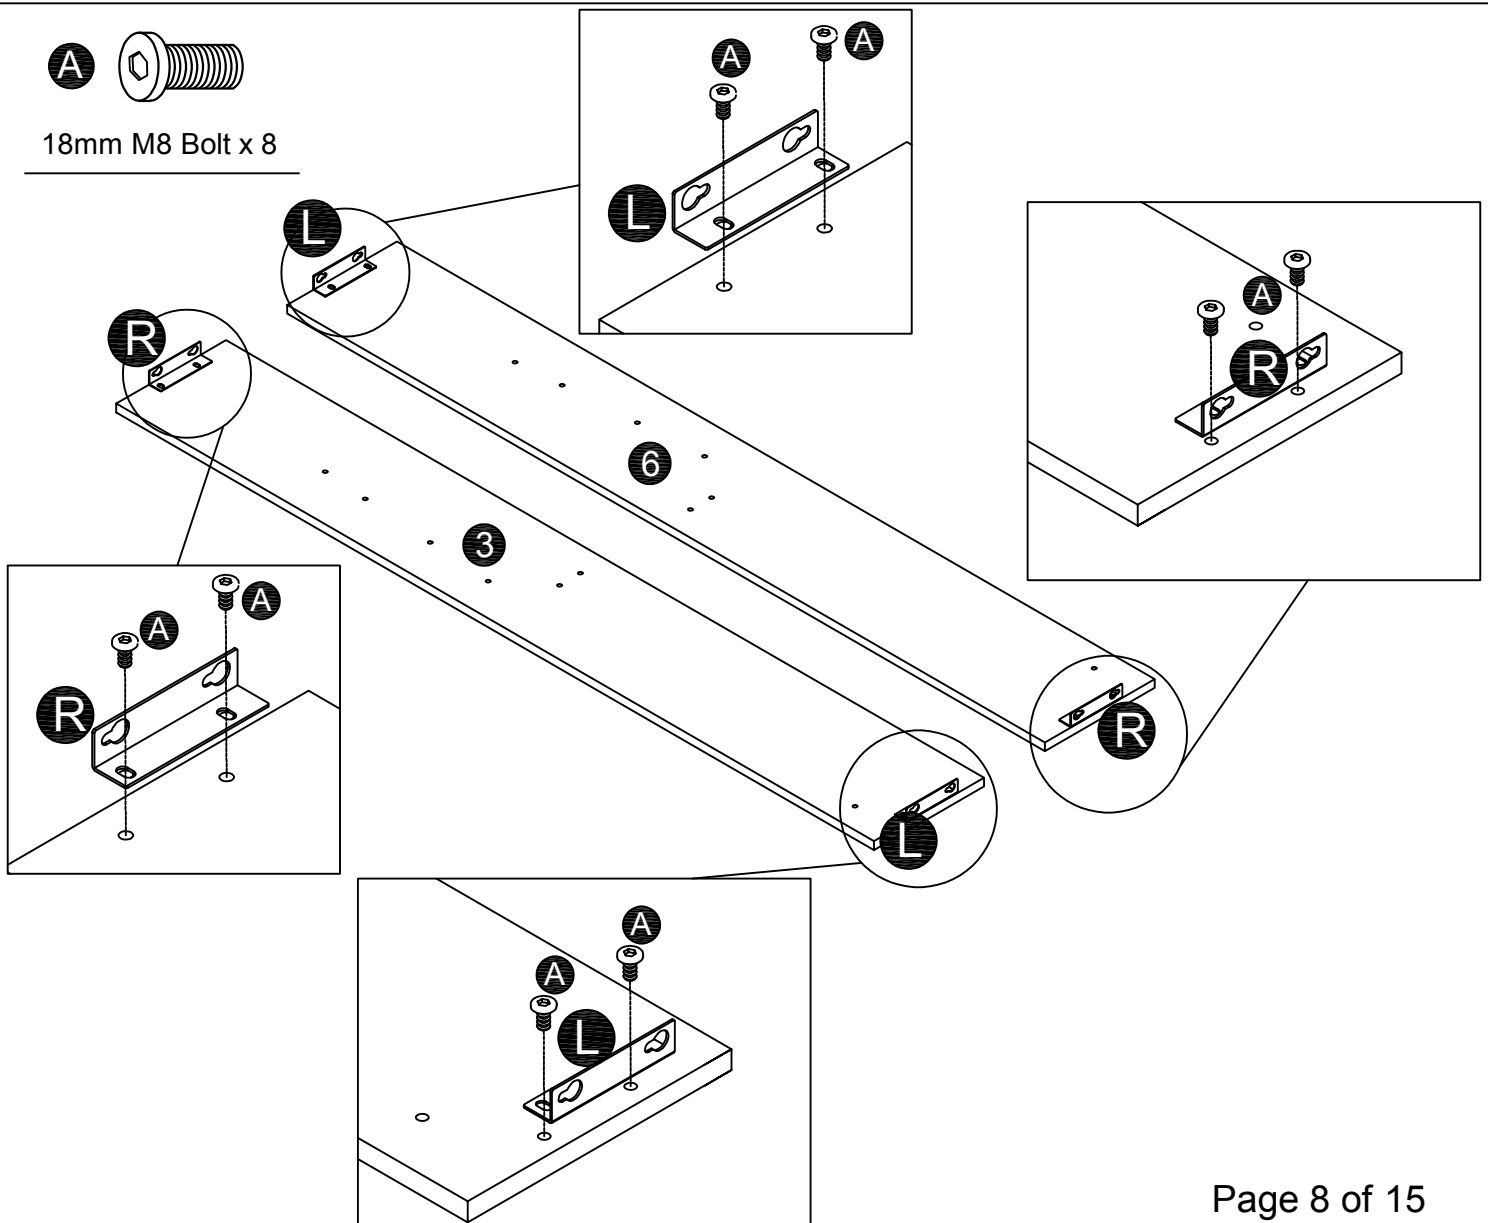






32mm M8 Bolt x 8

Installation position diagram

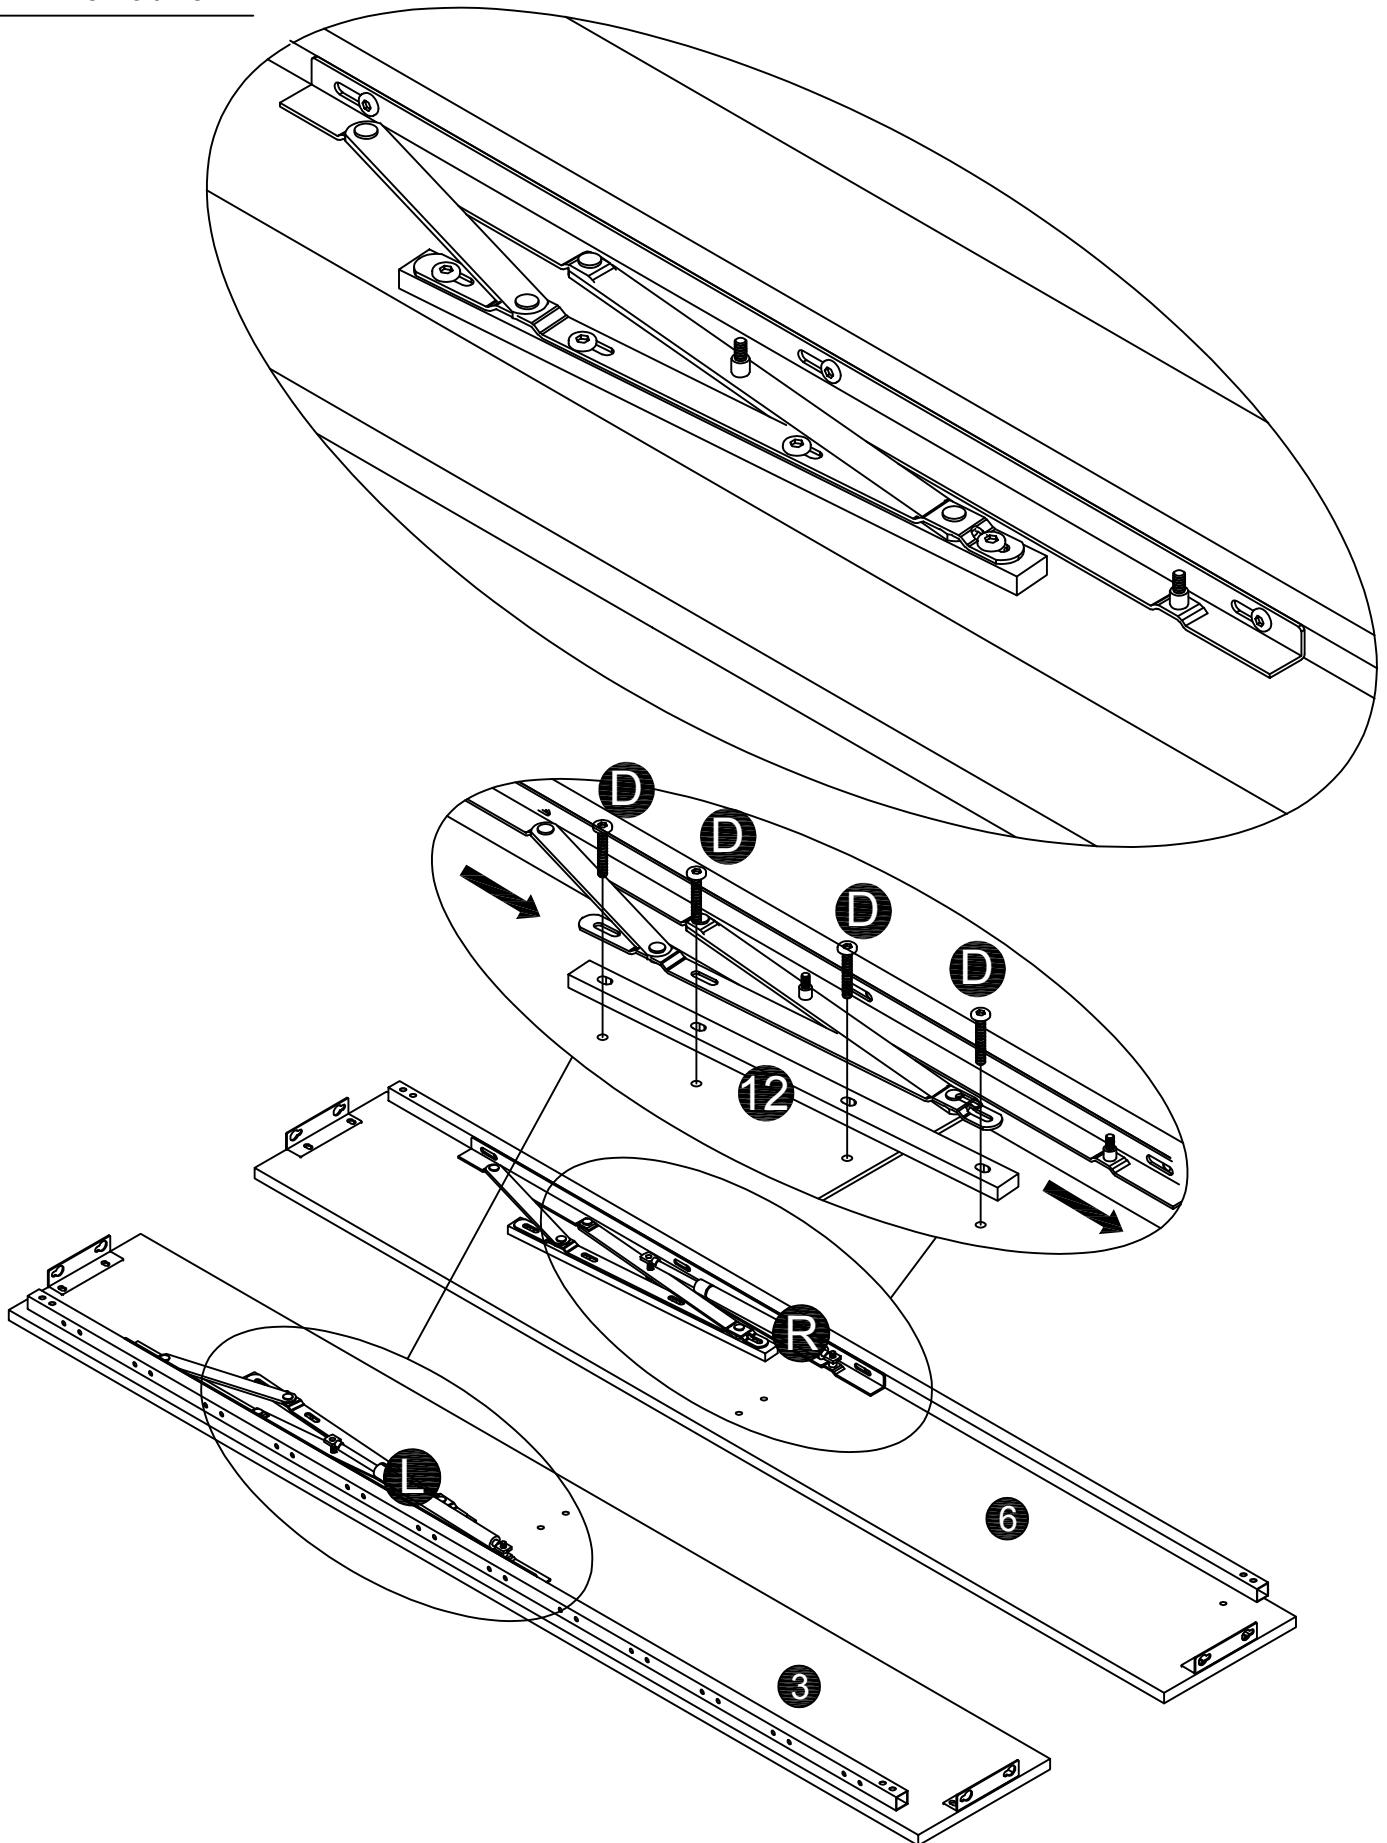





A 
18mm M8 Bolt x 8

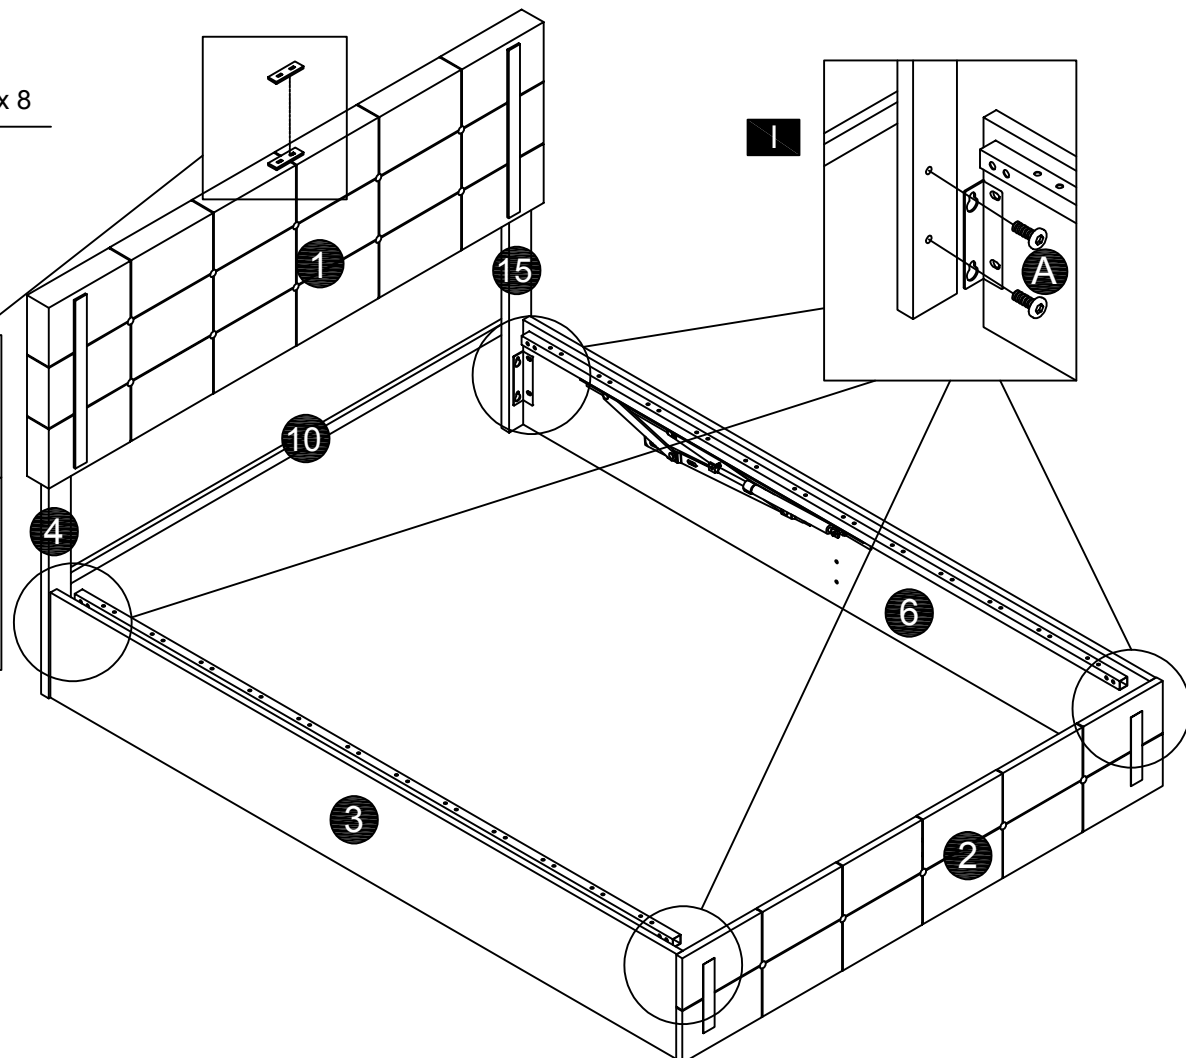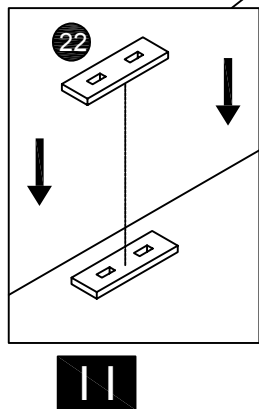


G 
65mm M6 Bolt x 2


E 
20mm M6 Bolt x 4

B 
35mm M6 Bolt x 4

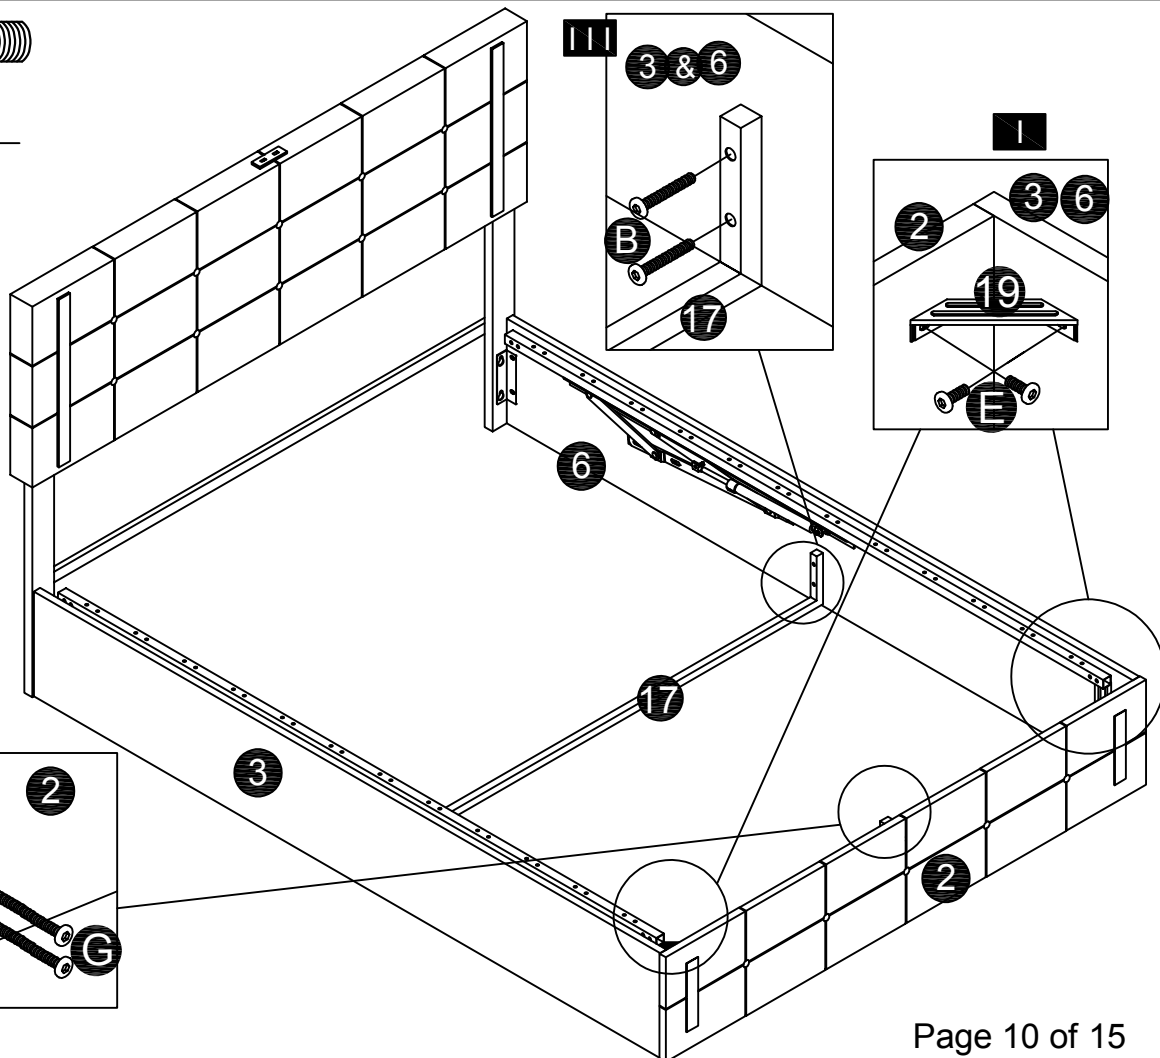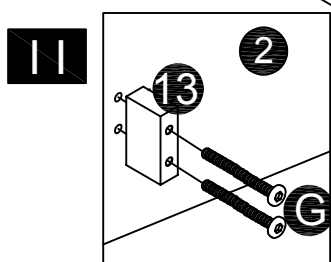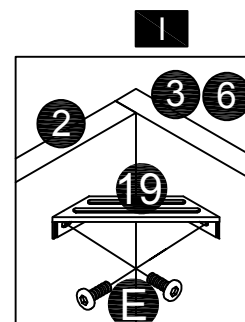
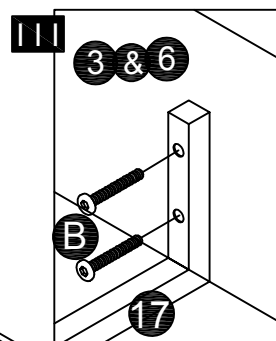


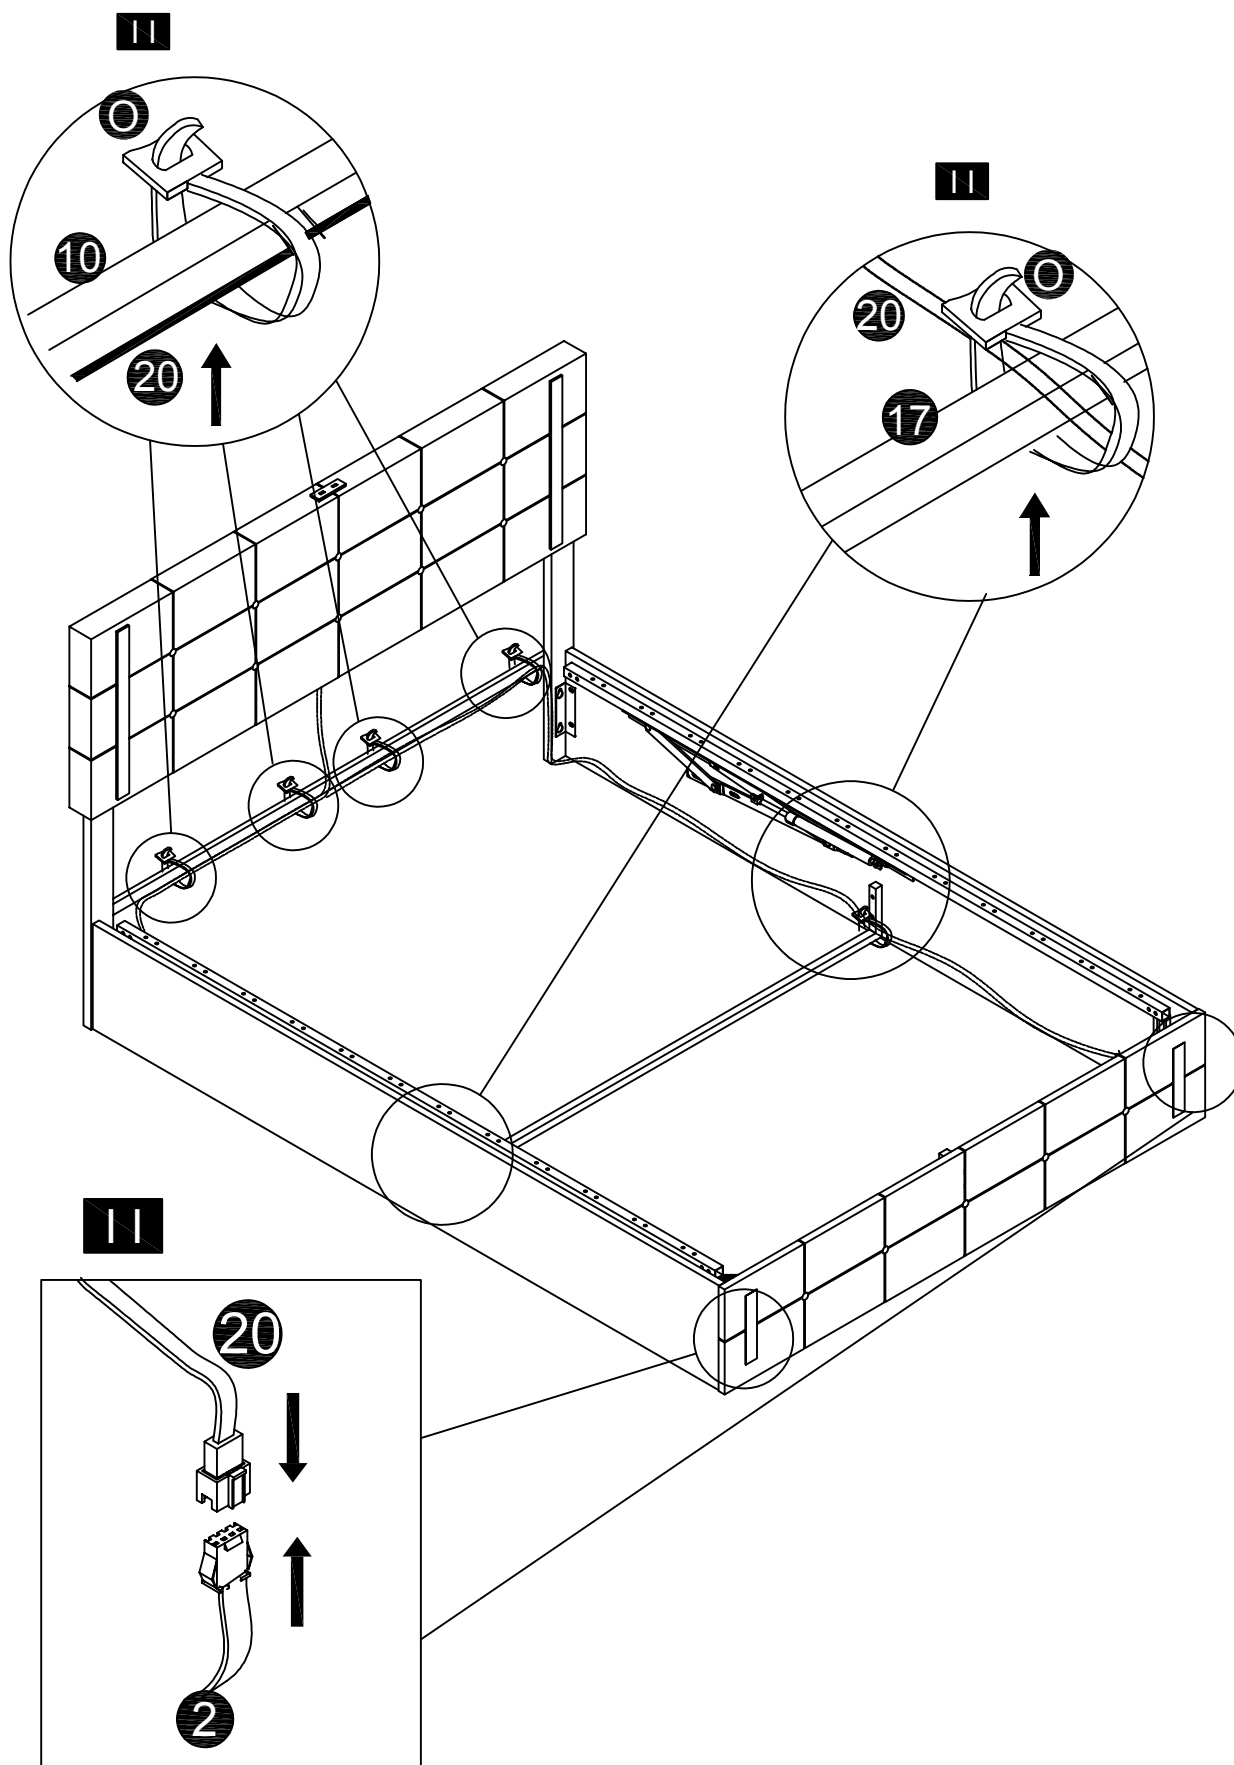

LED connection wire (O)
to the Footboard (2) .

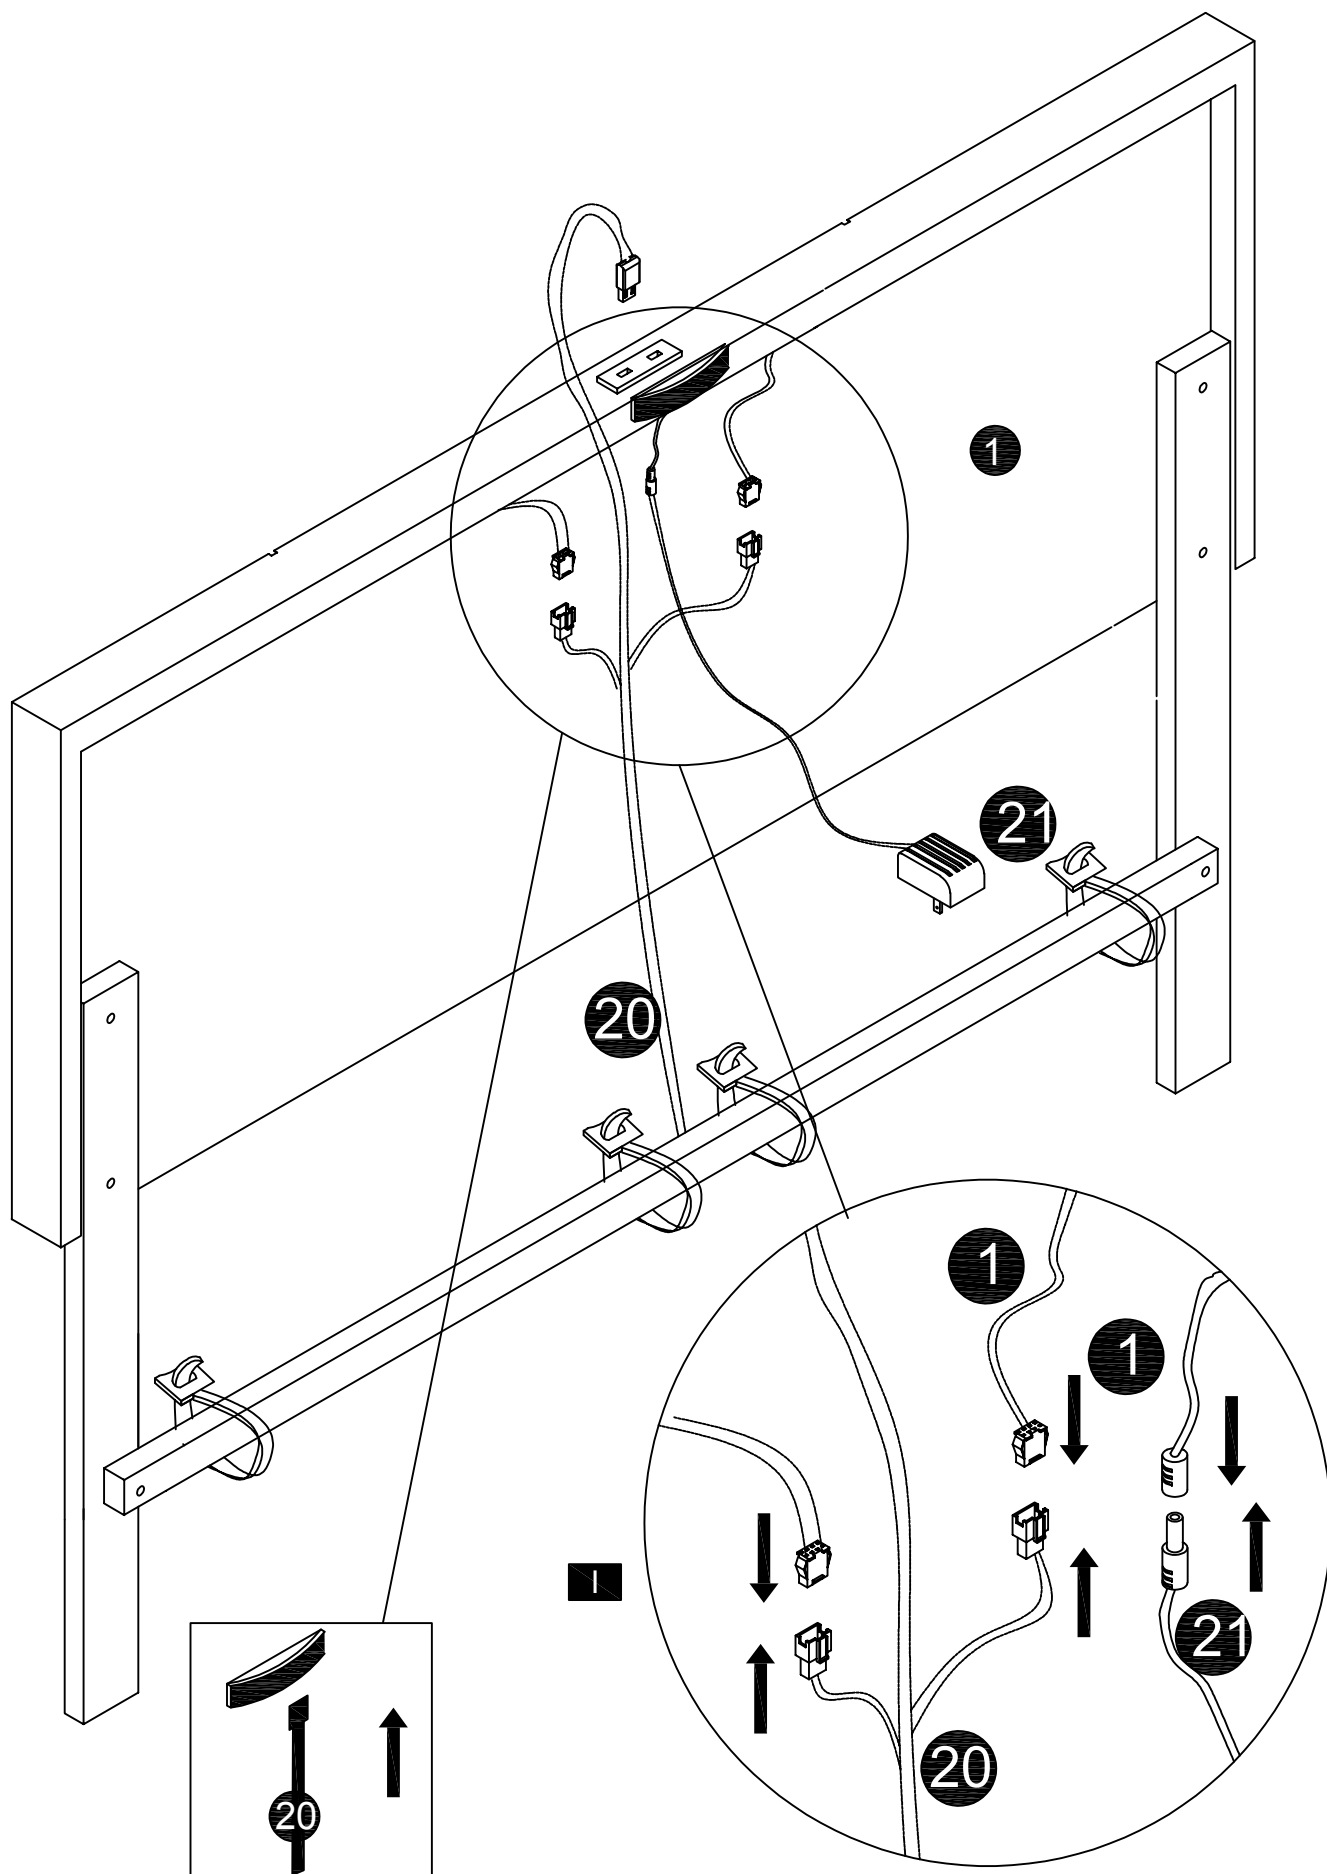


Please string
the thread
to the elastic
band

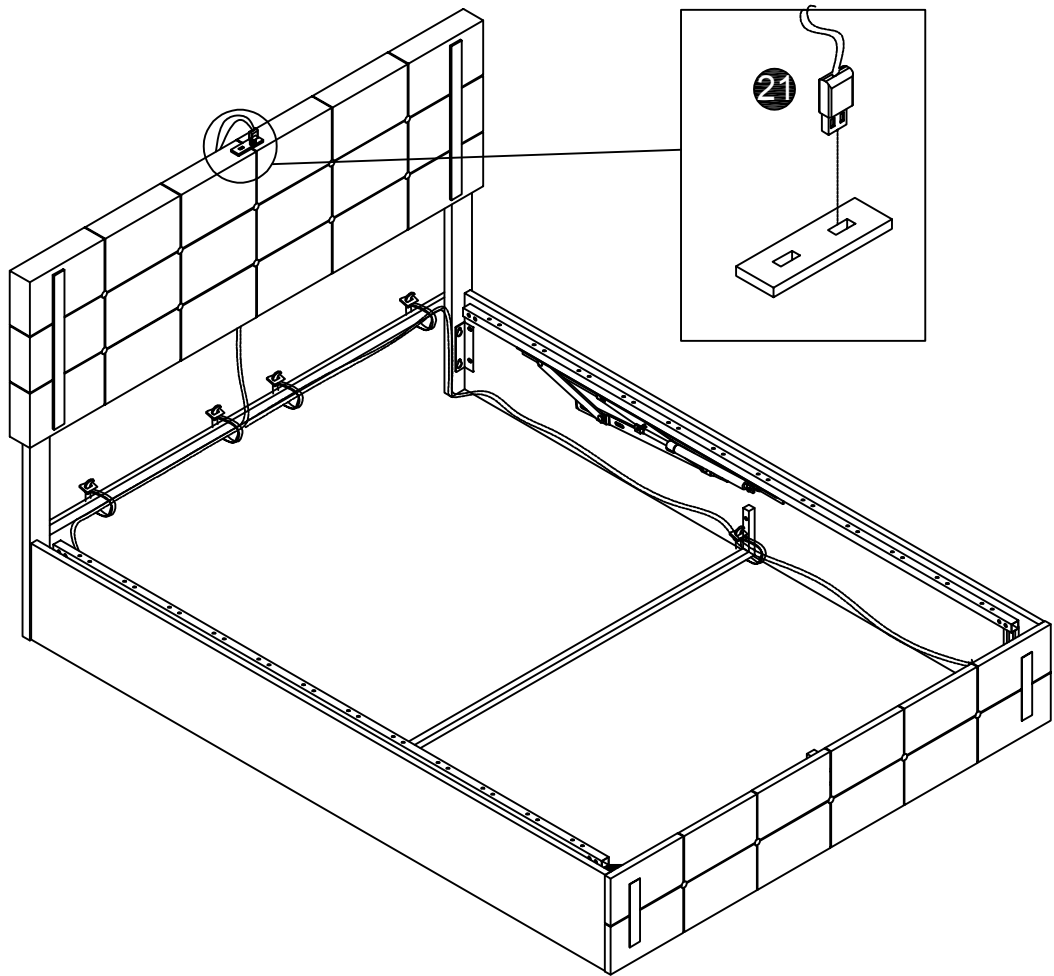

18mm M8 Bolt x 8




x 4

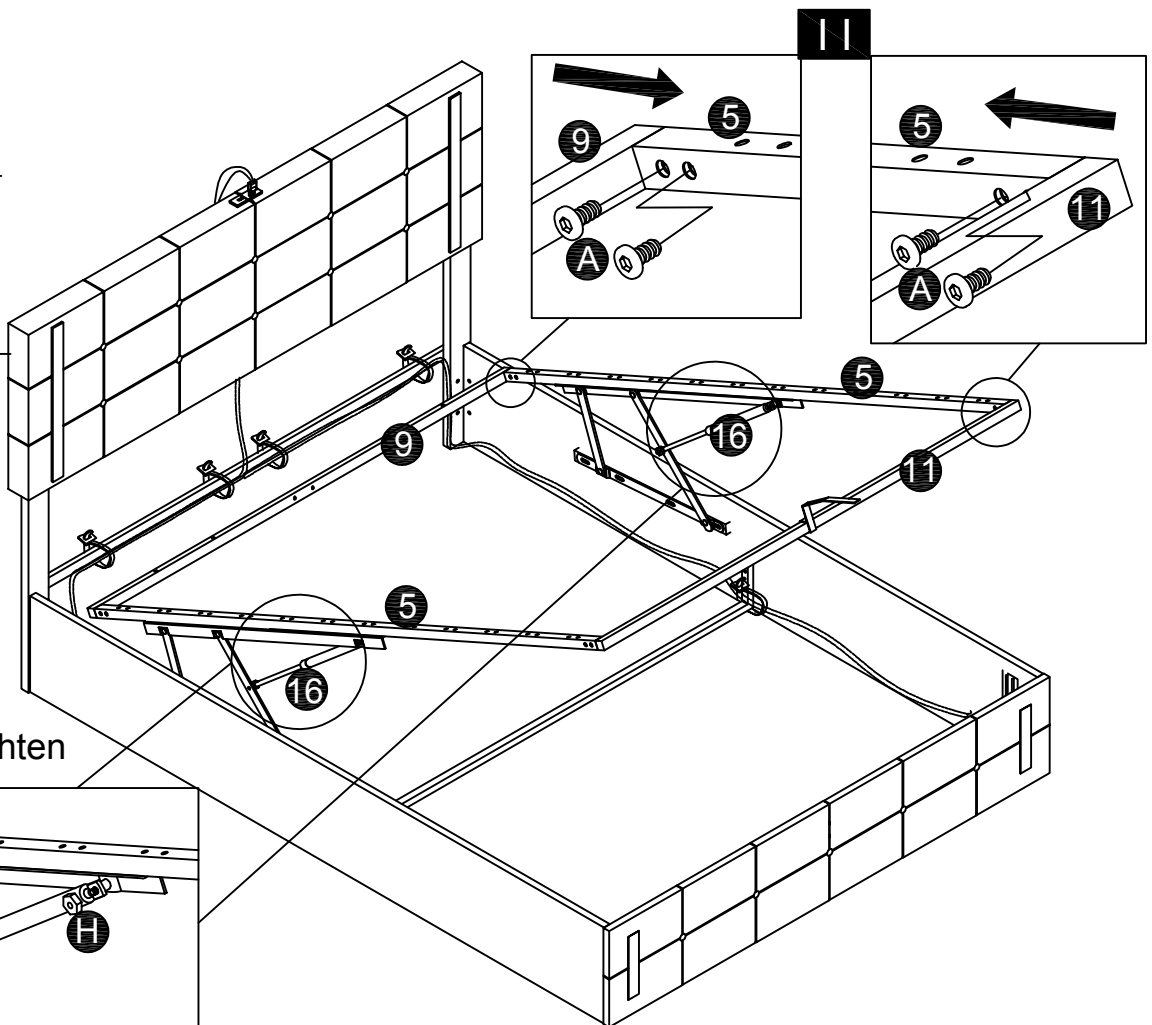


I



NOTE:


Do Not Overtighten

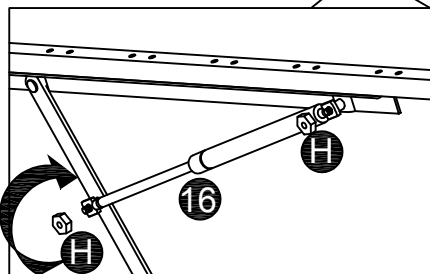






18mm M8 Bolt x 4

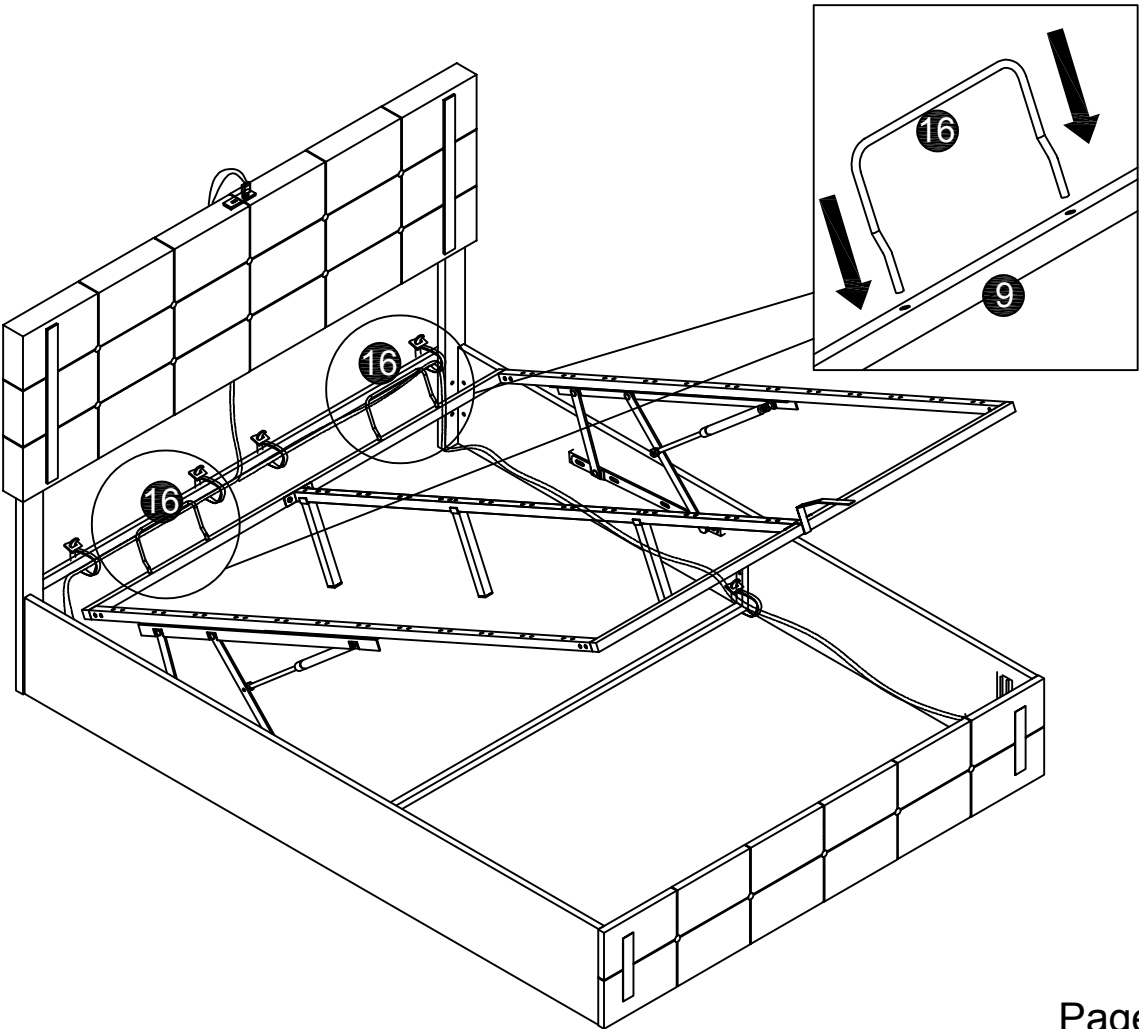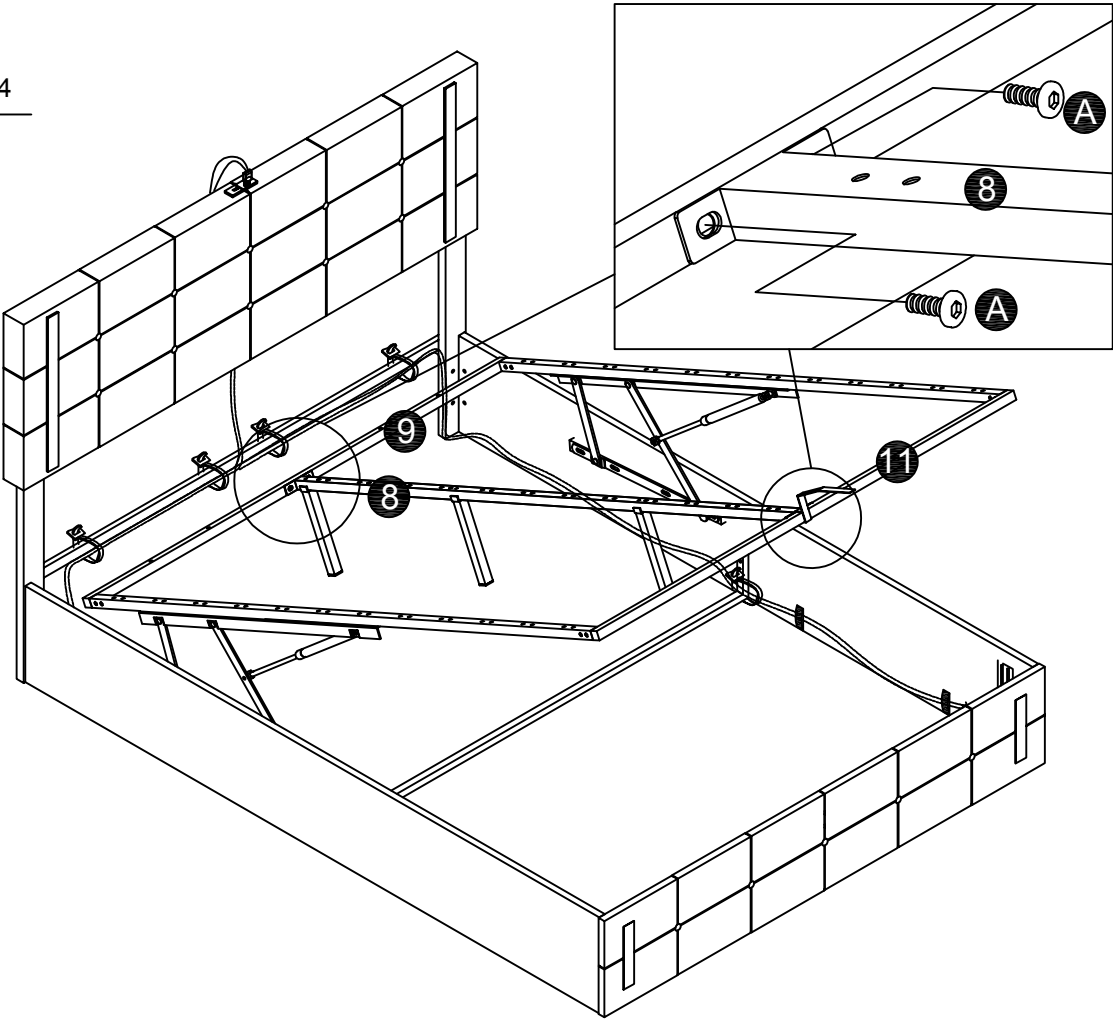

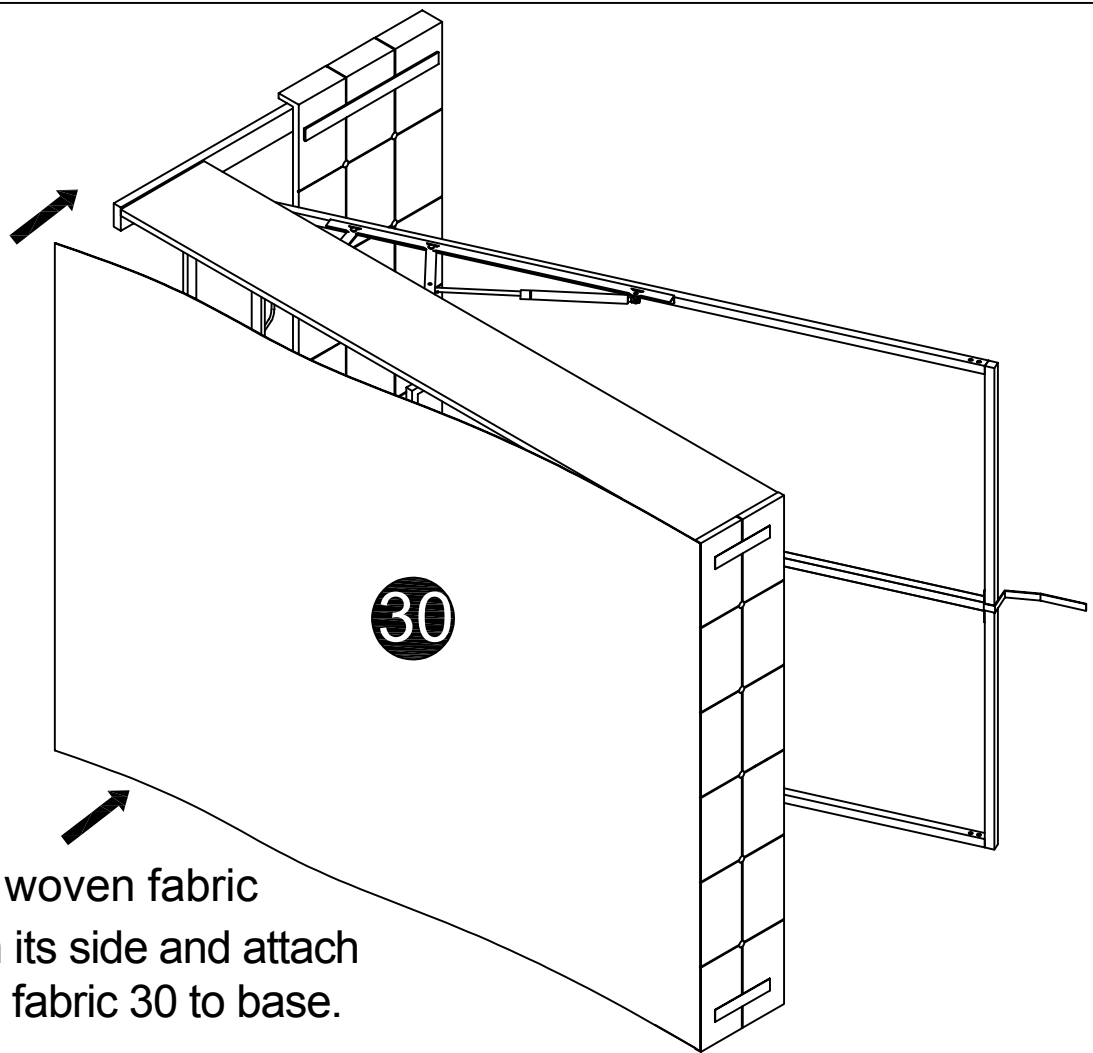

Attach Non woven fabric
Turn bed on its side and attach
Non-woven fabric 30 to base.

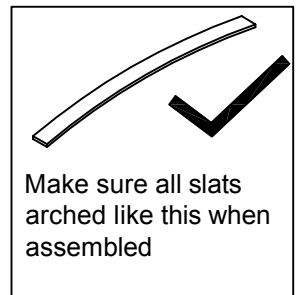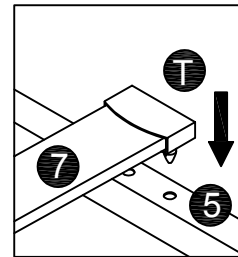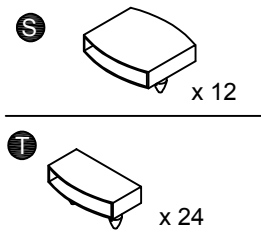

b:

