
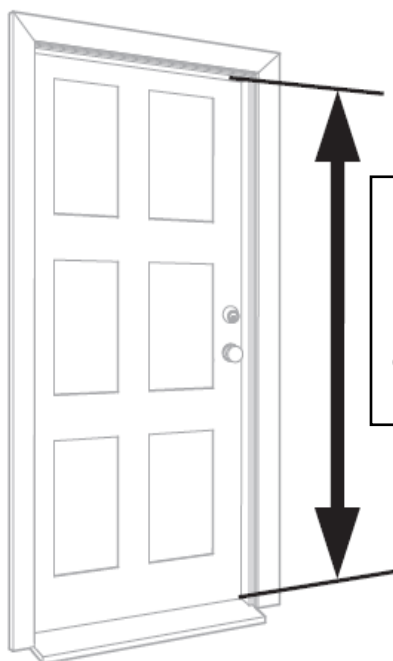
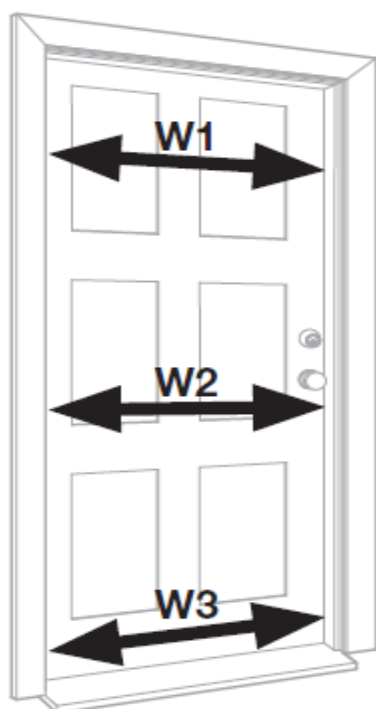


# Grisham Recessed Mount Rough Opening Sizing Guide For: 100, 300, 400, and 500 Series Stock Security Doors.

Call Size of Security Door	Rough Opening Width Requirement	Rough Opening Height Requirements
30" in. x 80" in.	29 3/4" to 30 1/2"	79 3/4" to 80 3/4"
32" in. x 80" in.	31 3/4" to 32 1/2"	79 3/4" to 80 3/4"
34" in. x 80" in.	33 3/4" to 34 1/2"	79 3/4" to 80 3/4"
36" in. x 80" in.	35 3/4" to 36 1/2"	79 3/4" to 80 3/4"

34" in. x 84" in.	33 3/4" to 34 1/2"	83 3/4" to 84 3/4"
36" in. x 84" in.	35 3/4" to 36 1/2"	83 3/4" to 84 3/4"

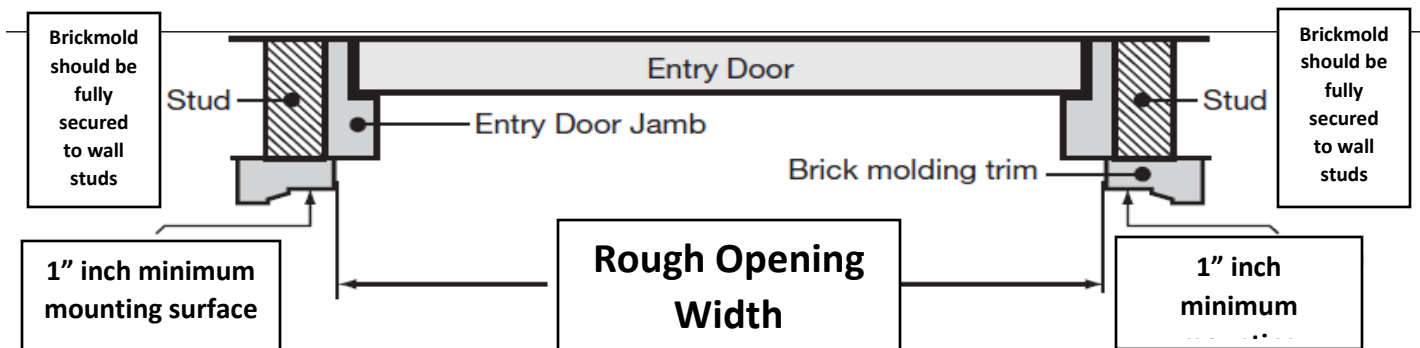

**Measure for Rough Opening Height**  
 Measure from the threshold to the bottom portion of the brickmold header of your entry door.



**QR Code For:**  
 How to install A  
 Grisham security  
 Door

**Measure for Rough Opening Width**  
 Measure the top, middle and the bottom inside diameter **width** of the entry doors brickmold opening. The smallest of the three measurements will be your rough opening width. Use the above sizing chart to determine if a standard size door will fit or a custom sized door is required. **Questions? Email:** [info@grishambros.com](mailto:info@grishambros.com)