



PF7063AC/SAG/AW

21.75" dia Hose Pot


Assembly Instruction

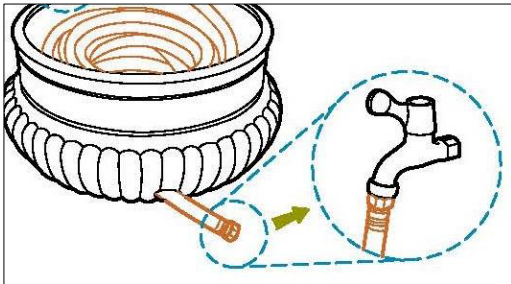

1. Insert the female end of the garden hose through the hole at the bottom inside the hose pot.

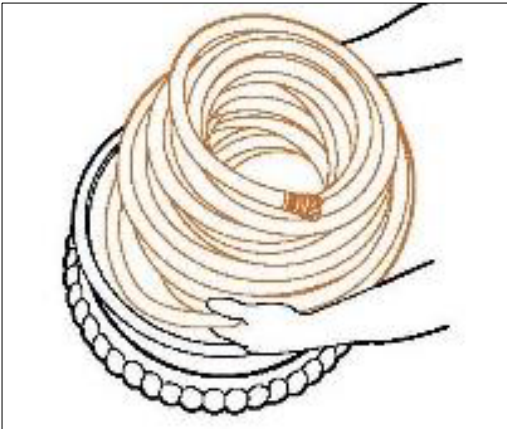

2. Place and coil the hose inside the garden hose pot.

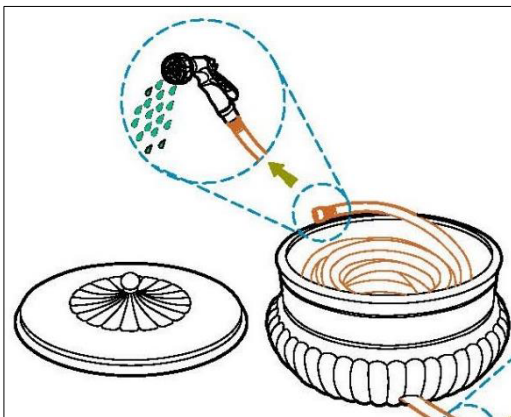

3. Keep the spray nozzle at the top or in an accessible location before closing the hose pot.