
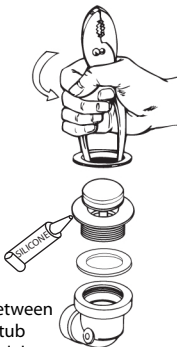


D931K-**

TUB PLATE
PLACA



Place washer between
bottom ell and tub
Coloque la arandela entre
la parte inferior y la bañera

INSTRUCTIONS:


1. Remove old overflow plate.
2. Install new faceplate using screw provided.
3. Remove old drain body using plier handles or similar tool.
4. Apply Silicone to underside of strainer body.
5. Making sure threads are clear of debris, screw in new drain body.

INSTRUCCIONES:

1. Quitar la placa usada del rebosadero.
2. Instale la placa nueva usando el tornillo provisto.
3. Desaloje el cuerpo del desagüe usando pinzas para manijaso una herramienta semejante.
4. Aplicar silicona en la parte inferior del cuerpo del colador.
5. Asegúrese que las roscas estén limpias, atornille el cuerpo nuevo del desagüe.

Use 1-1/2 x 1-1/4 in. Adapter as
needed

Utilice un adaptador de 1-1 / 2 x
1-1 / 4 pulg según sea necesario



2-Hole to 1-Hole
Face Plate Adapter
2-hoyos a 1-hoyos
Adaptador de placa frontal

ADAPTER
ADAPTADOR



Outside: 1-7/8-11.5
Exterior:
Inside: 1-5/8-16
Interior

WESTBRASS • 2429 E. Olympic Blvd., Los Angeles, CA 90021
(213)-627-8441 • (213) 627-2844 • orders@westbrass.com • www.westbrass.com