

MOUNTING INSTRUCTIONS FOR MIRRORS AND PICTURE FRAMES


TOOLS REQUIRED




Safety Glasses



Tape Measure

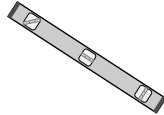

Level

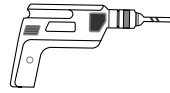

Power Drill



Pencil




Hammer




Phillips Head
Screwdriver

STEP 1:

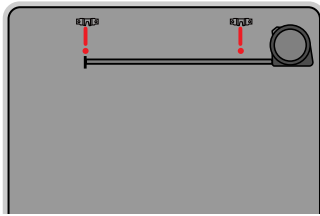


Measure the distance between the mounting bracket on the back of the product with a tape measure.

STEP 2:

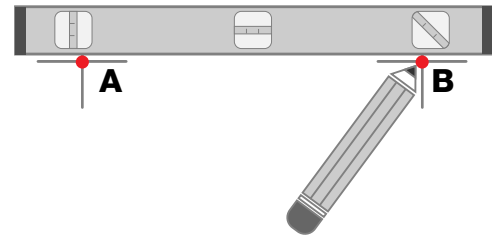


Use a level to draw a straight line from point A. Based on the distance between the two mounting bracket, confirm the place of point B.

STEP 3:

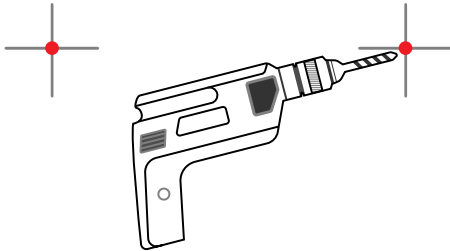


If using dry wall anchors, use a power drill (follow anchor manufacturer instructions) to pre-drill pilot holes in each point.
DANGER: Ensure that you are not drilling into utility lines within the wall.

STEP 4:

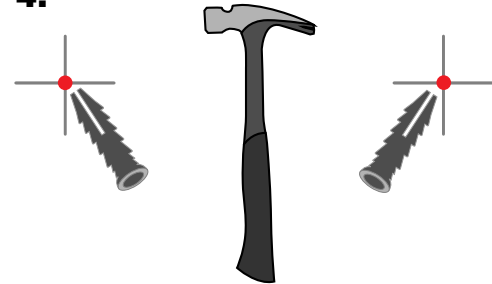


Lightly tap the drywall anchors into the pilot holes with a hammer until anchor head is flush with the wall.

STEP 5:

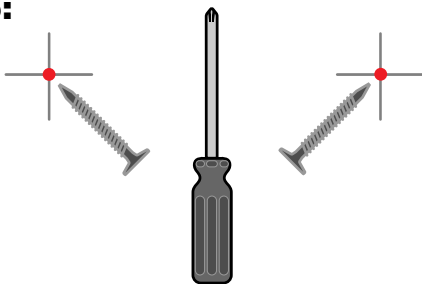

Use a drill to insert the screws into the wall, leave at least 3/5" length screw outside the wall.

STEP 6:

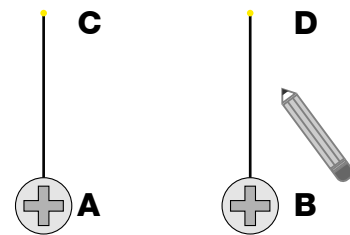

Draw two vertical straight lines C and D upward to point A and B.

⚠ WARNING

- Read and follow instructions carefully.
- Keep small parts away from children.
- Consult a qualified professional if you are unsure about your wall type, whether utility lines are behind your wall or if you're unsure what mounting hardware to use.

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection. We strive to continually create quality products designed to enhance your home. Visit us online to see our fullline of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

MOUNTING INSTRUCTIONS FOR MIRRORS AND PICTURE FRAMES


TOOLS REQUIRED




Safety Glasses



Tape Measure



Level



Power Drill



Pencil




Hammer




Phillips Head
Screwdriver

STEP 7:

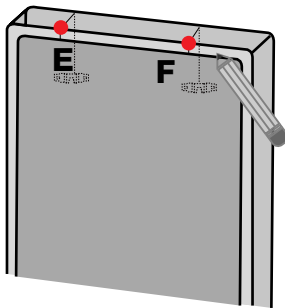


Follow the center of the hanging brackets with a ruler and pencil mark two lines E and F to the front view of the mirror.

STEP 8:

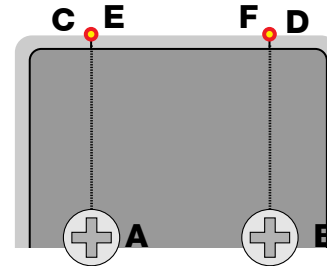


Lift the mirror make line C and E are align (same as Line D and E).

STEP 9:

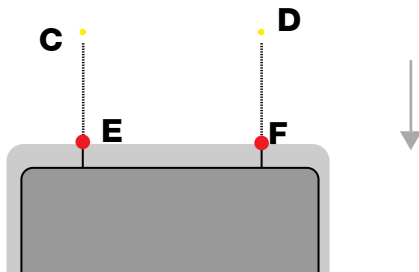

Then move mirror so that it goes down, insert mounting brackets onto the screws .

STEP 10:

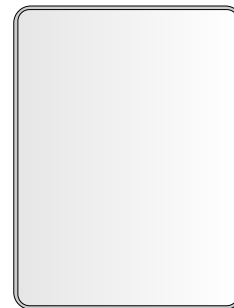

Enjoy the new mirror.



WARNING

- Read and follow instructions carefully.
- Keep small parts away from children.
- Consult a qualified professional if you are unsure about your wall type, whether utility lines are behind your wall or if you're unsure what mounting hardware to use.

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection. We strive to continually create quality products designed to enhance your home. Visit us online to see our fullline of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!