


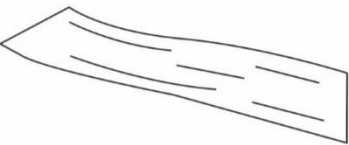
STEPS TO ASSEMBLE THE LAMPSHADE

- 1**


Take out the lampshade and 2 wrought iron frames


- Unfold the fabric lampshade


2


- 3**


Fix the two frames with velcro along the edge of the lampshade

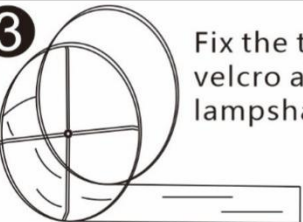
- Mount the harp and install the bulb
(Not included)

4

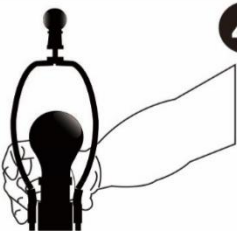
- 5**

Tighten the finial to secure the lampshade

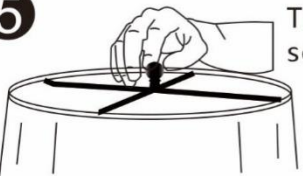

F66

INSTRUCTION MANUAL



4MODERN
HOME

Assembly & Installation Instructions

Dear Customer:

Thank you for your business!

If you have any question or problem, please send us an email to support@4modernhome.com or call us at 870-949-8466. We will do everything possible to make you completely satisfied with your purchase. Product reviews help future customers to make their purchase decision. You are encouraged to share your experience by leaving a short product review on the platform where you bought this product.


Thank you!

Zgear Team

Warning: If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electric contractor.

Warning: California Residents Proposition 65
This product contains lead, a chemical known to the state of California to cause cancer and birth defects or other reproductive harm. Do not place the product in your mouth. Wash your hands after handling this product.

Caution: It is highly recommended to get an electrician to install this light. Please make sure to turn the electricity off at the main circuit breaker before beginning installation. All glass is fragile. Use care when handling glass component(s) and/or lamp(s)

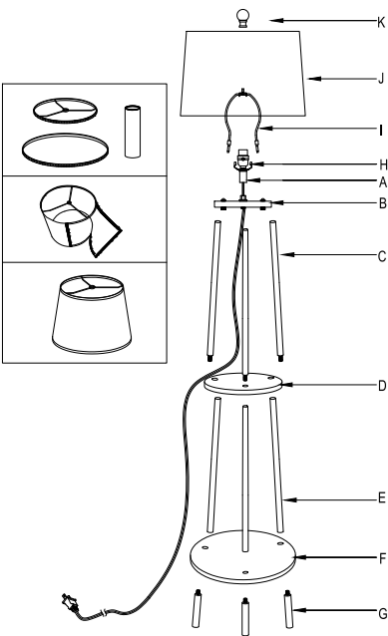

- 1.Unpack all parts from cartons carefully.
- 2.Carefully pull-out excess power cord from the lamp base while assembling to prevent the cord from becoming twisted.
- 3.Tighten the lamp socket(A) into the MDF(B) until tight.
- 4.Tighten the tube(C) into the MDF(B) until tight.
- 5.Place the MDF(D) into the tube(C),then tighten the tube(E) into the tube(C) until tight.
- 6.Place the MDF(F) into the tube(E),then tighten the tubes(G) into the tube(E) until tight.
- 7.Place the harp(I) onto the saddle(H) of lamp socket.
- 8.Place the shade(J)onto the harp(I),then tighten the finial(K) into the harp(I)until tight.
- 9.Please use the attached balance kits to oinclination adjustment if the lamp body seemed to be slant after finished assemble.

WIRE CONNECTION DIAGRAM

Wires meeting safety standards are required to connect the electrical circuit

CAUTION: Risk of fire



Please read all instructions carefully. Before you proceed to install,make sure that the power supply is turned off and remains off until installation is completed.

PARTS INCLUDED

Code	Part description	QTY
A	Lamp socket	1
C	Tube	3
B/D/F	MDF	3
E	Tube	3
G	Tube	3
H	Saddle	1
I	Harp	1
J	Shade	1
K	Finial	1