300 sq. ft.

floorMuffler®

ULTRASEAL

LIMITED LIFETIME WARRANTY

PREMIUM GRADE CERTIFIED



- HIGH PERFORMANCE ACOUSTICAL UNDERLAYMENT & MOISTURE BARRIER.
- FOR LAMINATE & WOOD FLOORS.
- FOR RESIDENTIAL & COMMERCIAL APPLICATIONS.
- FOR FLOATING, NAIL DOWN & DOUBLE GLUE DOWN INSTALLATIONS*.
- SELF-SEALING LIP & TAPE SYSTEM.

BEST FOR SOUND REDUCTION

74 IIC 76 HIIC 73 STC 25 ΔIIC

Moisture barrier.

Improves R-value.

Proprietary PP Core Technology to ensure the integrity of the tongue and groove.

Surpasses the Indoor Air Quality emissions requirements.

8 51312 00482 4

Item No. 0265282
SKU 1009234431
300 sq. ft. / 2.0mm x 48" x 75'

FLOORMUFFLER.COM

Distributed by:
Diversified Industries, Inc.
121 High Hill Road
Swedesboro, NJ 08085 USA.

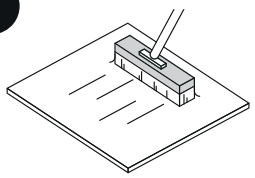
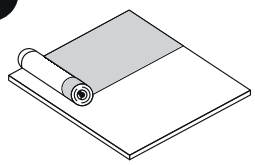
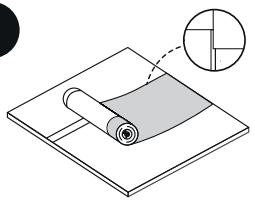
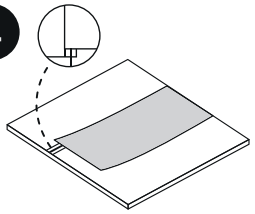
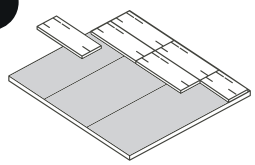
*For Glue Down installations, only use adhesives that have been tested by the adhesive manufacturer for installation of the floorMuffler ultraSeal.
Flooring systems protected under USPTO No. 8,276,338; 8,458,975; 8,707,646.

nwfa National Wood Flooring Association MEMBER

floor score CERTIFIED BY SCS Global Services

floorMuffler®
ULTRASEAL

FLOOR MUFFLER® ULTRASEAL
Installation Instructions

1 	1. Make sure the subfloor is structurally sound, level and is free of dust and debris. 2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must meet the floor covering manufacturer's acceptable moisture tolerance range.
2 	1. Start in a corner with the tape strip side next to the wall and the overlapping film towards the open room. 2. Install **floorMuffler® ultraSeal** (overlap film side down) parallel to the wall in the opposite direction that you plan to install the flooring planks. 3. When installing the **floorMuffler® ultraSeal**, leave at least 2" going up the wall (you will trim this part after installing the floor).
3 	1. Be sure to unfold the overlap plastic film, extending it 3" from the foam. 2. Roll out the next roll of **floorMuffler® ultraSeal** in the same manner, making sure that the foam seams are butted together. 3. Be sure to overlap only the moisture barrier plastic film and not the underlayment pad.
4 	1. Remove the adhesive liner and adhere the underlayment to the plastic film overlap.
5 	1. Install the flooring per manufacturer's instructions.