

Tension Rod Installation Instructions-A

Helpful Hints—Spring Mount(Rods $24''\!-\!42''$ and $42''\!-\!72'')$ Read carefully before starting

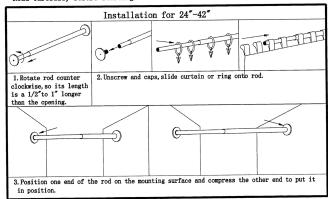


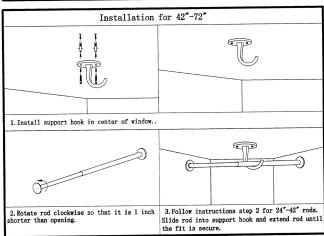

Tension Rod Installation Instructions-B

Helpful Hints—Spring Mount(Rods $24\rlap{''}-42\rlap{''}$ and $42\rlap{''}-72\rlap{''})$ Read carefully before starting

1. Install support hook in center of window, so that hook ppening is facing room.

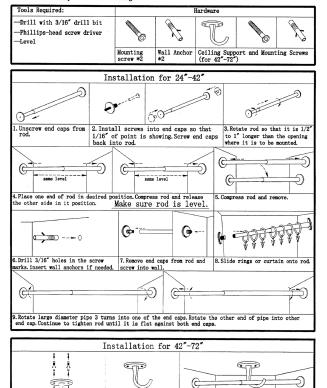

2. Follow steps 1-9 for 24"-42" installation.