

# UNDERMOUNT SINK VANITY

From MAXWELL BATHROOM & KITCHEN INCM

## BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing, vanity cabinet, sink, counter top, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the vanity for damage. If any damage is found, contact our Customer Relations team at 1-(408) 728-6543.

## GETTING STARTED


- Ensure that you have gathered all the required materials that are needed for the installation.
- Ensure that your bathroom floor is adequately supported, and the finished floor is level.
- Ensure that there is adequate support behind the bathroom wall before installation.

## PLANNING

Use the vanity's PDF specification sheet as a reference when planning your layout. The specification sheet can be found and downloaded from the product page on our website.

Because the vanity specification measurements are approximate and slight variations may occur, we highly recommend performing any rough-in procedures with the vanity on site.

## TOOLS AND MATERIALS:



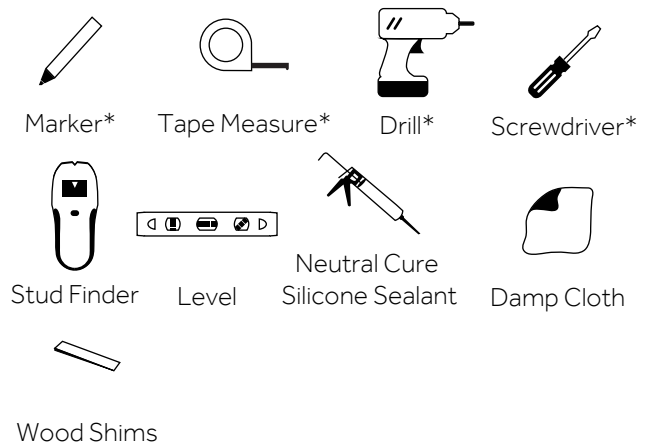


\*not included

NEVER LIFT THE VANITY TOP FLAT



NEVER CARRY THE VANITY TOP FLAT

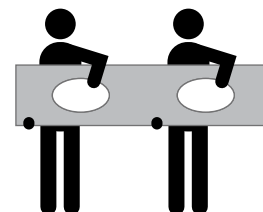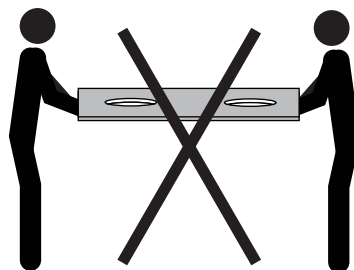


For Warranty information, please visit: [signaturehardware.com/services/warranty](https://signaturehardware.com/services/warranty)

# UNDERMOUNT SINK VANITY


By MAXWELL BATHROOM & KITCHEN INCM

## HOW TO CARRY THE TOP

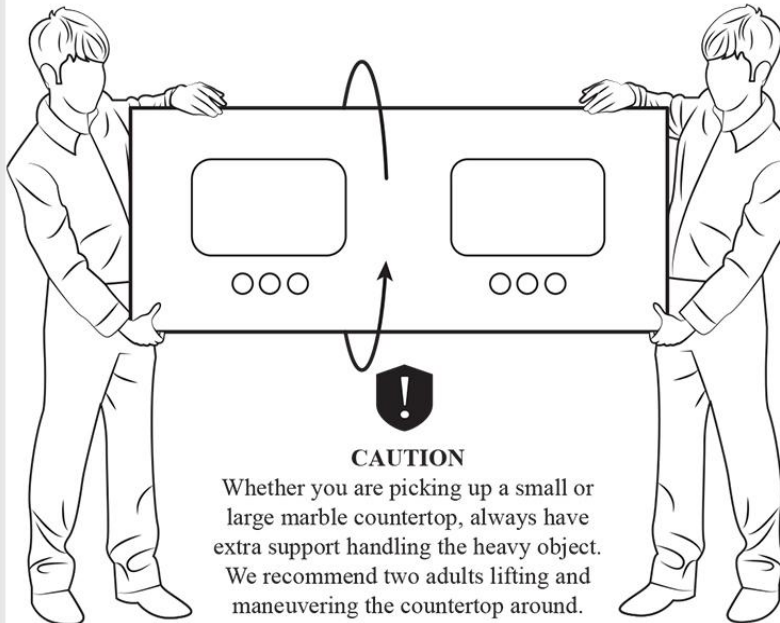


1

Apply a continuous stream of silicone glue around the top of the cabinet.

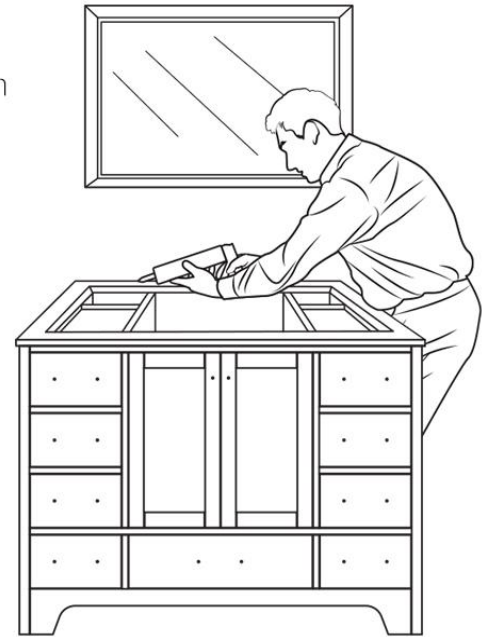

2

Carry the countertop and gently place it onto the cabinet.

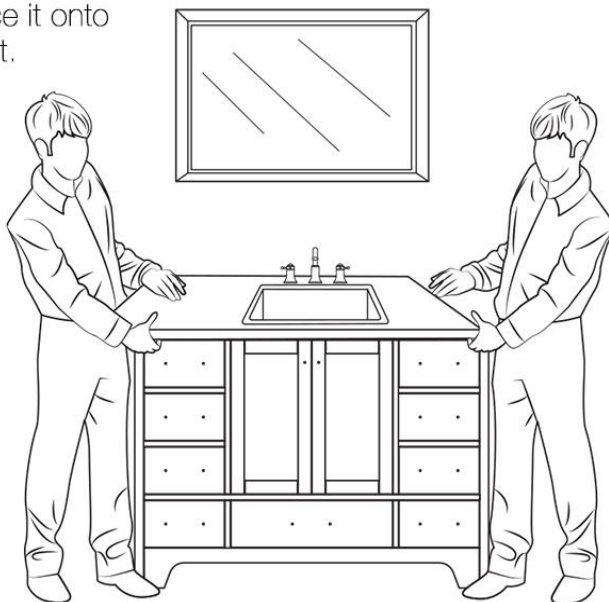

3

Install the backsplash by applying silicone glue near the edge of the countertop. Then place the backsplash onto the silicone area. Add additional silicone onto the edges for sealant if necessary.




# UNDERMOUNT SINK VANITY


By MAXWELL BATHROOM & KITCHEN INCM

## Bathroom Vanity Top Back Splash Installation


1. Position the backsplash on top of the vanity and flush against the finished wall.

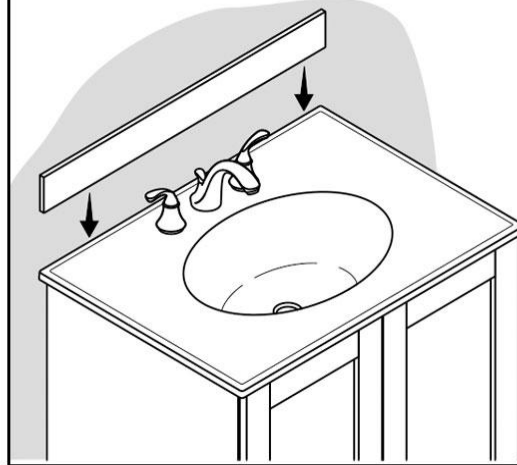


2. Verify the sides of the backsplash are aligned with the sides of the vanity top.

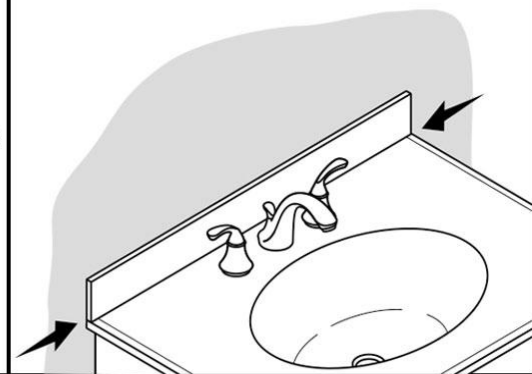

3. Secure the backsplash using a bead of siliconized acrylic caulk on the back surface.

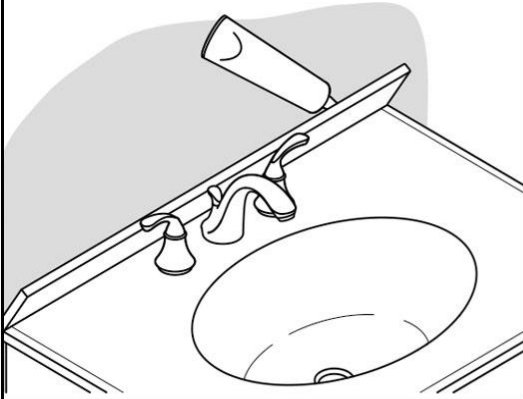

4. Apply a bead of caulk along the seam of the wall and backsplash.

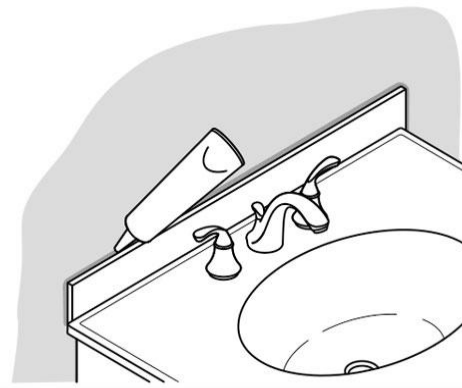

5. Apply a bead of caulk along the seam of the backsplash and vanity top.

