


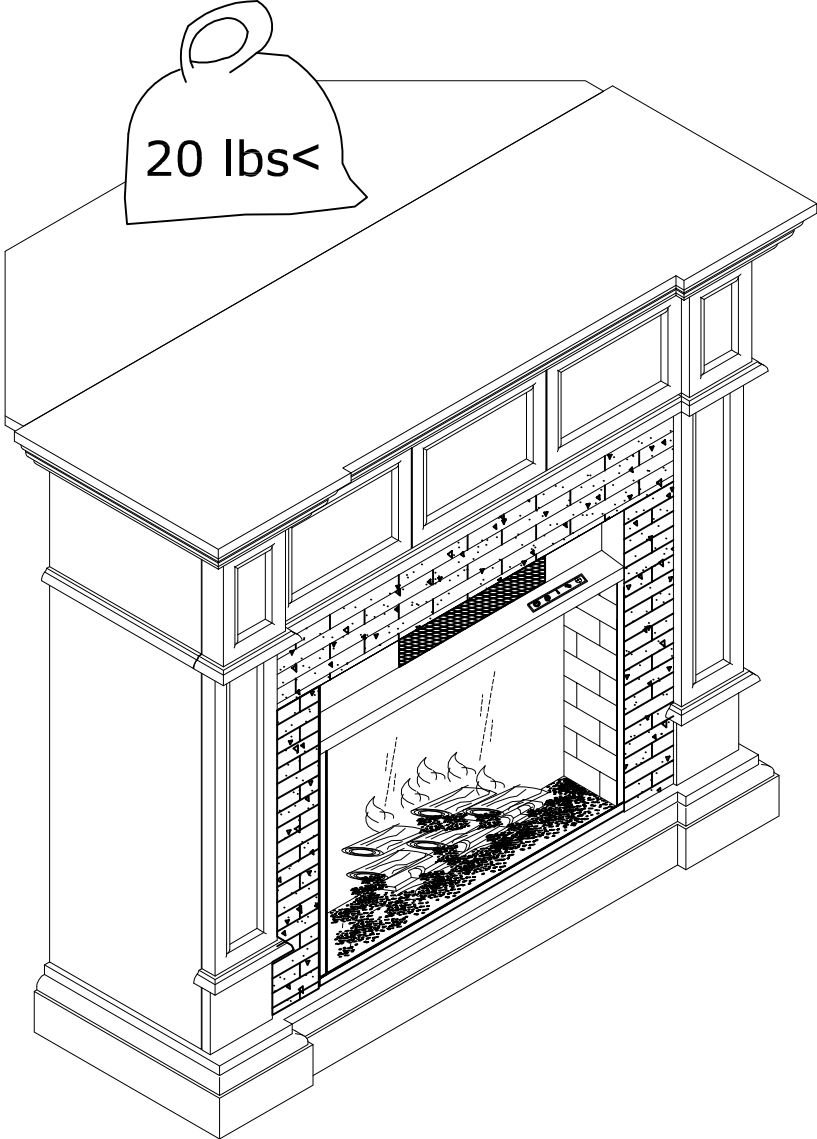
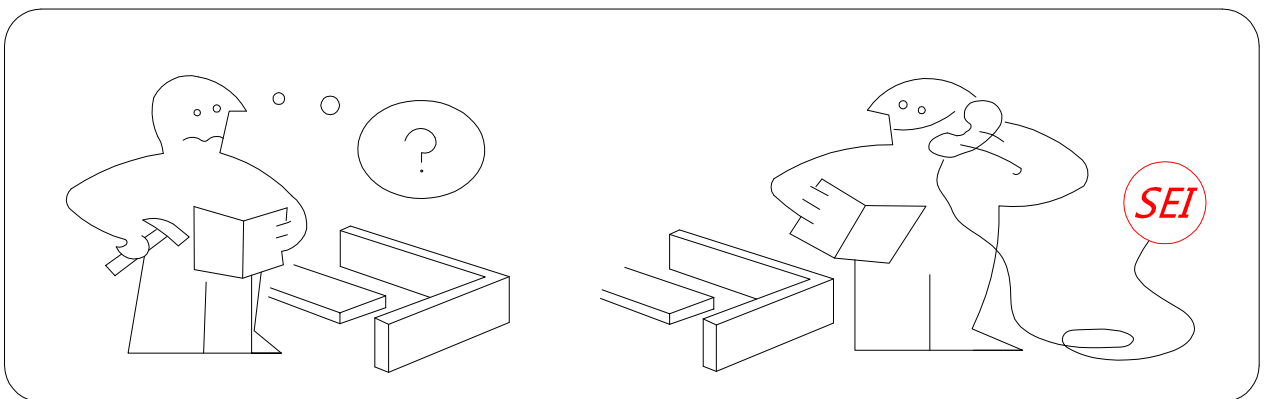
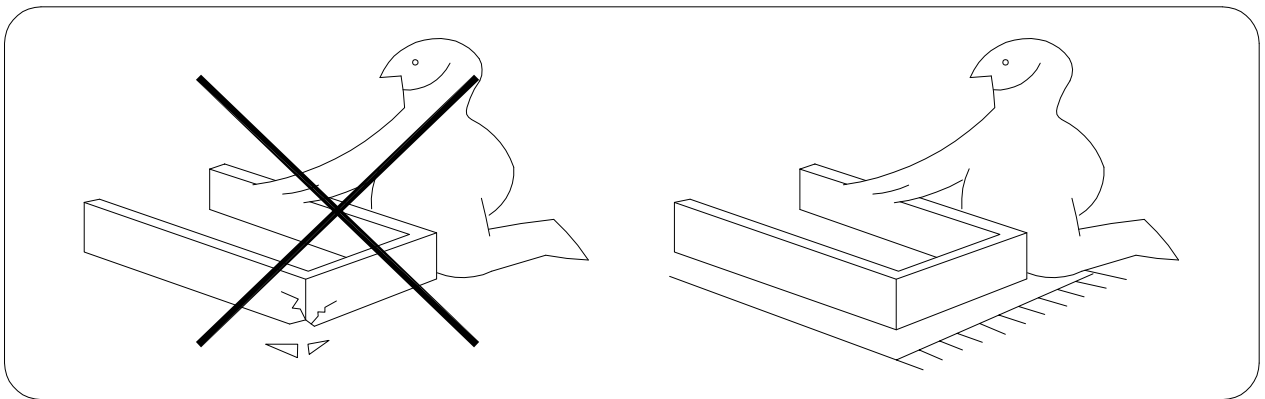


FA963700TX

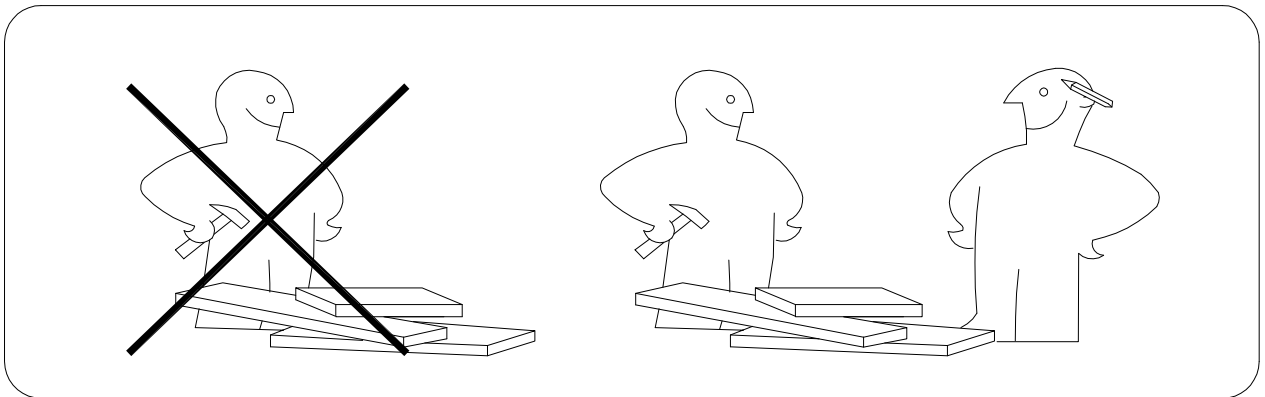


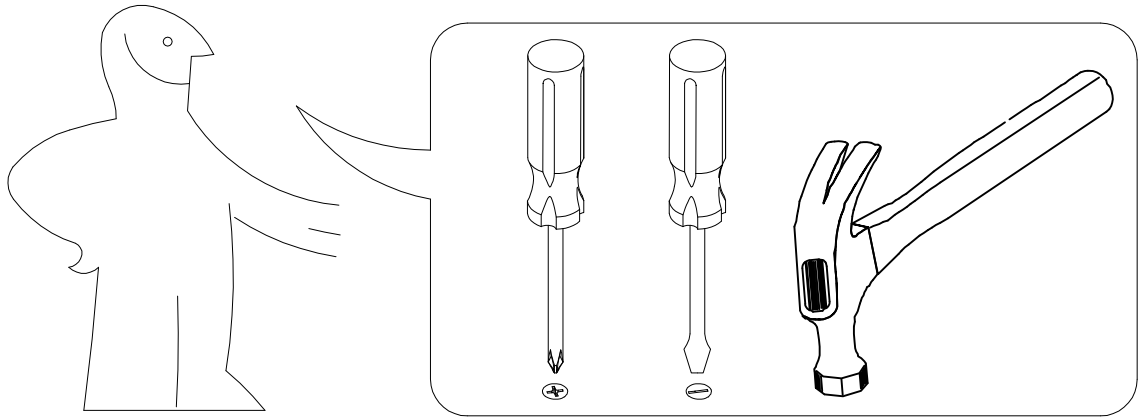


① Top Panel

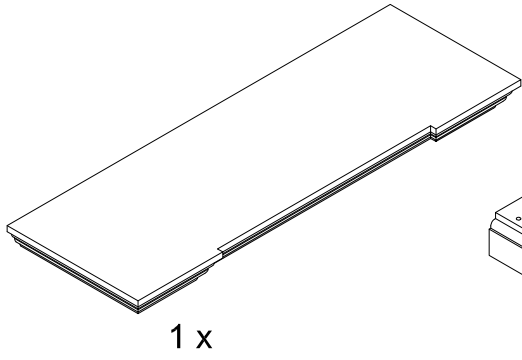


② Bottom Panel

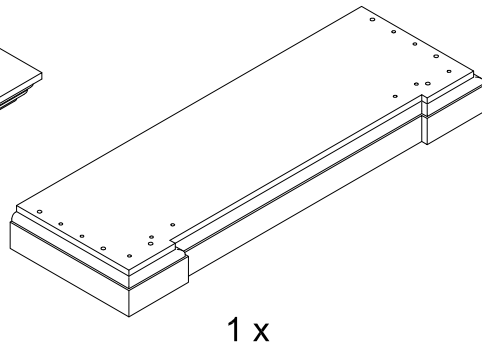


③ Left Front Side Panel

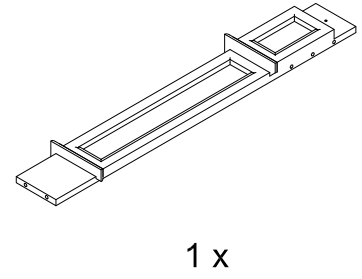


④ Right Front Side Panel

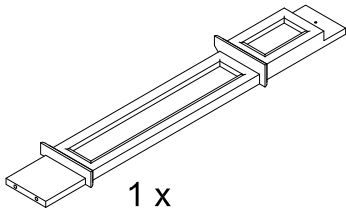


⑤ Left Side Panel

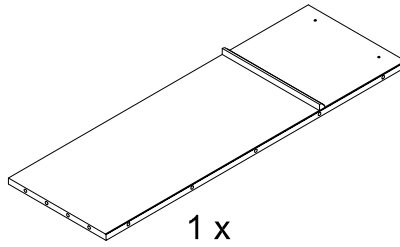


⑥ Right Side Panel

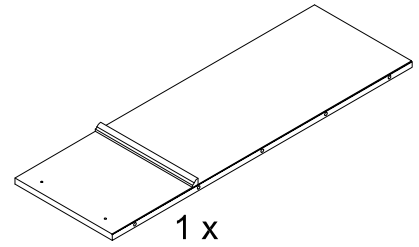


⑦ Upper Front Panel

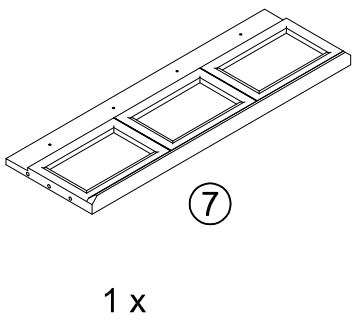


⑧ Convertible Corner Panel

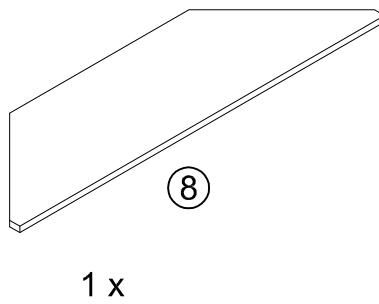


⑨ Middle Front Panel

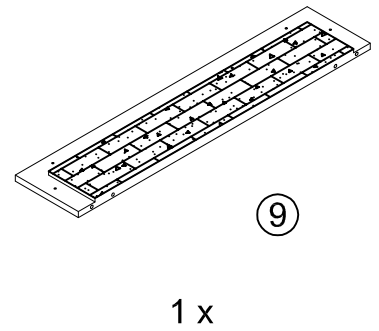


⑩ Left Front Panel

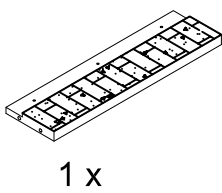


⑪ Right Front Panel

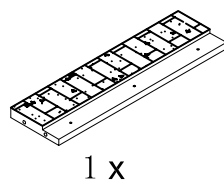

⑫ Wood Blocks




Ⓐ Cam Bolt




18 x

Ⓑ Wood Dowel




18 x

Ⓒ Cam Lock

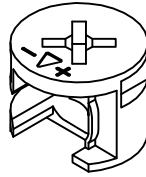


18 x

Ⓓ Screw




26 x

Ⓔ Screw

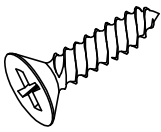


6 x

Ⓕ Firebox
(in a separate carton)

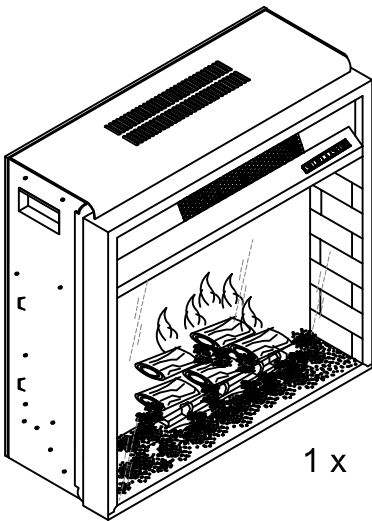


1 x


1

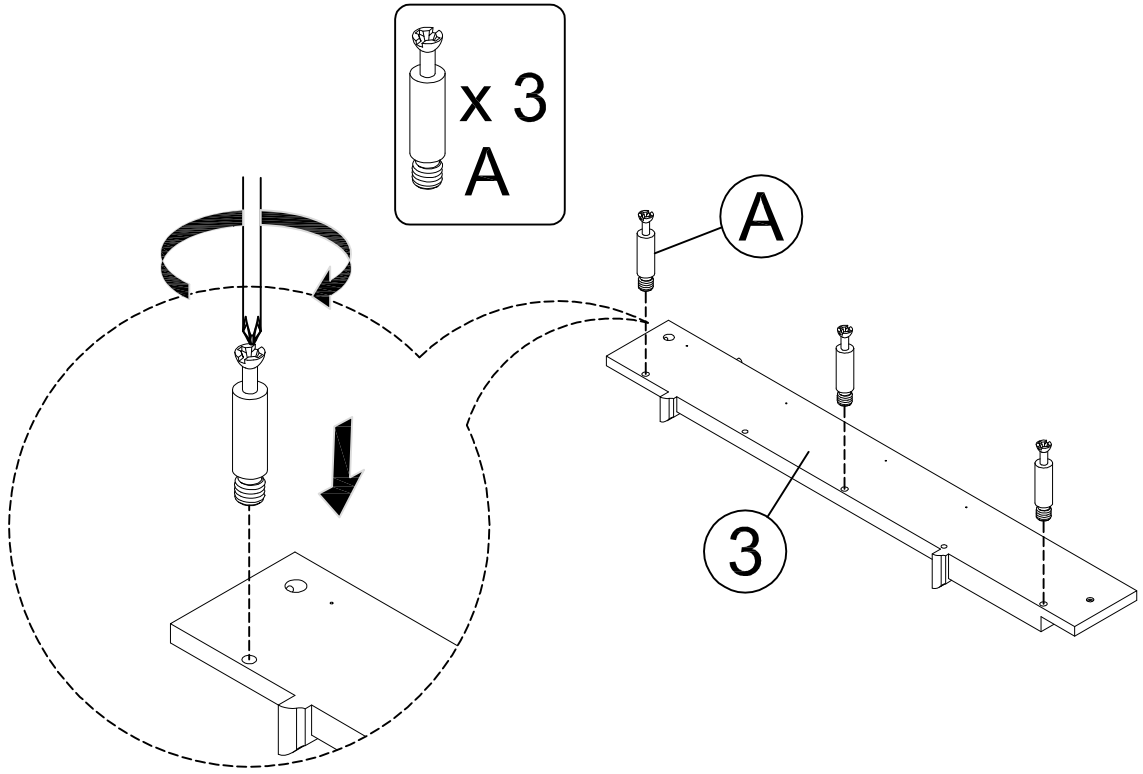


2

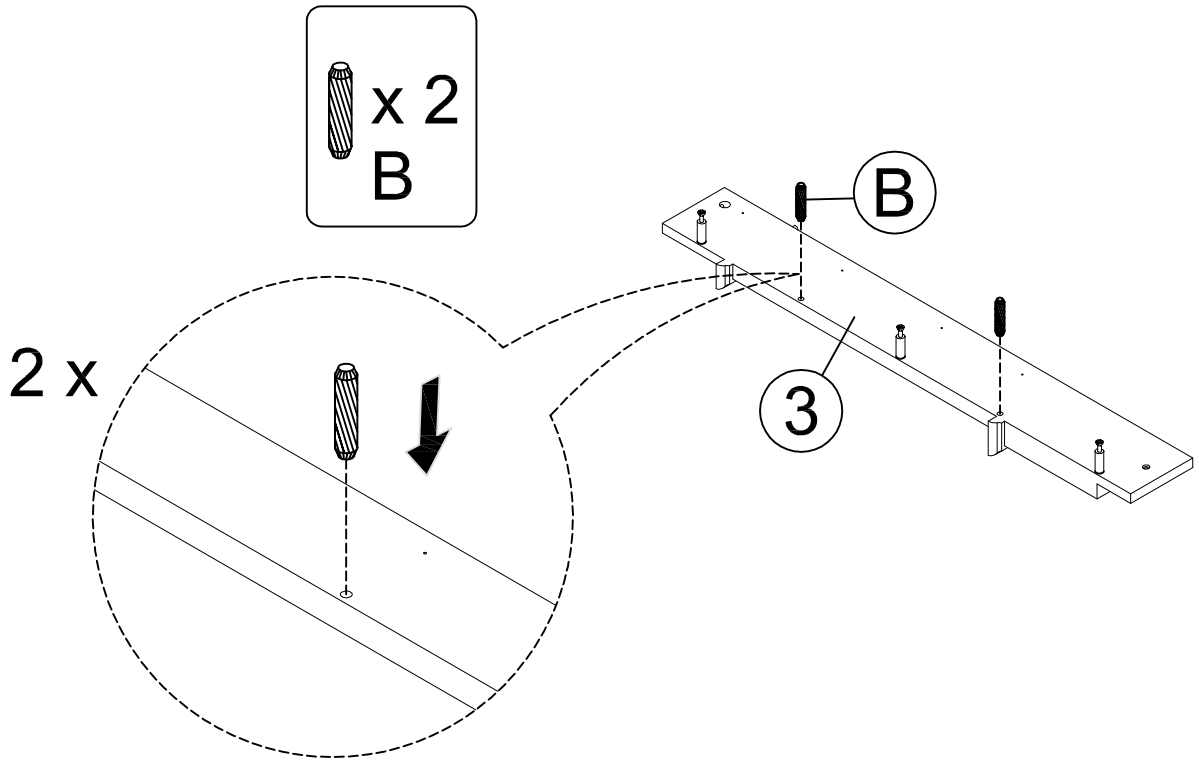


3

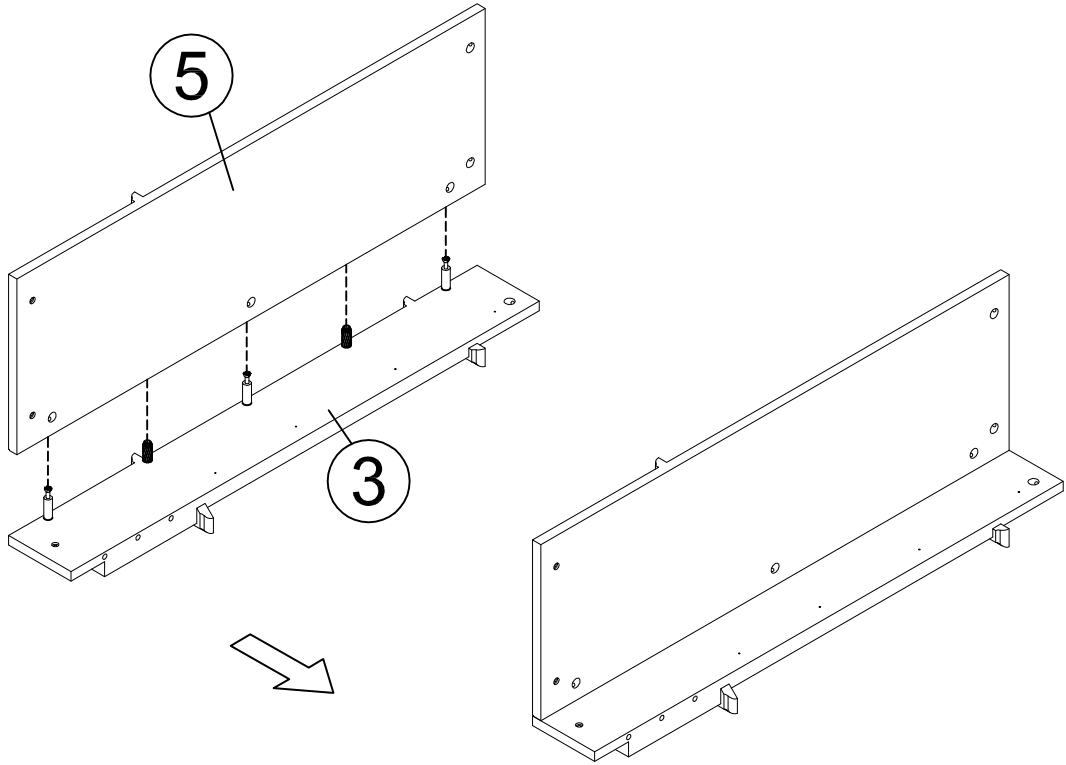


4

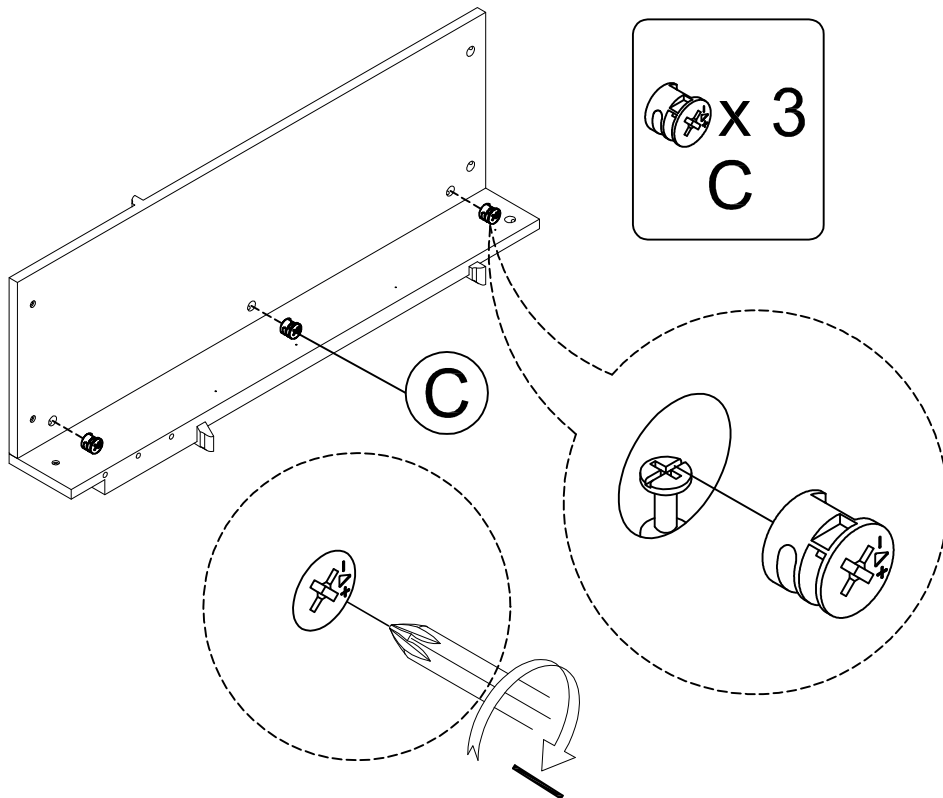


5

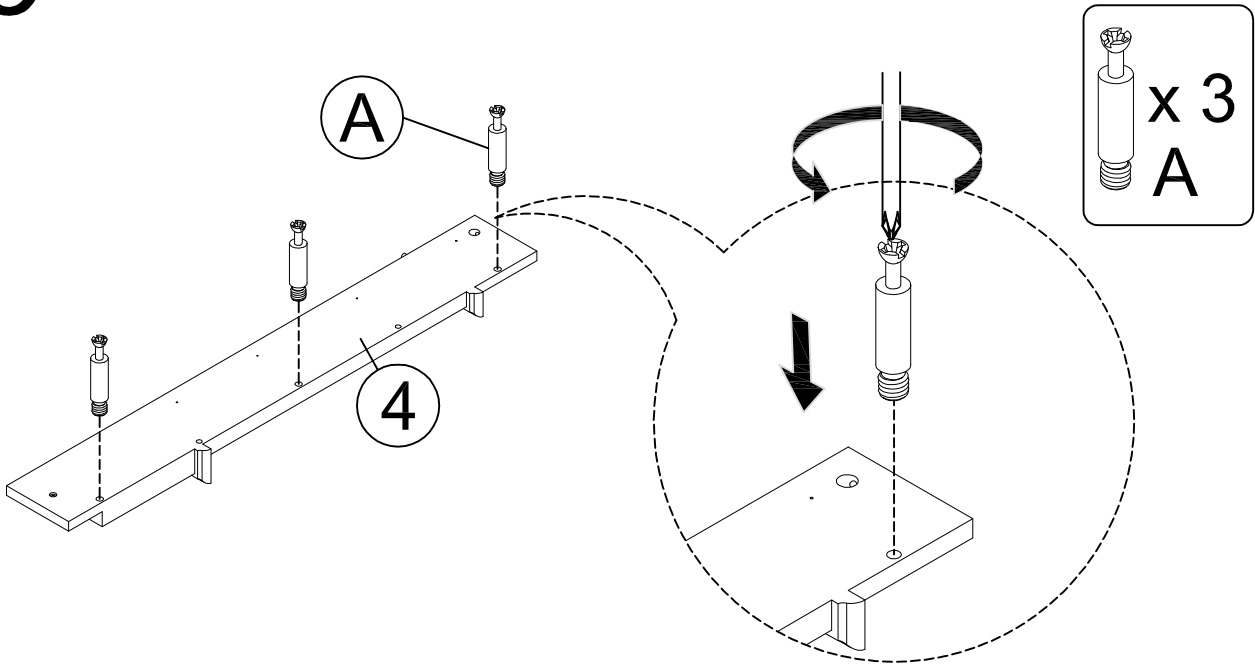


6

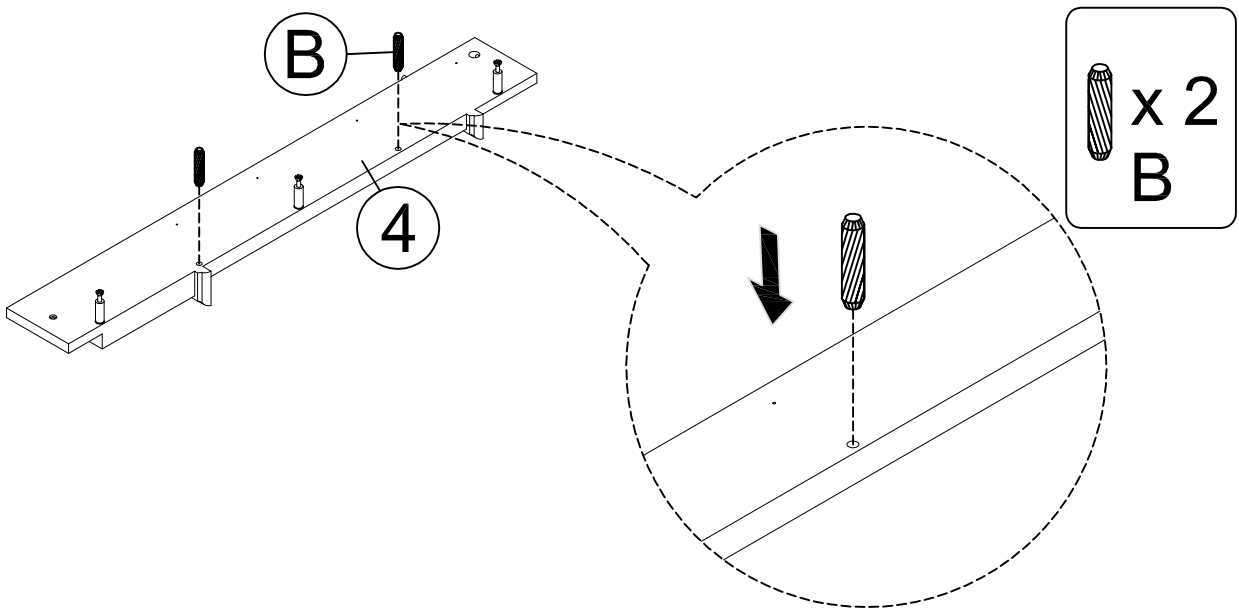


7

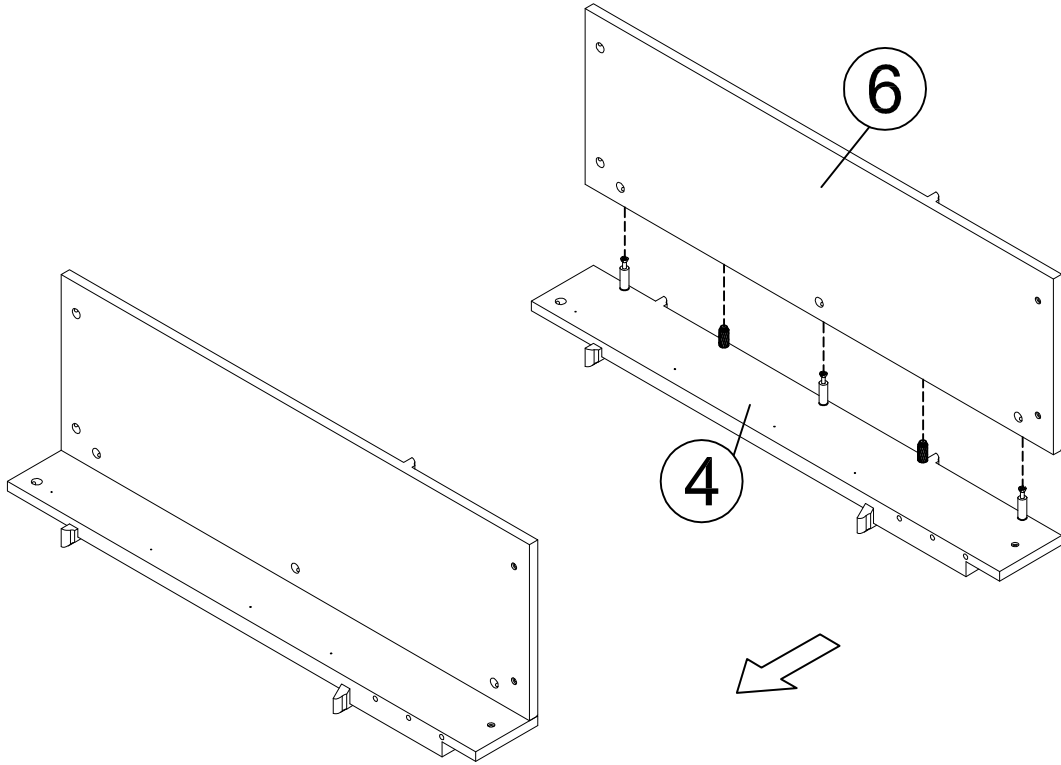


8

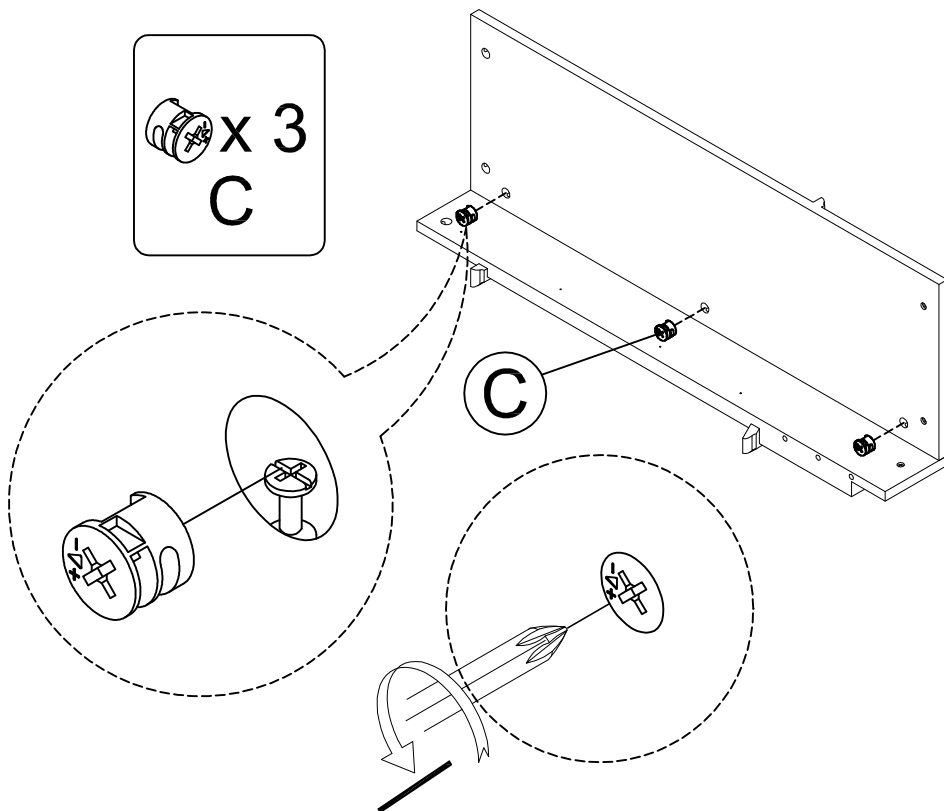


9

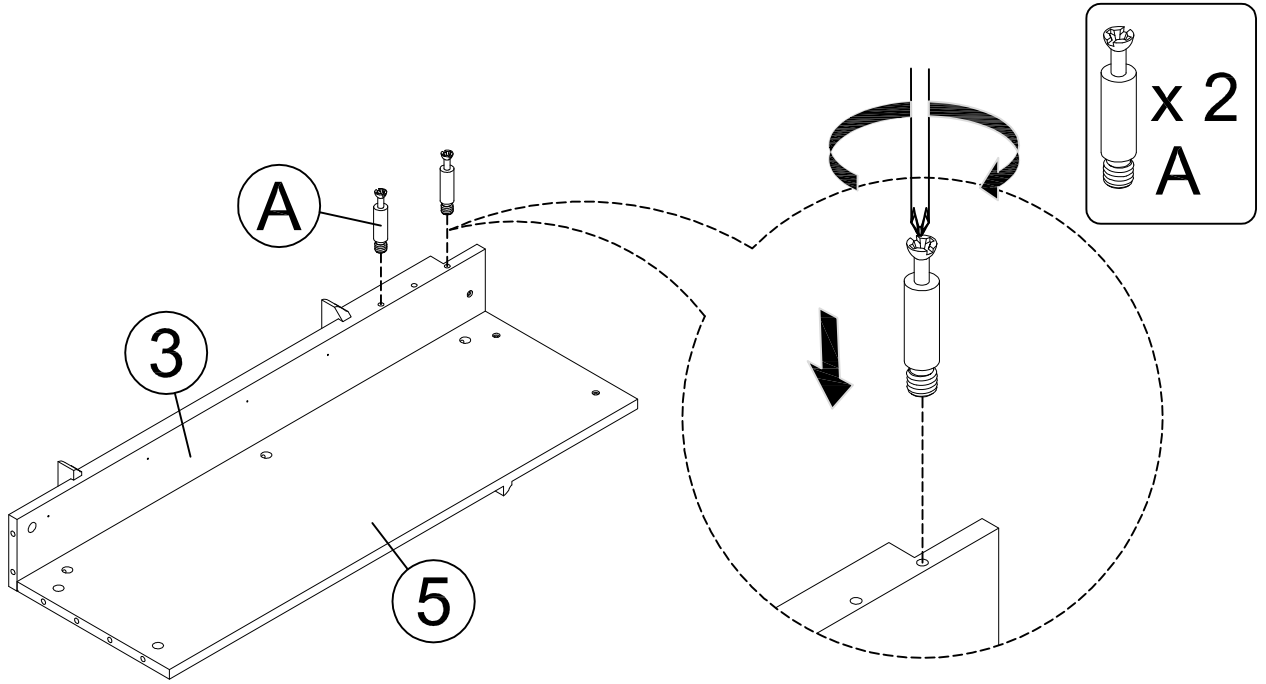


10

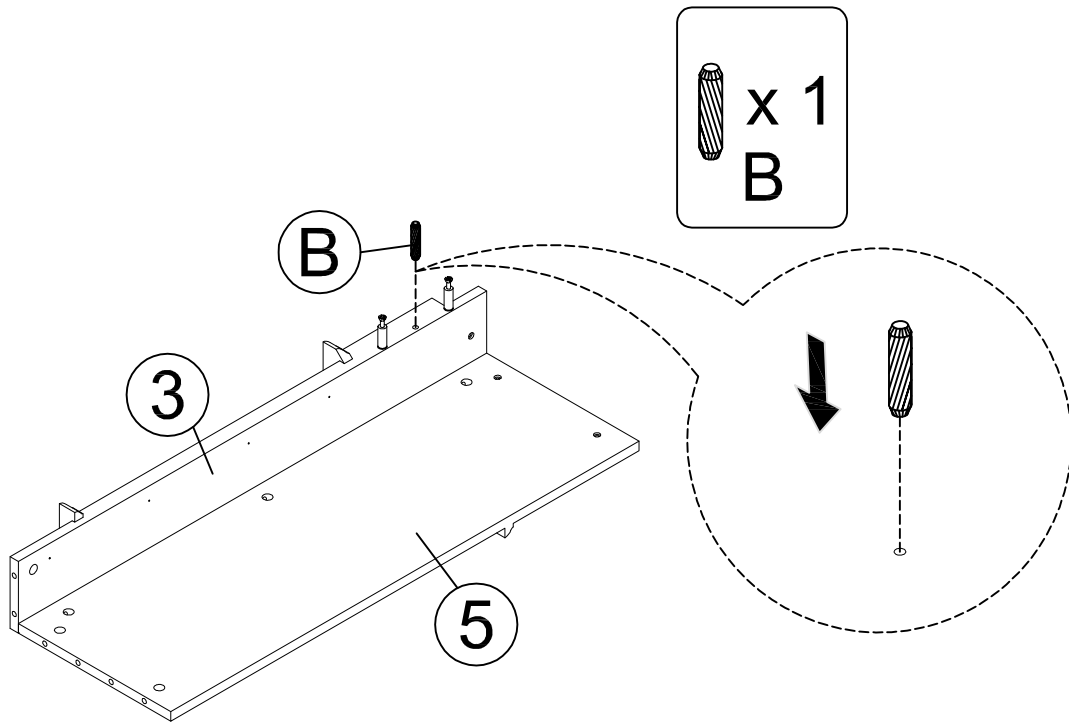


11

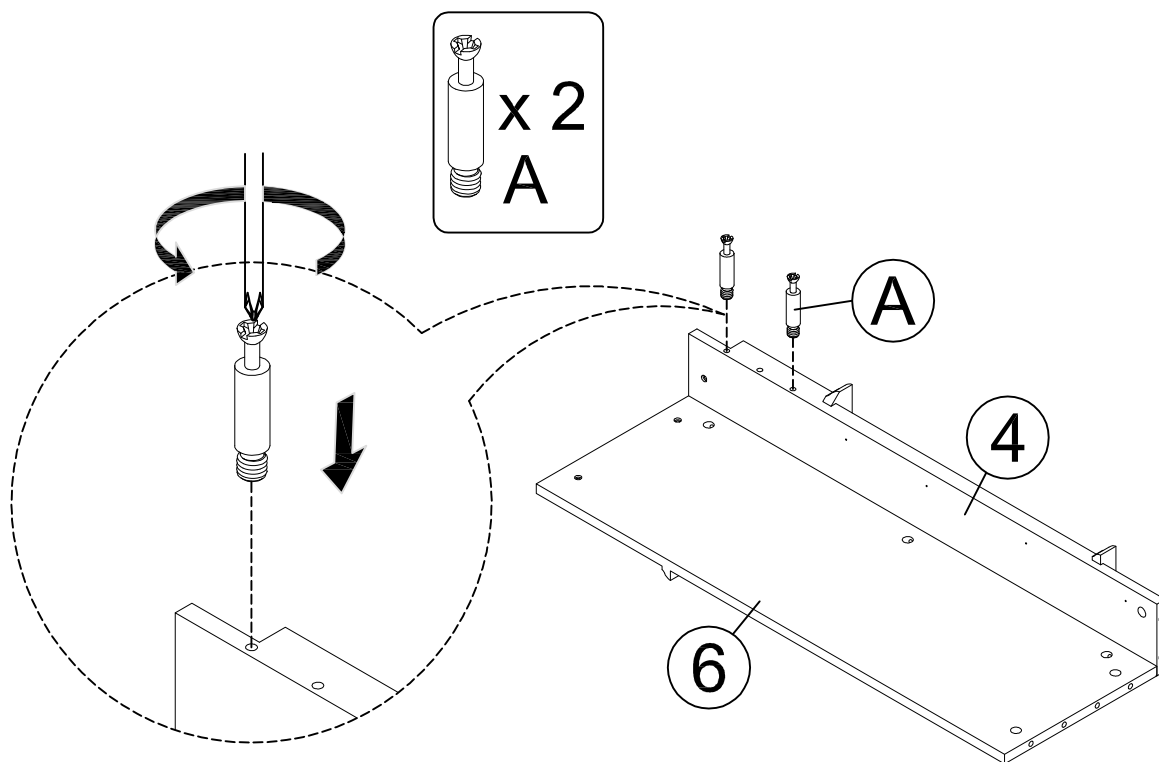


12

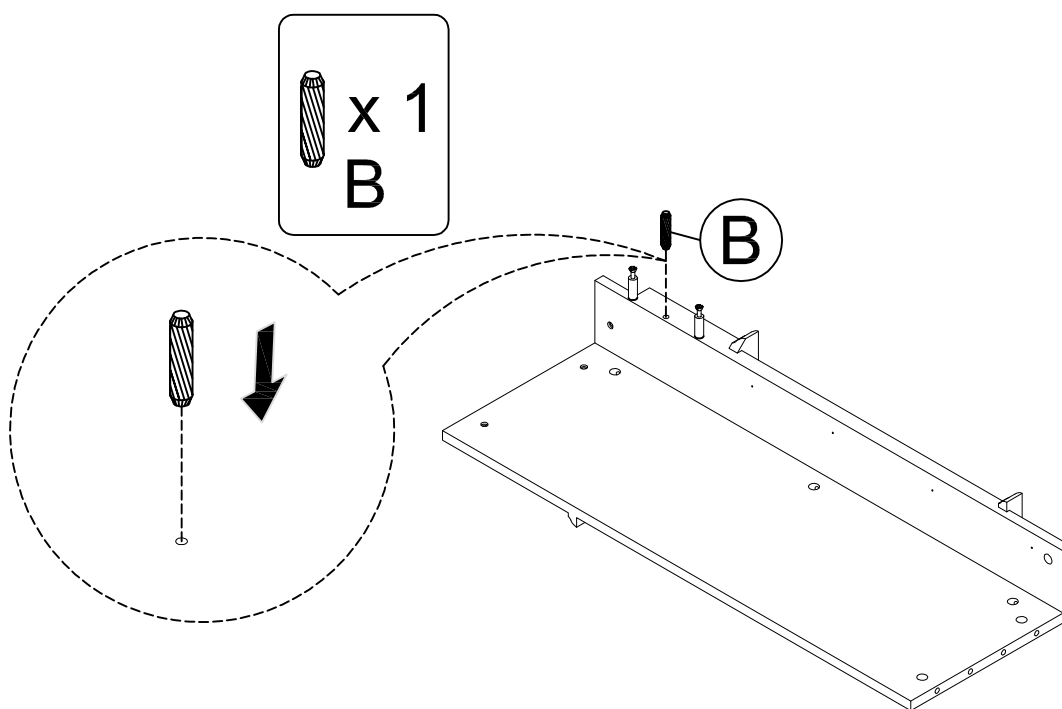


13

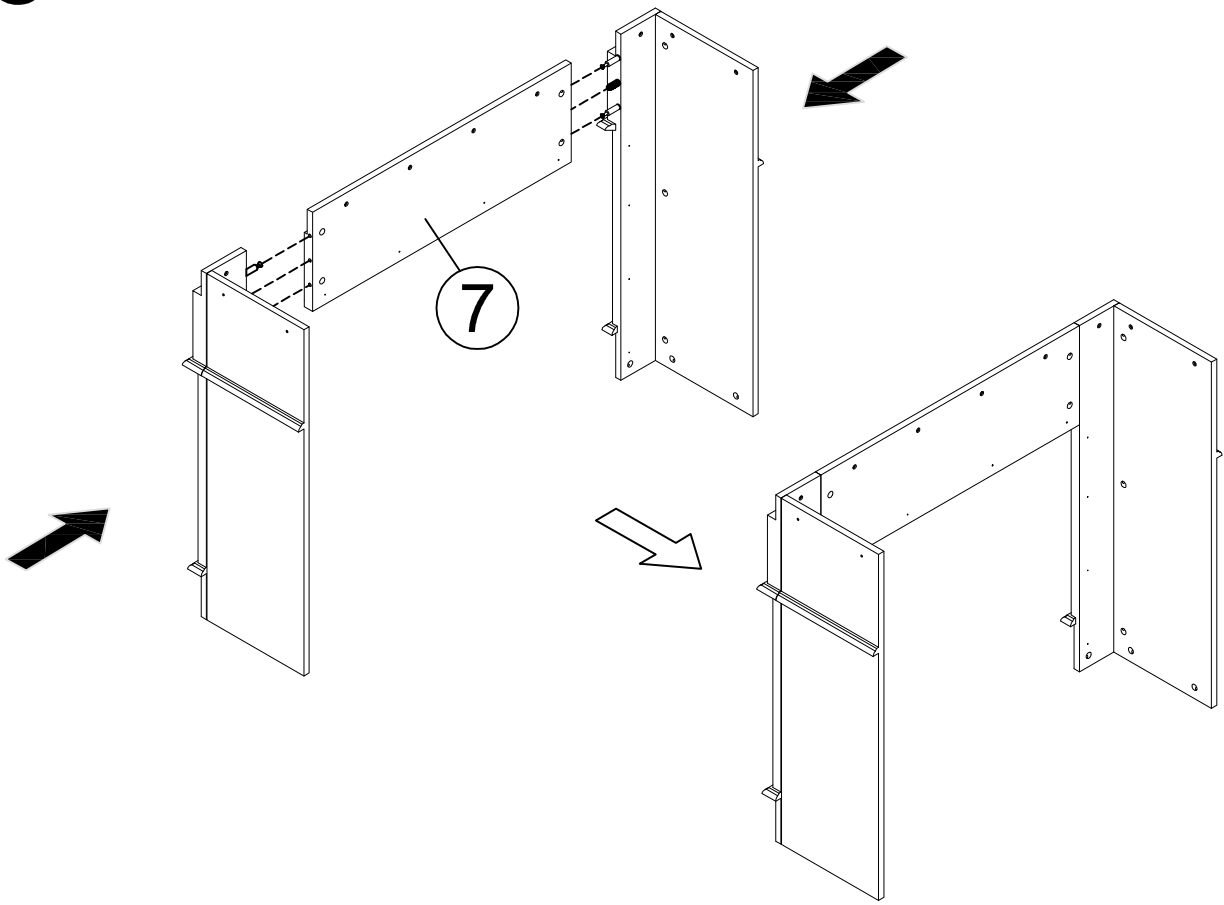


14

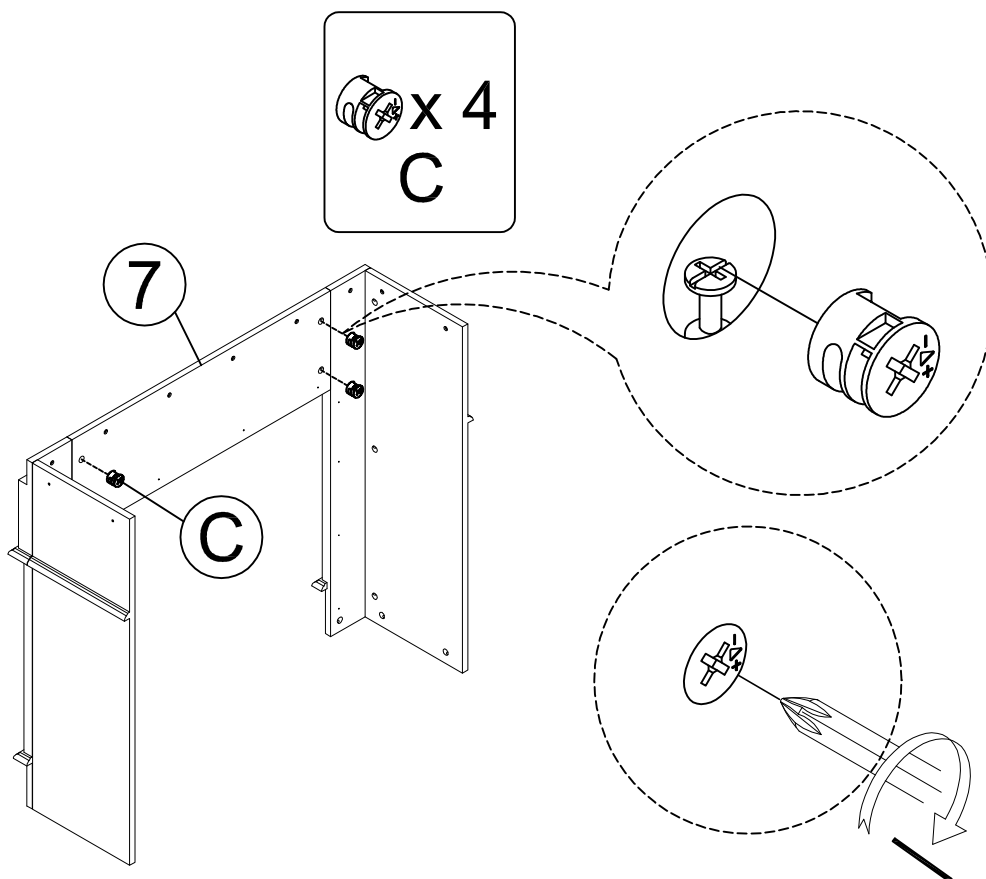


15

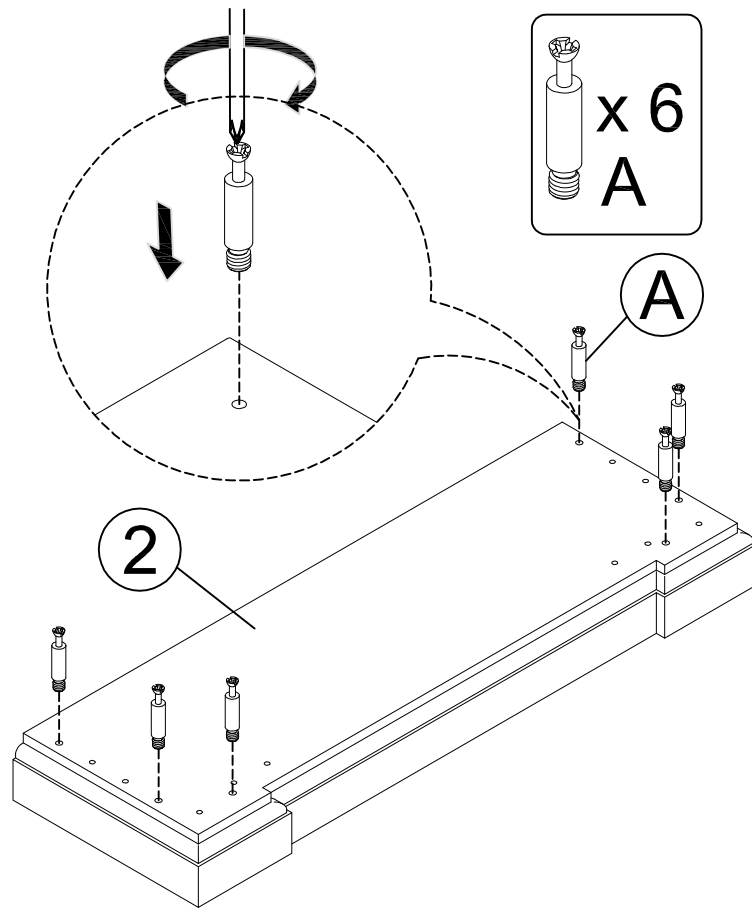


16

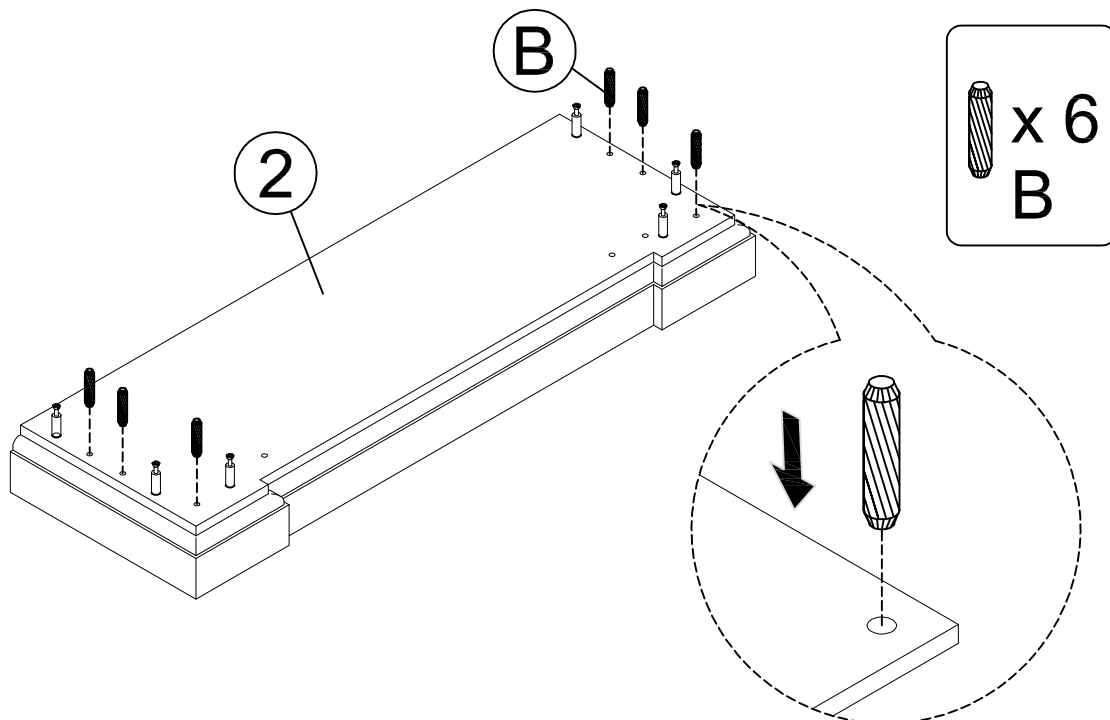


17

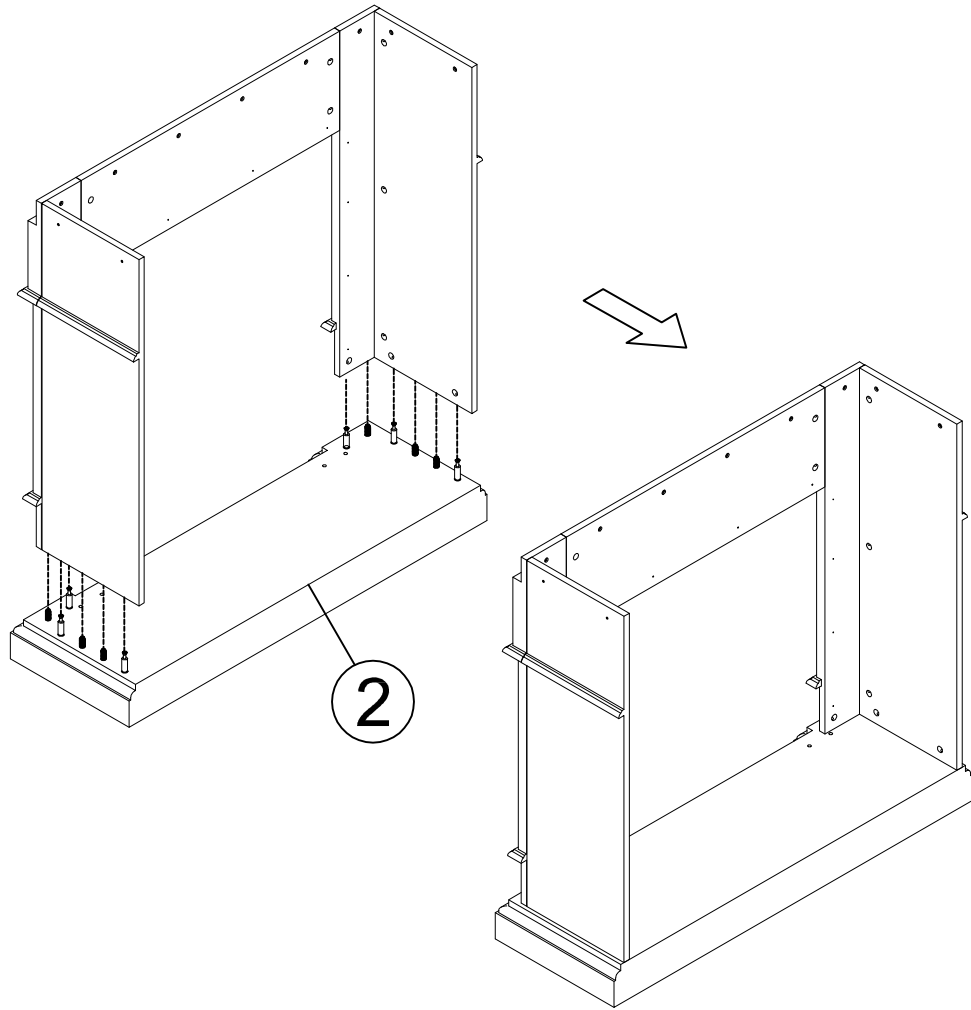


18

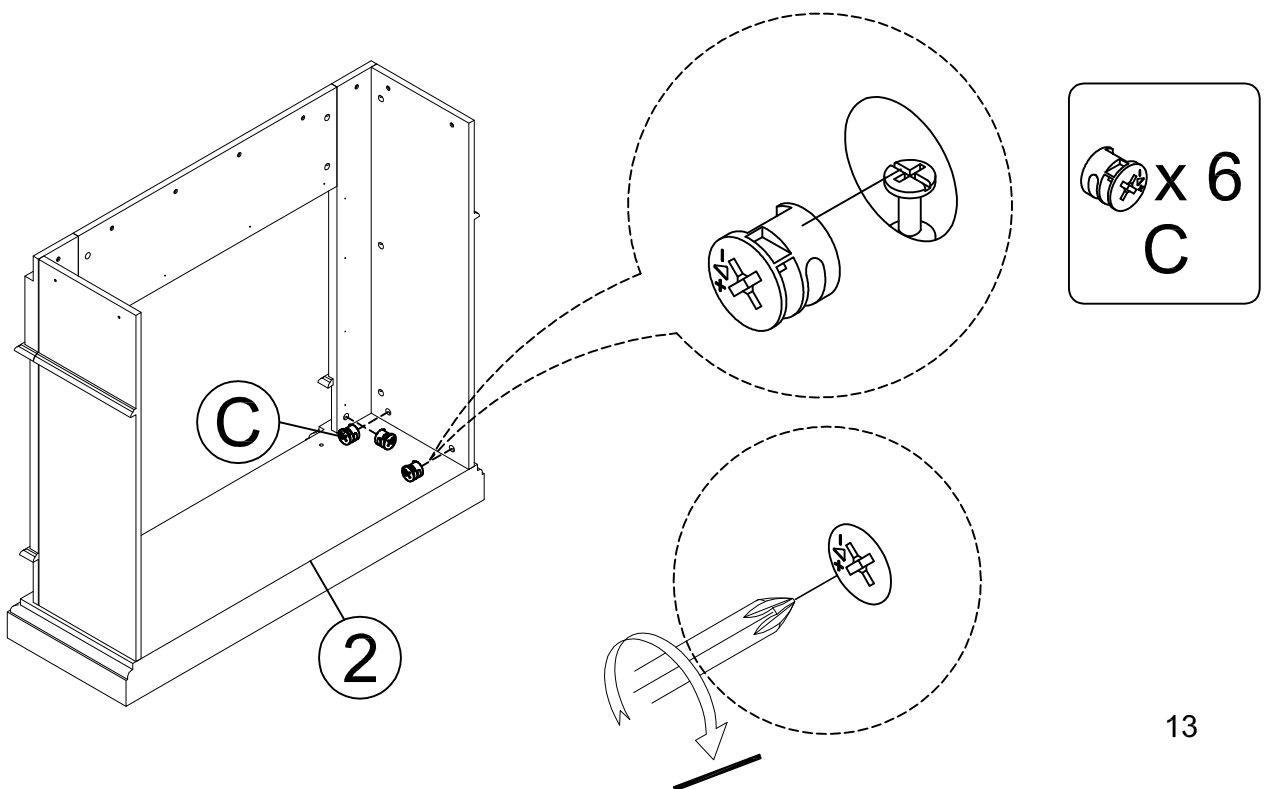


19

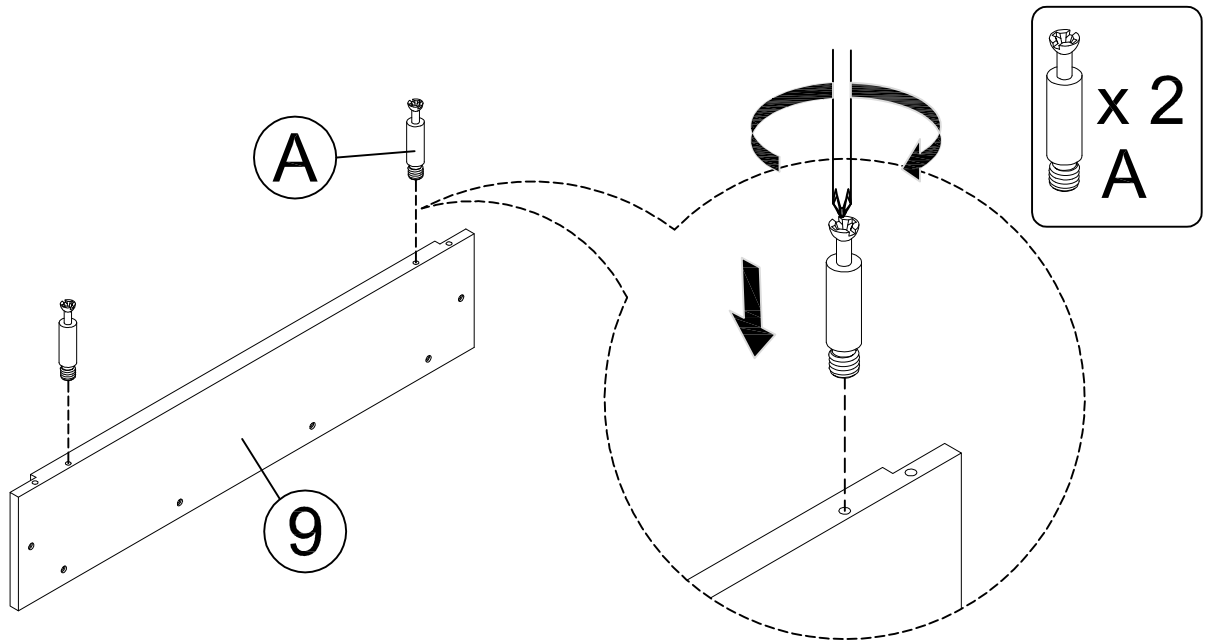


20

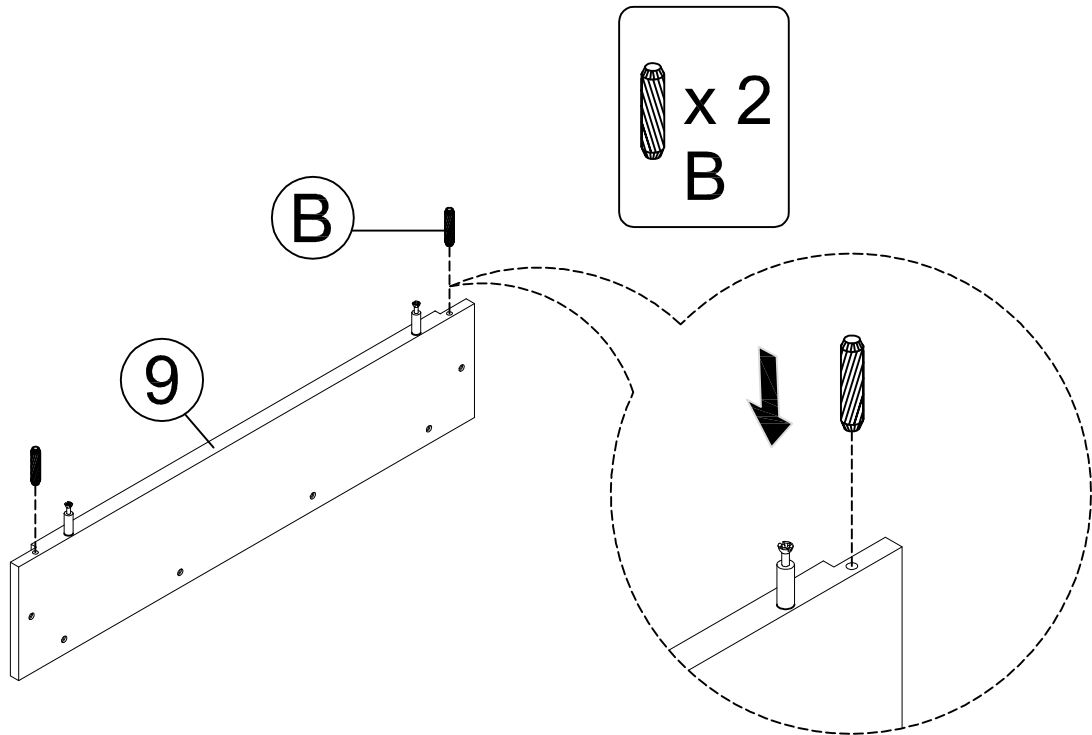


21

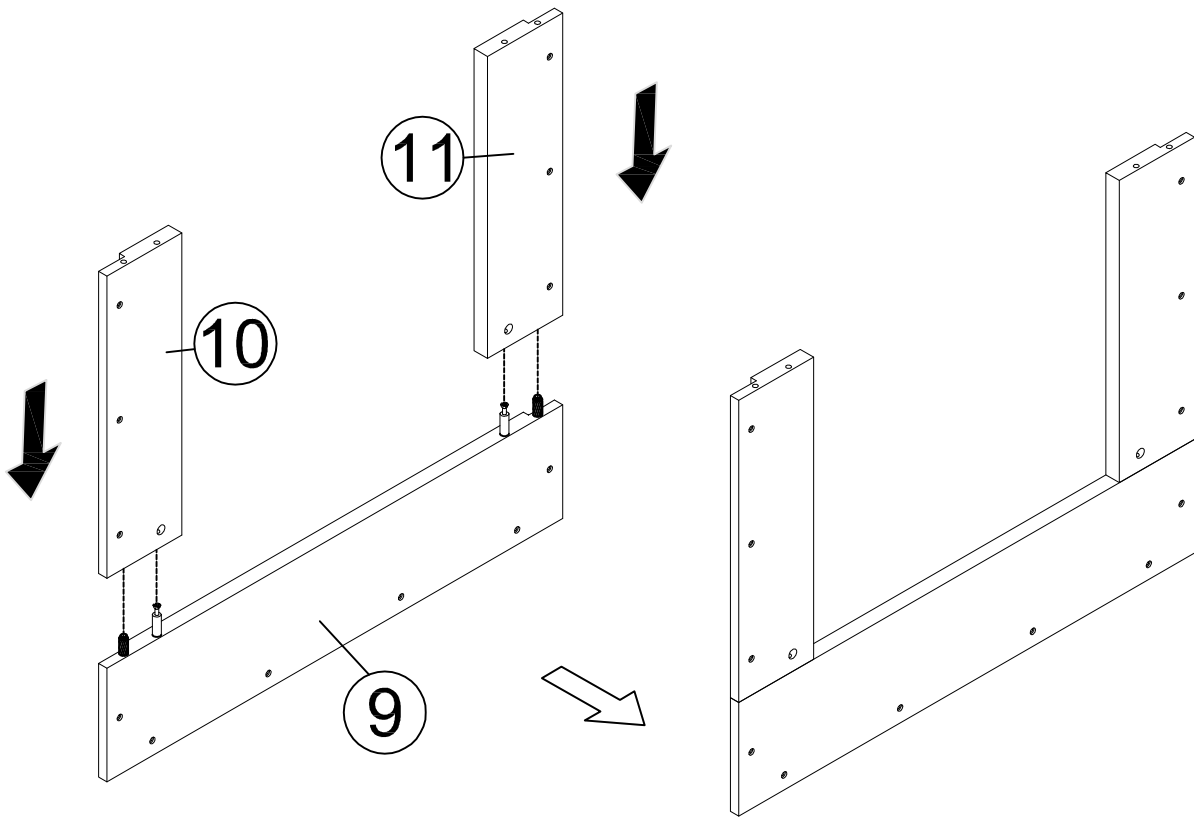


22

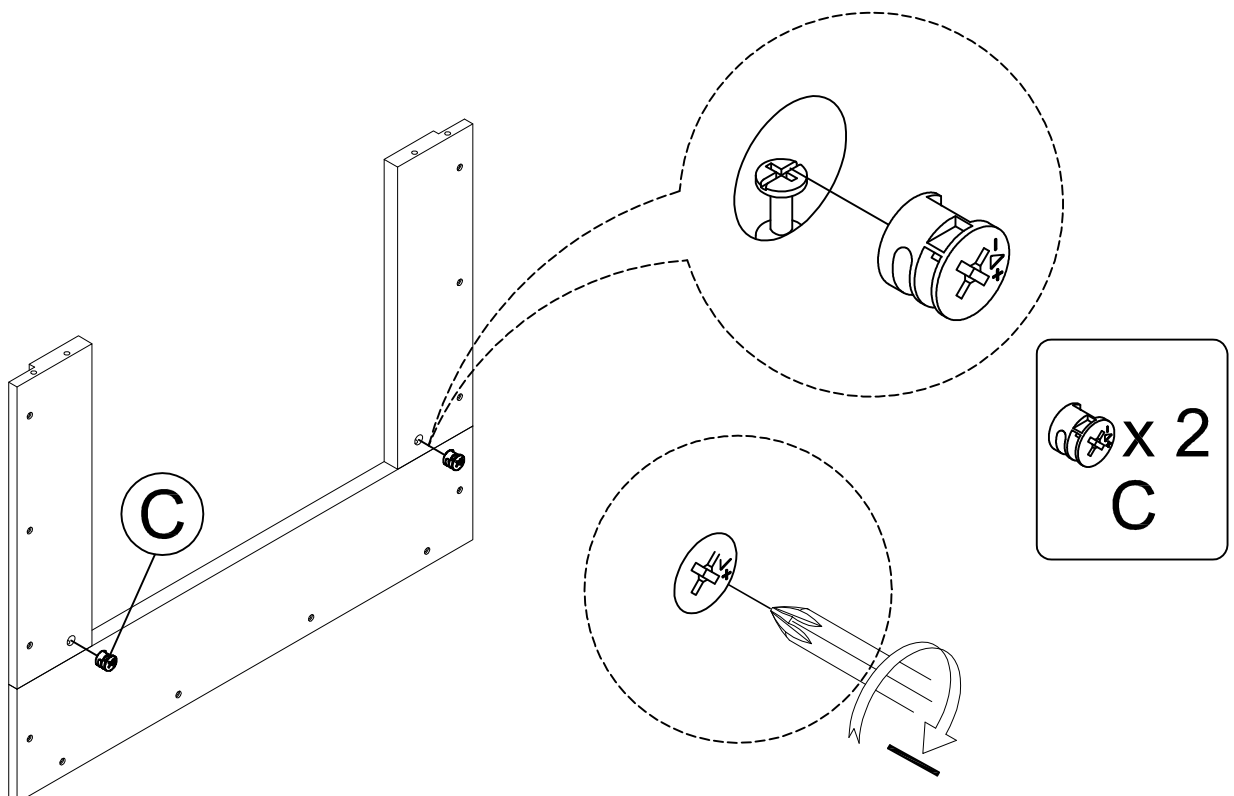


23

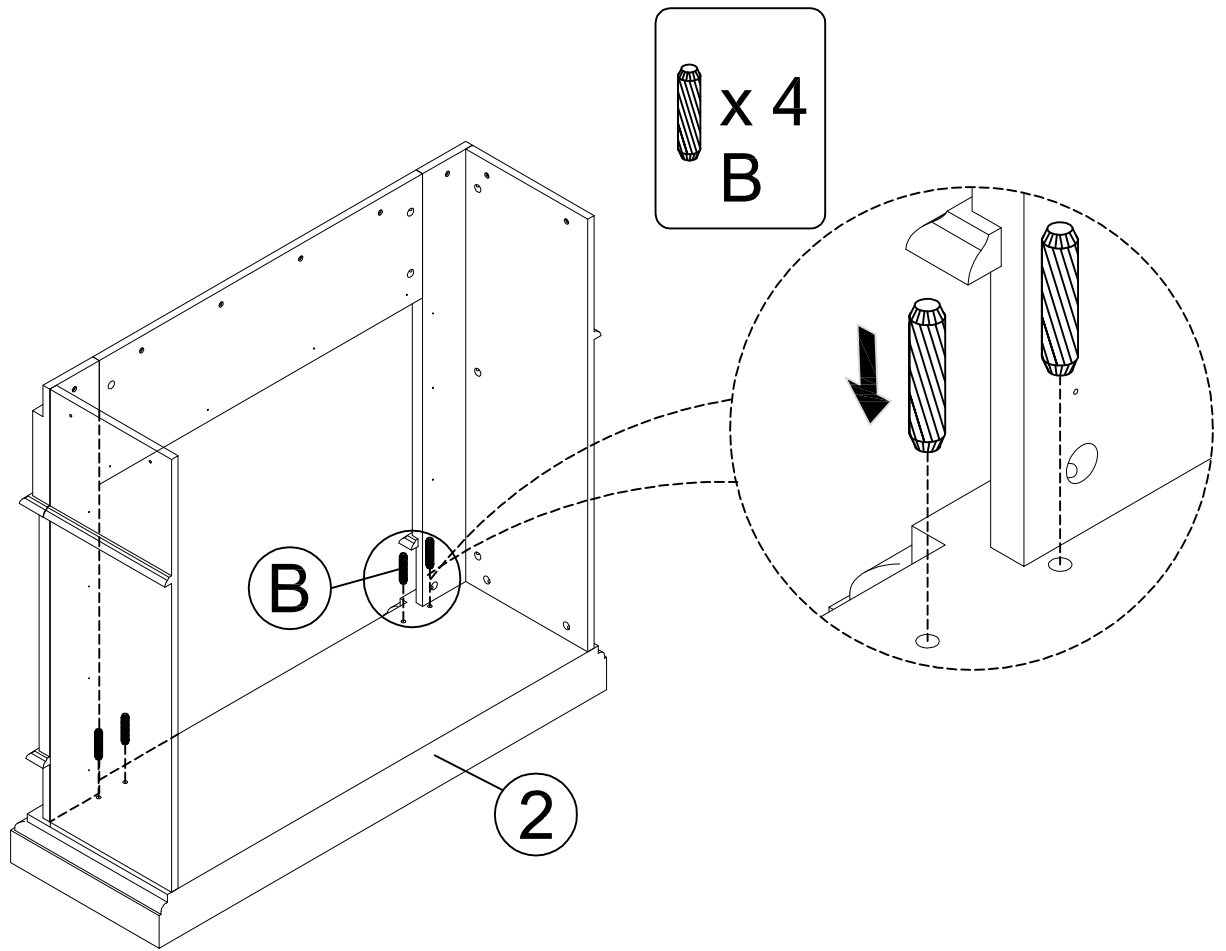


24

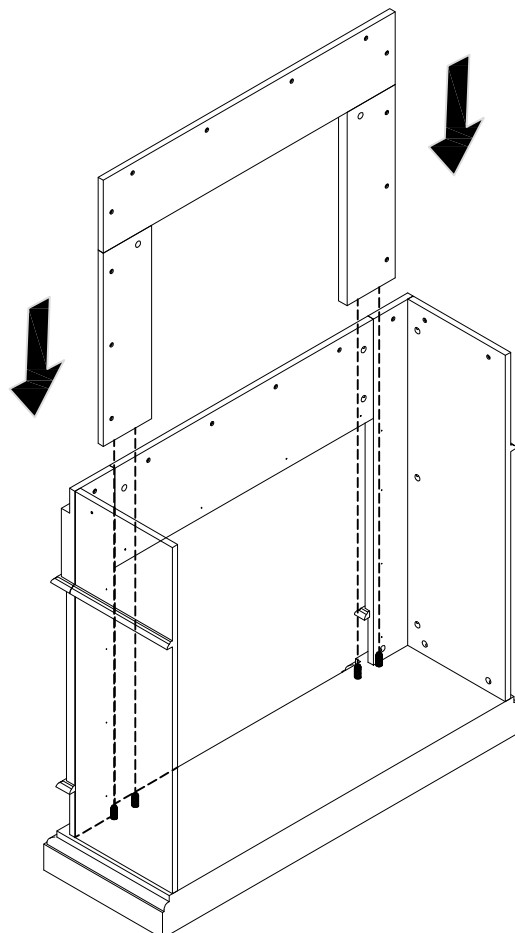


25

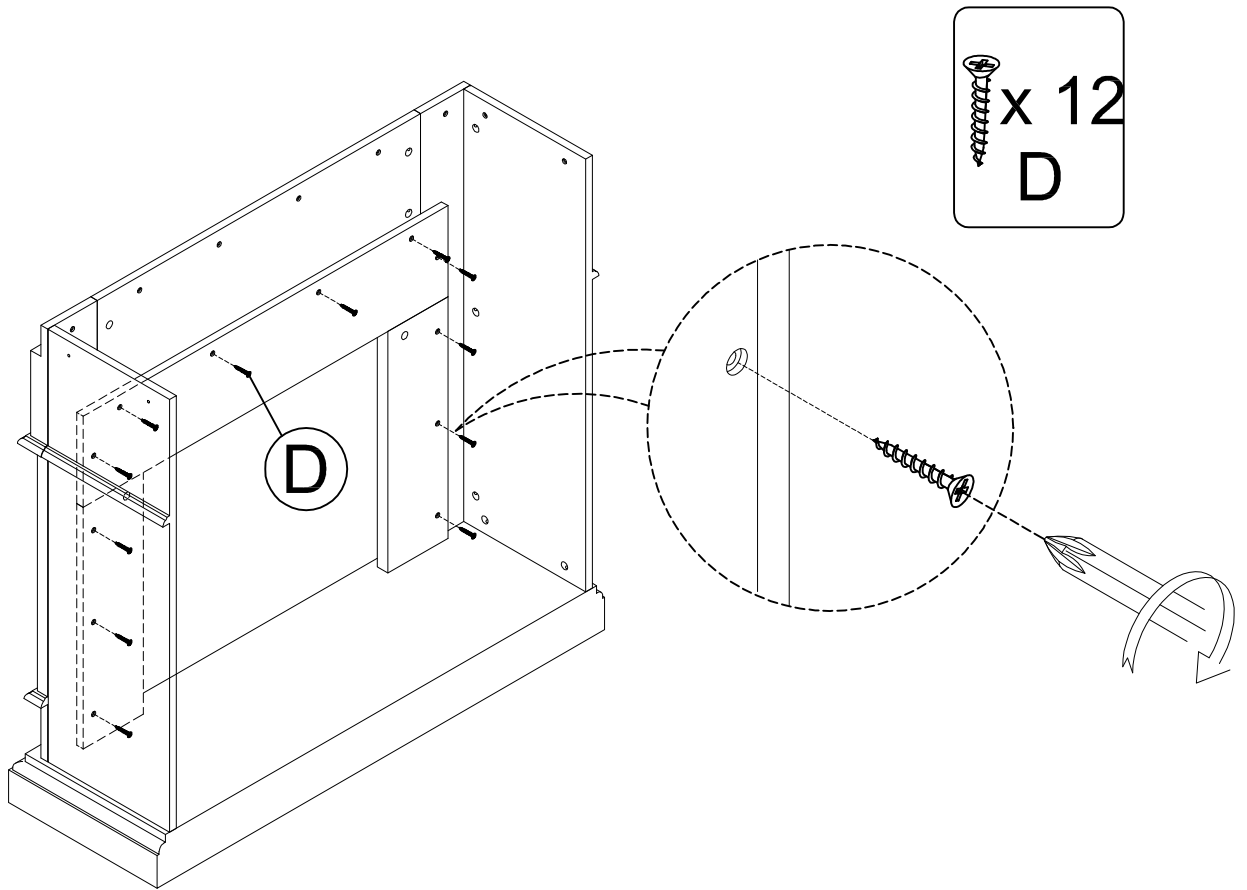


26

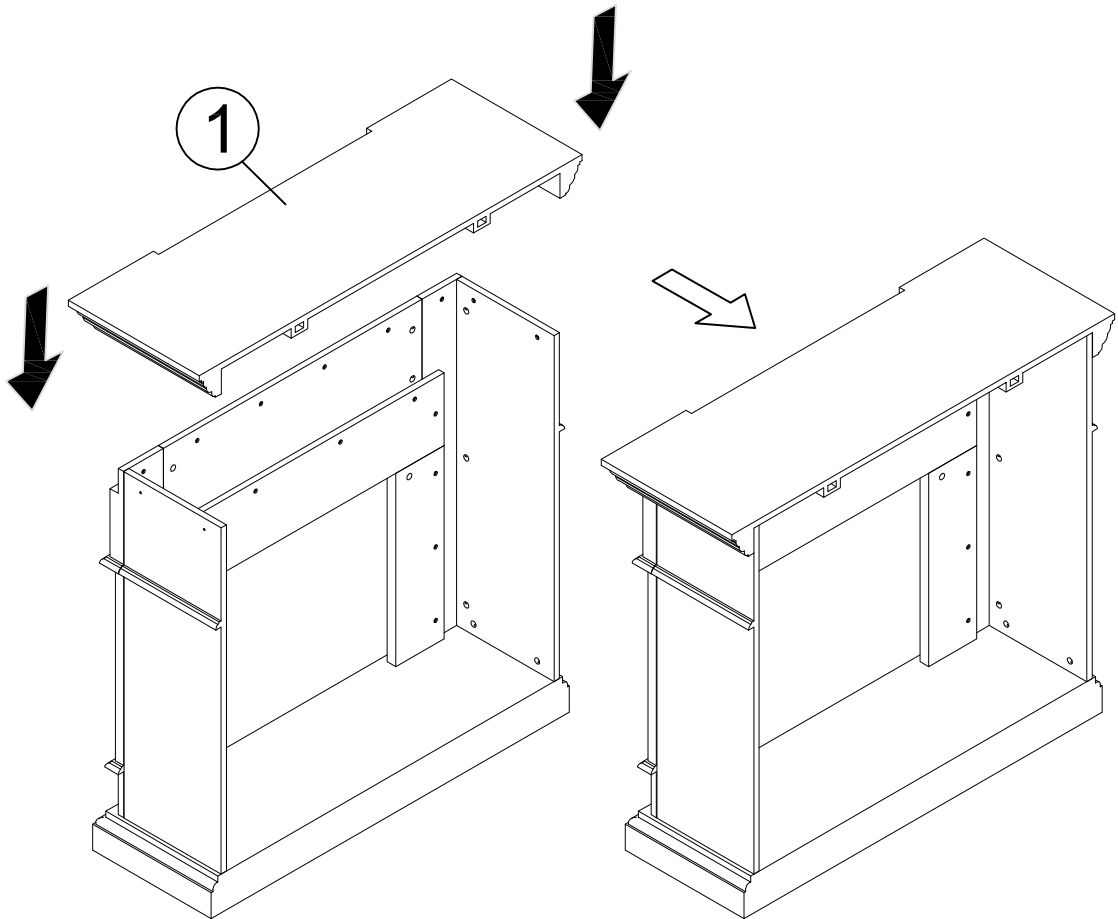


27

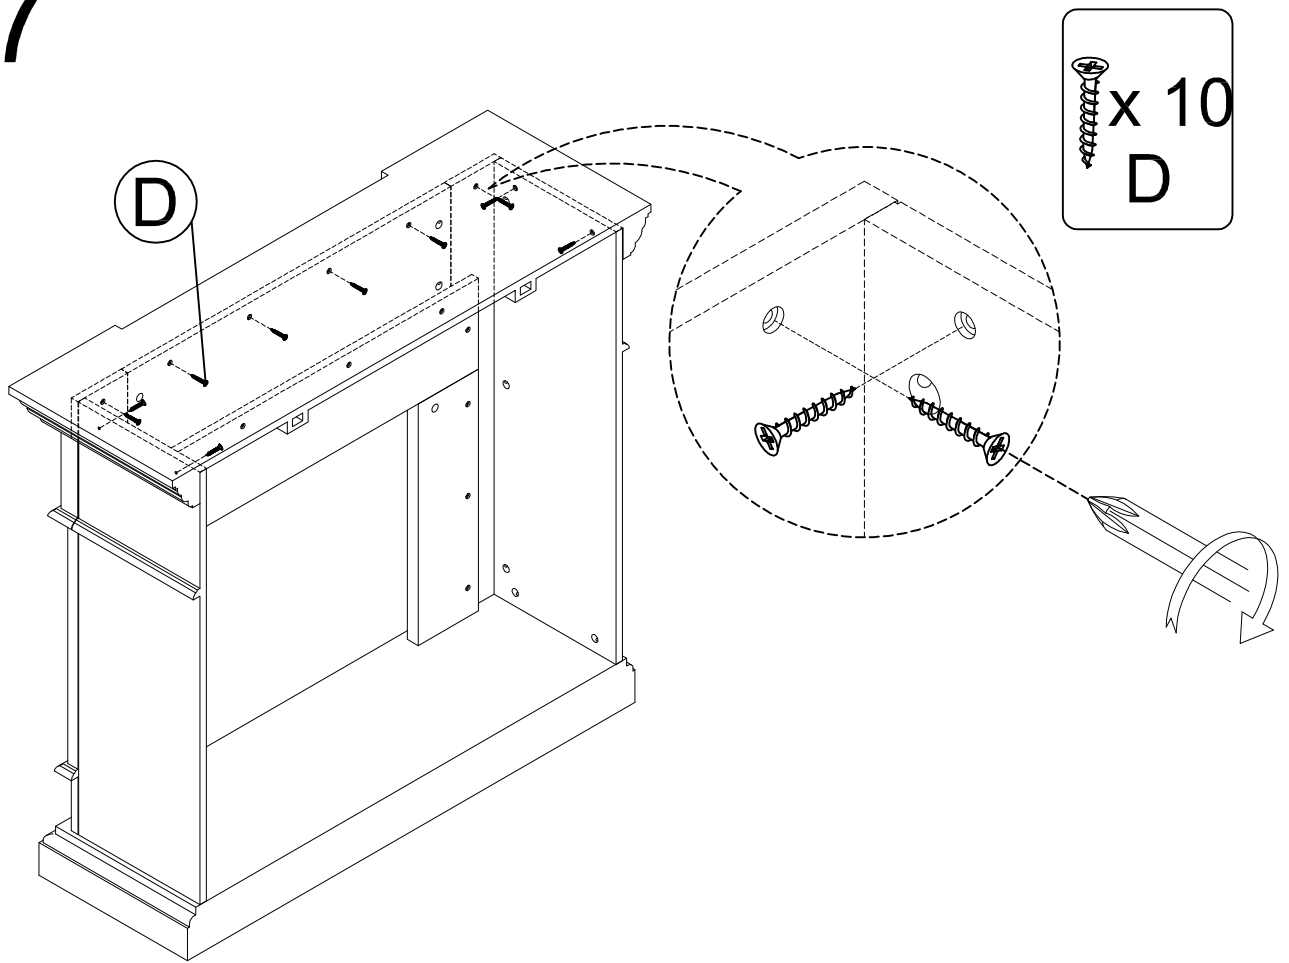


28

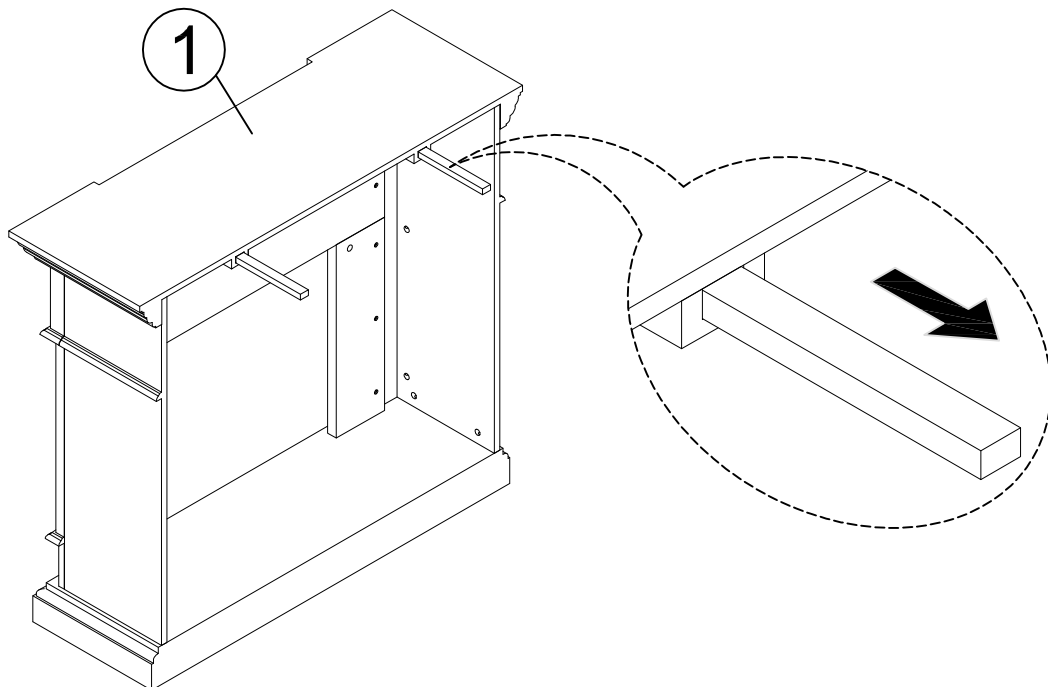


29

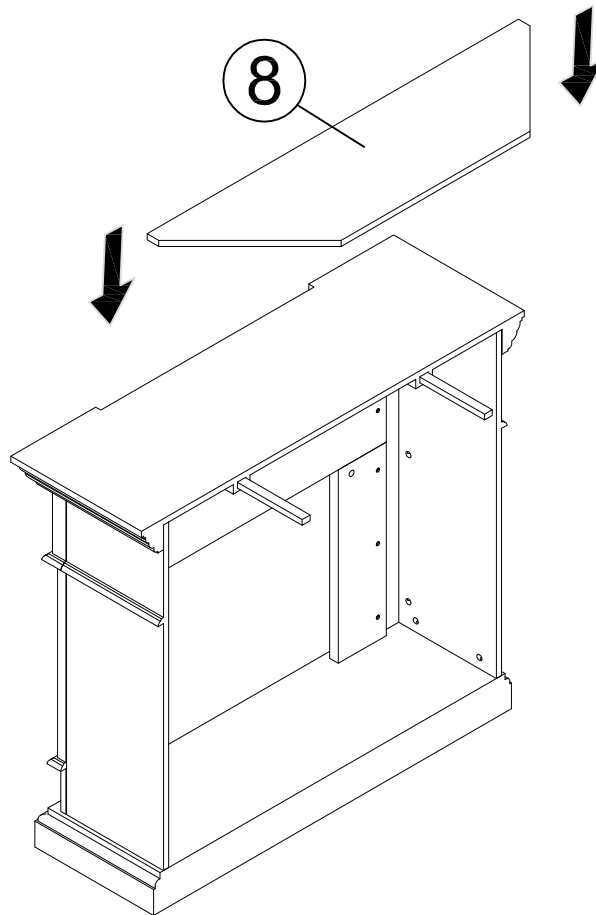


30

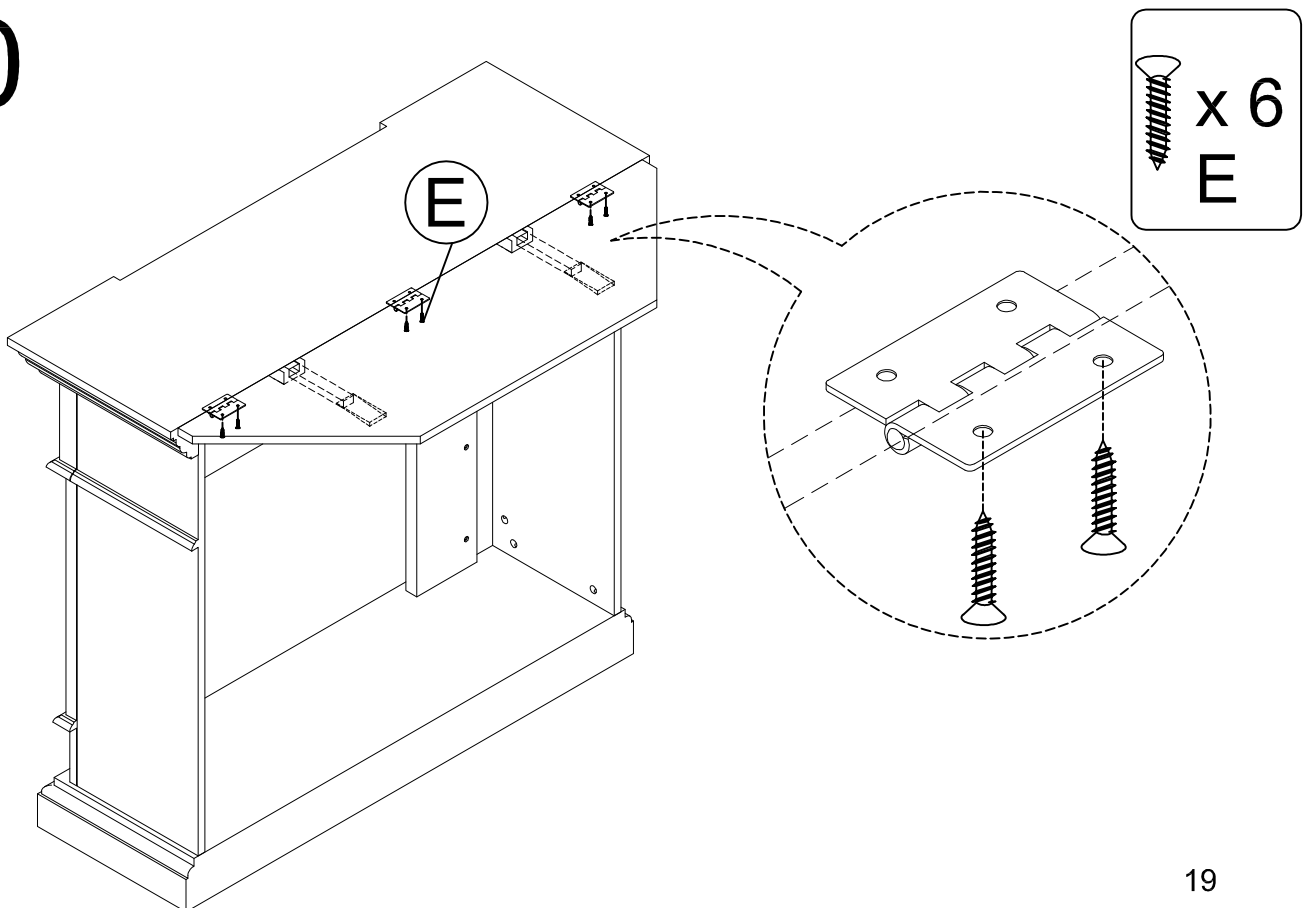

31

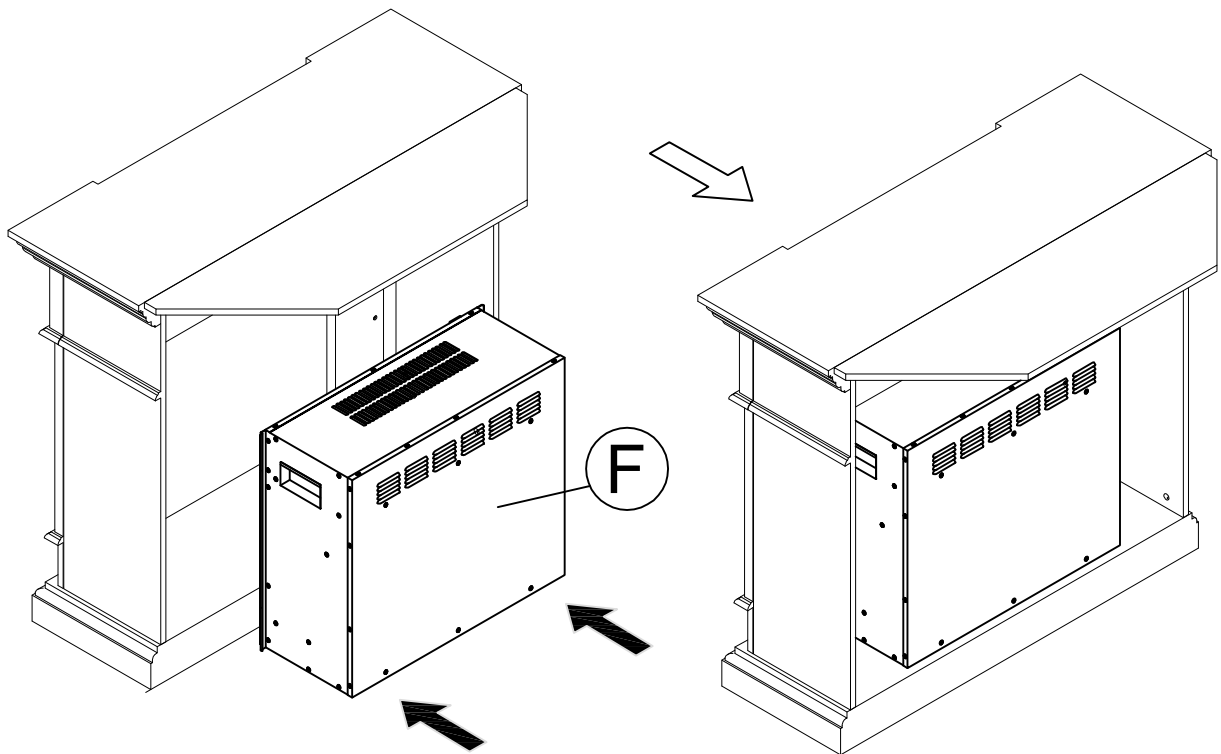

32

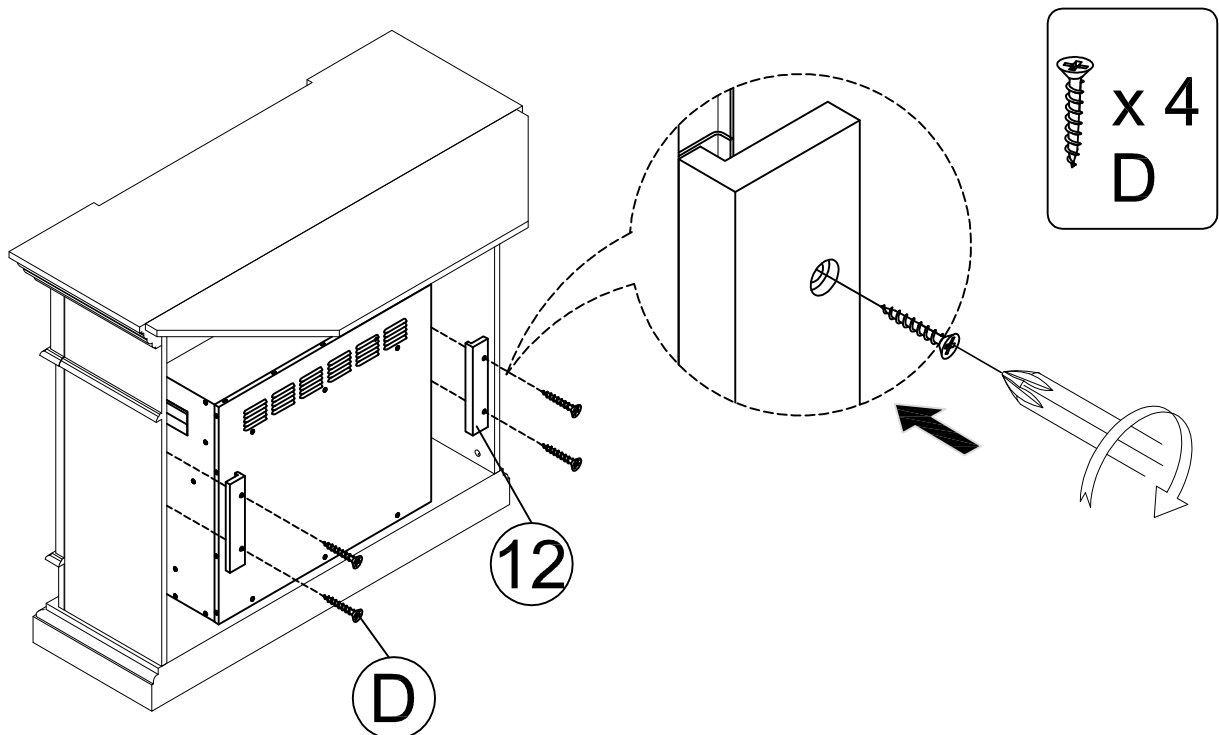

33

