


WINDOW CURTAIN MEASURING GUIDE

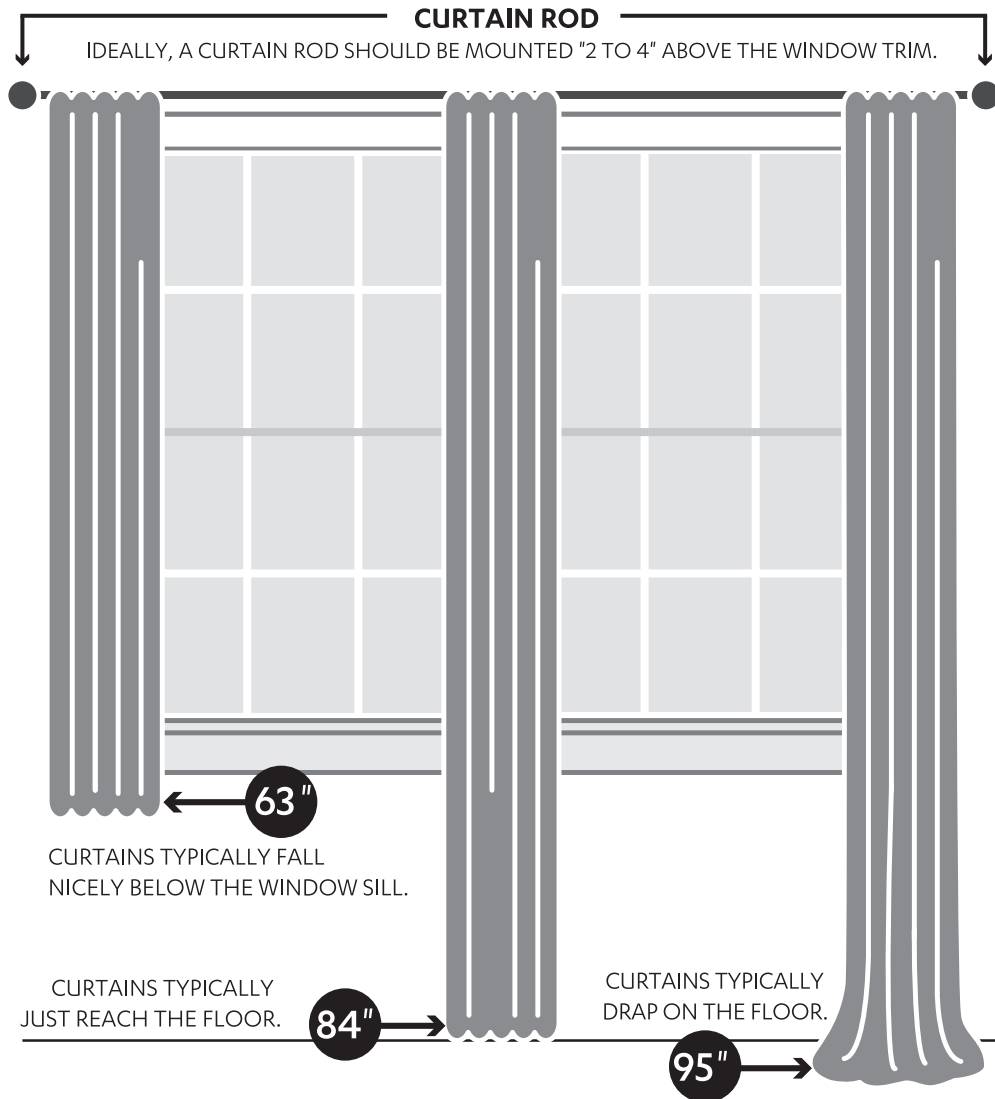

FOR PROPER FULLNESS, FABRIC SHOULD MEASURE APPROXIMATELY 2 ~ 3 TIMES THE WIDTH OF YOUR WINDOW.

PANELS

WINDOW WIDTH	YOU WILL NEED
UP TO 29" WIDE	1 PANEL
30" TO 39"	1 OR 2 PANELS
40" TO 48"	2 PANELS
49" TO 72"	3 PANELS
73" TO 96"	4 PANELS
97" TO 120"	5 PANELS
121" TO 144"	6 PANELS

VALANCES

WINDOW WIDTH	YOU WILL NEED
UP TO 29" WIDE	1 VALANCE
30" TO 39"	1 OR 2 VALANCES
40" TO 48"	2 VALANCES
49" TO 72"	3 VALANCES
73" TO 96"	4 VALANCES
97" TO 120"	5 VALANCES
121" TO 144"	6 VALANCES