



YARD-MAN<sup>TM</sup>

# CLEAN OUT TOOL

Part # / Parte #  
931-2643 / 731-2643

- The Safe And Easy Way To Clean Snow And Ice From Snow Thrower Discharge Chutes

## HERRAMIENTA PARA LIMPIEZA

- La manera mas segura y facil de limpiar la nieve y el hielo de los tubos descargadores del barredoras de nieve

YARD MACHINES<sup>TM</sup>


HUSKIE

BOLEAG<sup>TM</sup>



MTD, LLC  
P.O. Box 368022  
Cleveland, OH 44136  
Made in U.S.A

NOTA: VER LAS INSTRUCCIONES DE MONTAJE AL REVERSO.

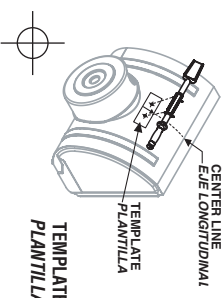

CENTER LINE  
EJE LONGITUDINAL



**CAUTION:** Never use your hand to clear a clogged discharge chute. Shut off the engine and remain behind handles until all moving parts have stopped before unclogging.

### Mounting Instructions (Blower Housing):

1. Measure the width of the housing and locate the center.
2. Line up the center of the housing with the centerline shown on the template.
3. Use a center punch to mark the location of the mounting holes.
4. Drill two 1/8-inch pilot holes at the center of the punch locations.
5. Drill two 1/32-inch holes at the pilot hole locations. **NOTE:** Remove any burrs from drilled holes.
6. Install mounting bracket into holes and cut the wrap. **NOTE:** Make sure snaps are firmly snapped in place.




## HERRAMIENTA PARA LIMPIEZA

### ⚠ PRECAUCIÓN:

Nunca usar las manos para desatascar un tubo descargador atorado. Antes de desatascar, apagar el motor y situarse detrás de los manillares hasta que todas las piezas en movimiento se hayan detenido.

### Instrucciones para el montaje (Caja del barredoras):

1. Medir el ancho de la caja y ubicar el centro.
2. Alinear el centro de la caja con el eje longitudinal ilustrado en la plantilla.
3. Marcar la posición de los agujeros de montaje con un punzón.
4. Taladrar dos orificios guía de 1/6 pulgada en el centro de los puntos marcados con el punzón.
5. Taladrar dos orificios de 11/32 pulgadas en las posiciones de los orificios guía. **NOTA:** Quitar las rebabas de los taladros.
6. Instalar la escuadra de montaje en los orificios y cortar la amarra. **NOTA:** Asegurarse que las bandas está firmemente encajadas en su lugar.

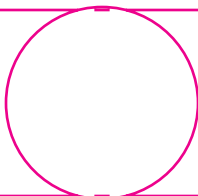

**⚠ CAUTION:** Never use your hand to clear a clogged discharge chute. Shut off the engine and remain behind handles until all moving parts have stopped before unclogging.

### Mounting Instructions (Blower Housing):

1. Measure the width of the housing and locate the center.
2. Line up the center of the housing with the centerline shown on the template.
3. Use a center punch to mark the location of the mounting holes.
4. Drill two 1/8-inch pilot holes at the center of the punch locations.
5. Drill two 11/32-inch holes at the pilot hole locations. **NOTE:** Remove any burrs from drilled holes.
6. Install mounting bracket into holes and cut tie wrap. **NOTE:** Make sure snaps are firmly snapped in place.

