


How to Install envirotile™ Over an Existing Hard Surface

- For best results, ensure the floor surface you wish to cover is level and clear of debris.
- You may lay envirotile™ either from one side of your space toward the other, or you may start by centering the tiles within the space.

- Upon reaching the edges, you may need to cut the tiles to fit within the desired space.

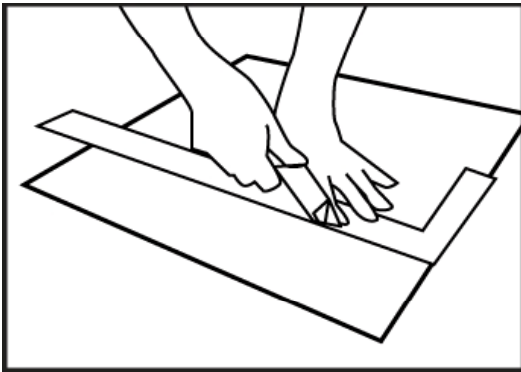

1. To cut the tile: simply use a heavy duty utility knife or jigsaw.
2. To fit tiles around irregular shapes (i.e. pipe): make a pattern from cardboard or heavy paper. Trace the pattern onto the tile and then cut with the utility knife.
3. Rubber expands and contracts with the hot and cold weather; we recommend maintaining a ½ inch gap around your project.

- If you wish to secure your tiles in place, choose one of the following:

1. Use the patented envirotile™ Connector Clips (SKU 658778), instructions below.
2. Use silicone rubber adhesive to seal the tiles to flooring surface -- ensure you follow the manufacturer's directions.

How to Install envirotile™ Connector Clips: Easy as 1-2-3!



1. Insert clip

Place clips into the slots on backside of tiles



2. Join tiles

Align adjacent tile over the clips



3. Tap together

Press tiles downward with the palm of your hand to secure the clips in place