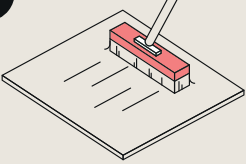
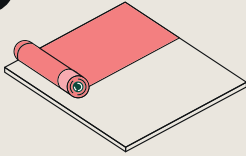
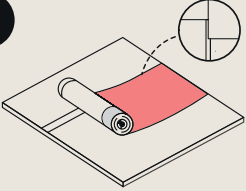
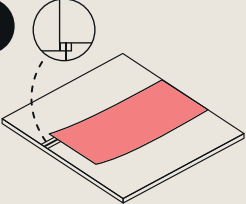
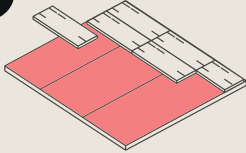


<p>1</p> 	<p>1. Make sure the subfloor is structurally sound, level and is free of dust and debris.</p> <p>2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed the floor covering manufacturer's specifications.</p>
<p>2</p> 	<p>1. Start in a corner with the tape strip side next to the wall and the overlapping film toward the open room.</p> <p>2. Install <b>floorMuffler® UltraSeal</b> (film side down) parallel to the wall in the opposite direction that you plan to install the flooring planks.</p> <p>3. When installing the <b>floorMuffler® UltraSeal</b>, leave at least 2" going up the wall.</p>
<p>3</p> 	<p>1. Be sure to unfold the film, extending it 3" from the foam.</p> <p>2. Roll out the next roll of <b>floorMuffler® UltraSeal</b> in the same manner, making sure that the foam seams are butted together.</p> <p>3. Be sure to overlap only the moisture barrier lip and not the foam pad.</p>
<p>4</p> 	<p>1. <b>Remove the adhesive liner</b> and adhere the foam to the film overlap</p>
<p>5</p> 	<p>1. <b>Install the flooring</b> per manufacturer's instructions.</p>

For glue down installations, always follow the adhesive manufacturer's instructions. Make sure to use a floorMuffler approved adhesive. The list of approved adhesives can be found on each product page on the floorMuffler website.