

# INSTALLATION INSTRUCTIONS



For more information contact...

## WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115


To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)

A Division of WCM Industries, Inc.

# THERMALINE®

Rev 02/12 Form No. IITL.104

SEE INSTALLATION INSTRUCTIONS LOCATED UNDER ORANGE COVER ON UNIT

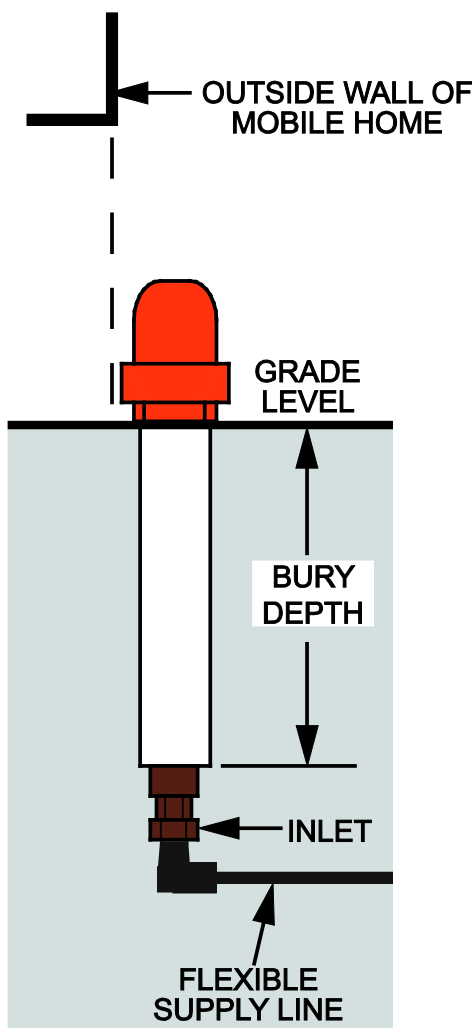

**WARNING:** Install THERMALINE beside rather than under mobile home to facilitate service of unit.

1. Carefully remove the Heater Assembly, taped to the side of the unit, and set aside.
2. Install THERMALINE so that outlet is 4 inches above grade or to the specifications of the local plumbing code and so that the valve body is below all danger of frost.
3. Flush gravel, debris, etc. out of the supply line before connecting hydrant.
4. To protect the hydrant supply connection from ground heaving or settling, connect the THERMALINE to water supply pipe with brass fittings and a flexible supply line.
5. Remove the orange Cover assembly.
6. Plumb to  $\frac{3}{4}$ " N.P.T. outlet.
7. Remove plastic cap to expose Thumb Nut. Insert the Heater Assembly through the Heater Well Thumb Nut located on top of the round handle. Push the rubber Heater Cover down over the Thumb Nut.
8. After installation, check all connections for leaks.
9. Replace the orange cover assembly.
10. Plug power cord into a grounded 110-120v electric outlet.
11. Follow winterizing instructions when unit is not electrically heated or unit may freeze and burst.

*NOTE: Using the THERMALINE for an electrical ground is a violation of the NATIONAL ELECTRICAL CODE.*