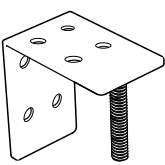

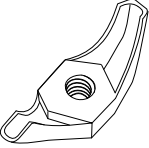
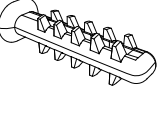



BAMBOO ROMAN SHADE INSTALLATION INSTRUCTIONS

Hardware Contents:


A	B	C	D	E
				
(2) Mounting Bracket	(8) Screws	(2) Washers	(2) Wing Nuts	(8) Anchors

What You Will Need:



- Drill
- Pencil
- Step Ladder
- Tape Measure
- Small Level
- Light Weight Hammer
- Screwdriver

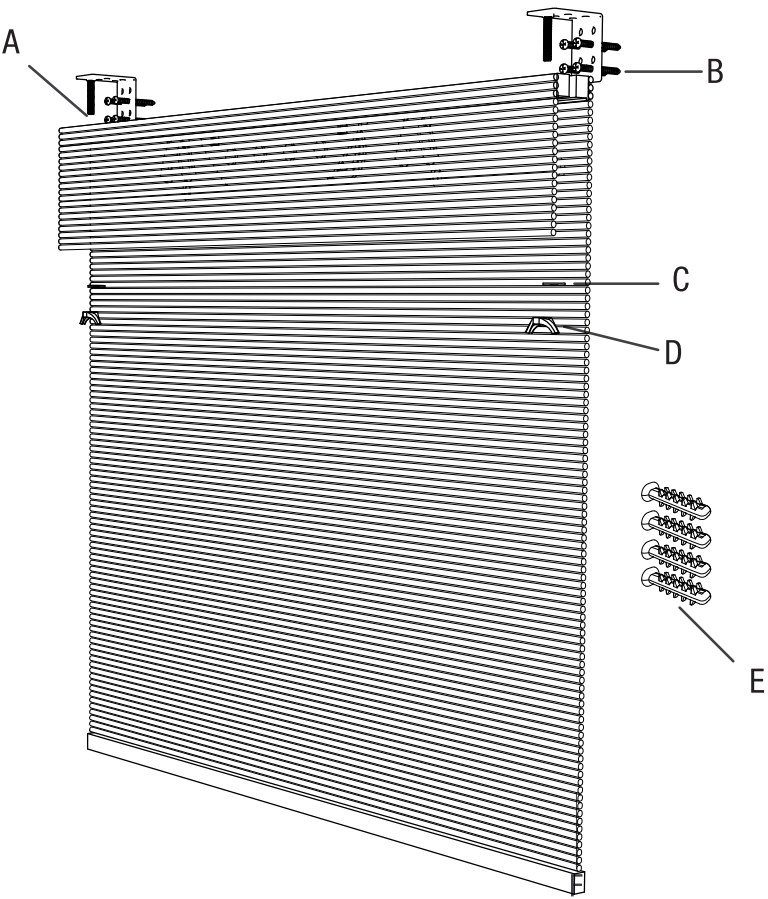



Step 1: Measure bracket placement/mounting location and mark with a pencil.

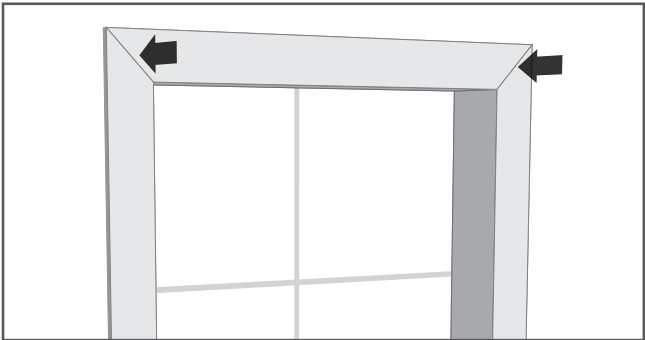


a). Outside
Mounting to the face or the outside of the window frame.

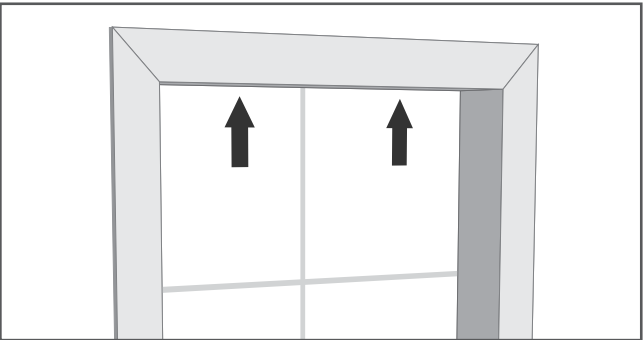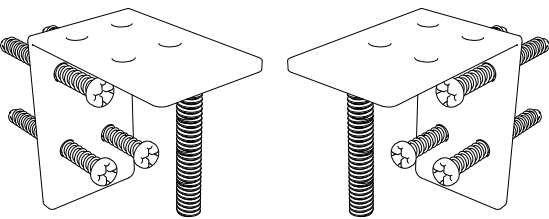


b). Top
Mounting overhead to a surface such as the top inside of the window frame or the ceiling.

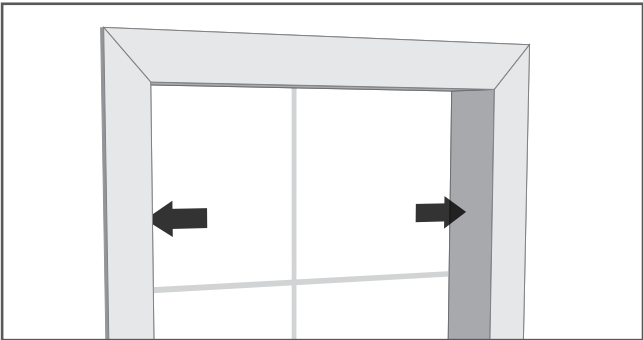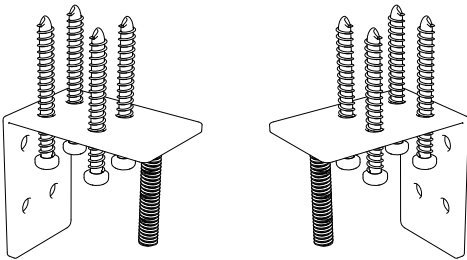


c). Inside
Mounting to the inside or between the sides of the window.

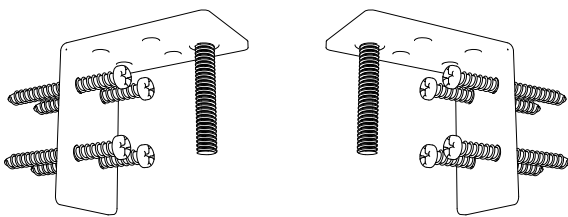


Step 2: Install brackets (use anchors if mounting to drywall)

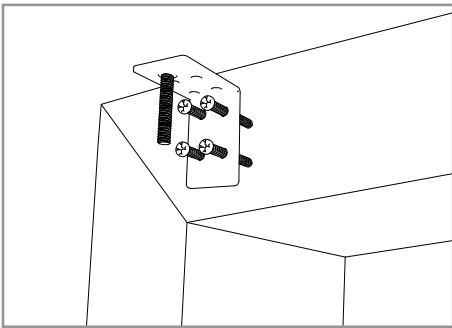


Outside Mounting Bracket (A).

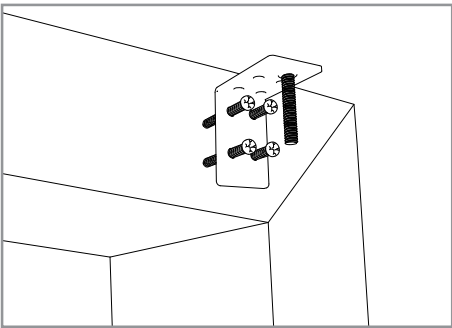


Outside Mounting (B).

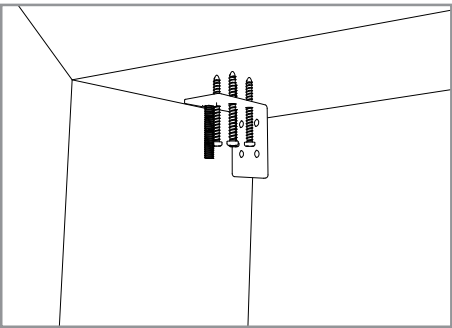


Top Mounting Bracket (A).

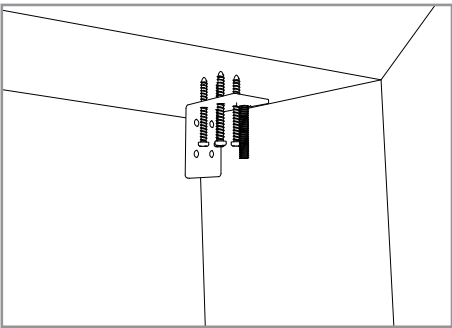

Top Mounting Bracket (B).

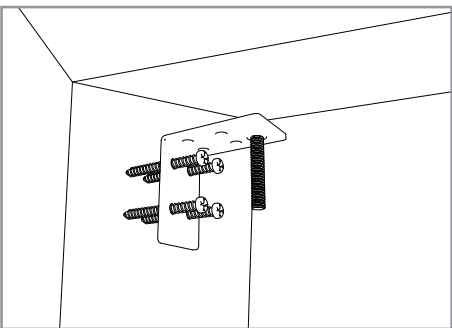

Inside Mounting Bracket (A).

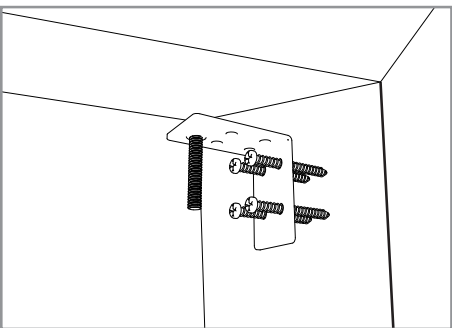


Inside Mounting Bracket (B).


BAMBOO ROMAN SHADE INSTALLATION INSTRUCTIONS

Step 3: Install shades

Line the shade and mounting bracket up.
Connect washer and wing nut to the screw.

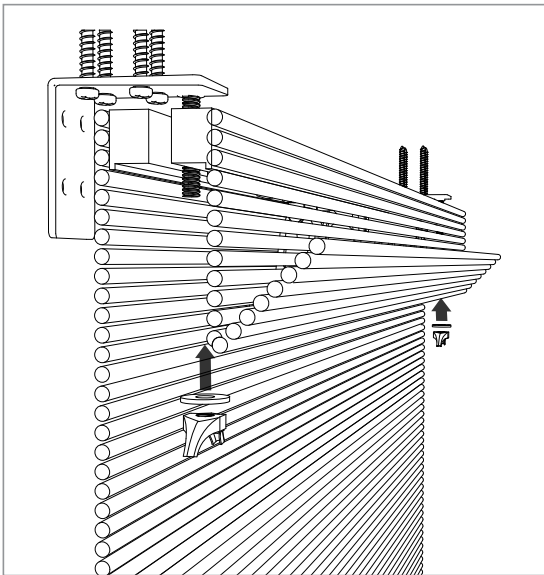


Line the Shades with the Mounting Bracket, and have Washers and Wing Nuts Ready.


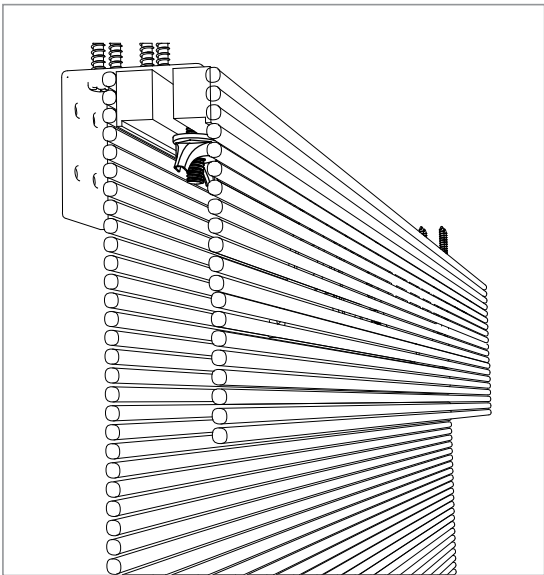


Secure the Shades with the Washers, and Wing Nuts to Finish the Installation.


Step 3 (Part 2): Connecting the headrail to the mounting bracket (A), to washers (C), and wing nuts (D).

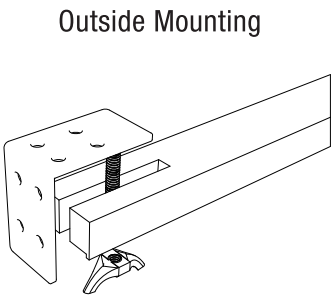

(Left Side Mounting)

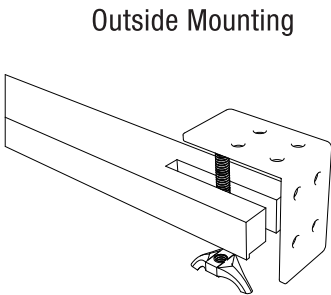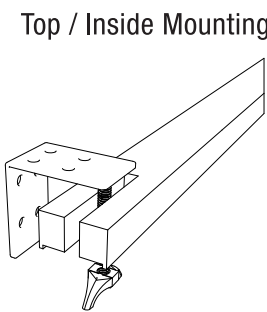


(Right Side Mounting)

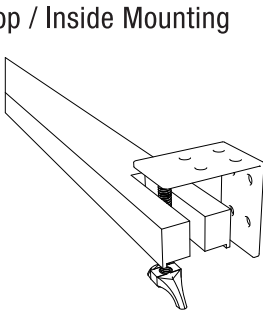

Step 4: Operating Your Shade

To lower and raise
your shade, pull
shade from the center
of the bottom rail.

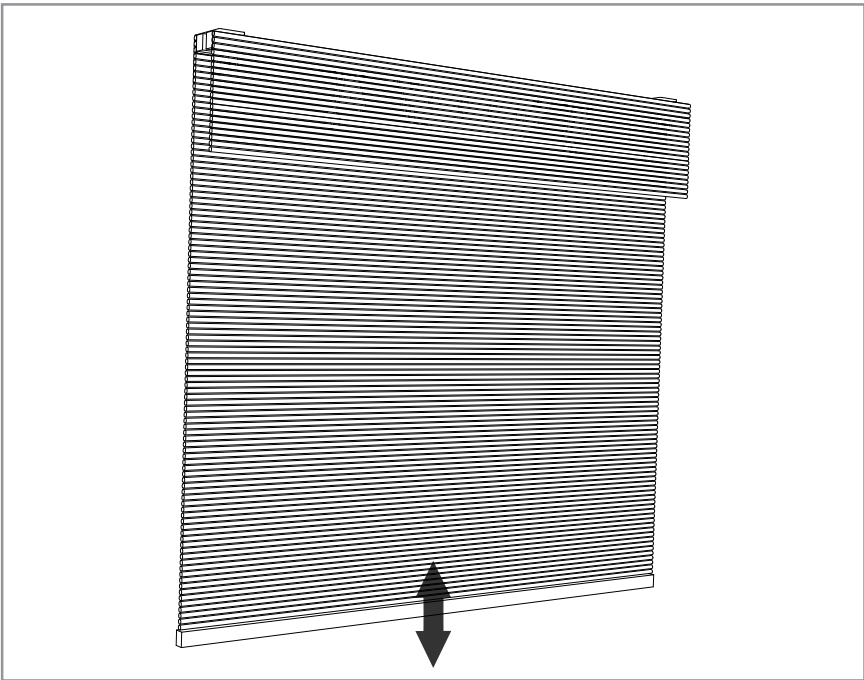

Pull Shade (From Center of the Bottom Rail to Raise and Lower).

Maintaining Your Shade:

Dust your shade with a clean cloth or feather duster.